



Samsung TV & Logitech Camera Tip Sheet Staff

Using the Logitech Camera

- ❖ To use the camera, it must be connected to a laptop or desktop
 - Chromebook: Connect using the USB to USB cable. Connect into the USB port on the Chromebook then connect into the USB wall plate
 - Macbook: First connect dongle, then connect using the USB to USB cable into the USB port on the dongle then connect into the USB wall plate
 - Once the camera is connected start Google Meet or Zoom
 - The camera will not turn on (green light) until it is connected to Google Meet, Zoom, or an application that utilizes a camera
- ❖ Use the Gear icon to change to the camera of choice. It will automatically change when you connect an external camera on Mac or Chromebooks.
 - Chromebook:

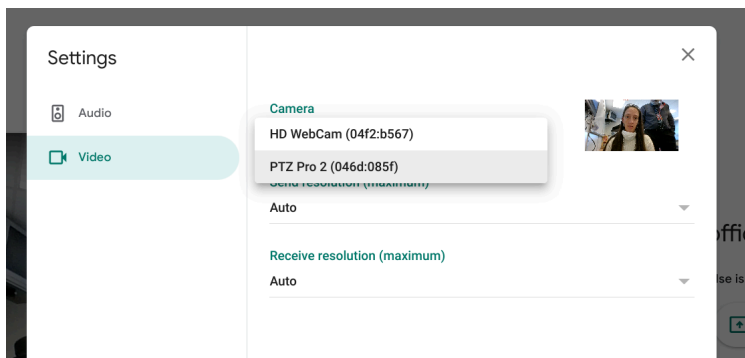

- Macbook:

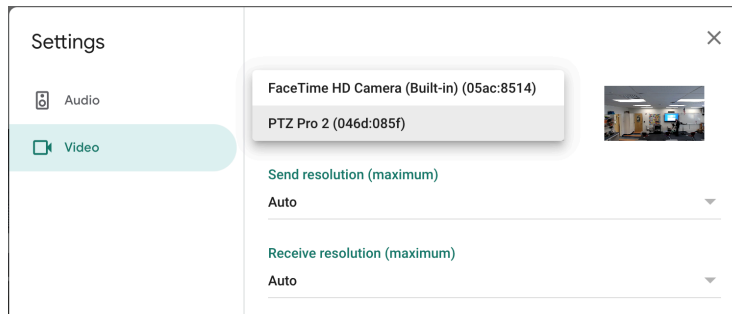

Using the Samsung TV

- ❖ Remote connect to the classroom TV through the wireless network or connect with an HDMI connection and cable if available
 - To connect remotely through the wireless network:
 - Chromebook: choose the More Menu (three dots) in the Top Right
 - Choose Cast
 - Choose the TV name
 - ◆ TV Name includes the room Number or Name
 - ◆ Example: Samsung TV Conference Room or Samsung TV 101 (for room 101)
 - Macbook: choose the Airplay at the top of the screen
 - Choose the TV name
 - ◆ TV Name includes the room Number
 - ◆ Example: Samsung TV Conference Room or Samsung TV 101

Wall plate picture



Macbook Connection Picture



Remote Room Setup



Chromebook Connection Picture

