

Meet Your Control Panel



CLASSROOM TECHNOLOGY

Meet Your Control Panel

In the classrooms, we have replaced the Controllers with the Wall Control Panels.

Turning on the Control Panel

The Panel is designed to sleep after 60 minutes of inactivity. To wake up the panel, you can press any button. Once the device lights up, you need to press the **ON** button to turn on the connection from your computer. The panel should look like this. . .



The projector should come on and start to warm up. The **ON** button will flash **Red** for 40 seconds as it warms up. Then the image on your computer should project on the screen.

Touch Walkthrough

***Important* Do Not Unplug the touch Sensor bar on the dry erase Board!**

The touch system remembers the last made setting. If you wish not to have the touch feature, then simply press the **Touch Off Button**.

Apple TV Connection

If you want to switch to using the **Apple TV**, then you must click on the **Apple TV** button. The **Apple TV** remote should be located on the **Podium**.

Mute and Freeze

These are commonly used features. The **Mute** button will turn off the video and audio connection. The **Freeze** button will allow you to freeze the image on the projection screen.

For the video explanation, click [this link](#)