

FT8 FT991A 10-29-2024

WSJTX , WINLINK, VARA FM, VARA HF

**USE SHIELDED USB CABLE**

SETTINGS

GENERAL

CALL SIGN W9NMM      GRID EM79AQ

DISPLAY DIST IN MILES    TX MESSAGES TO RX WINDOW    SHOW DXCC, GRIS, AND  
WORKED BEFORE

BEHAVIOR    DOUBLE CLICK ON CALL SETS TX ENABLE      DISABLE TX AFTER  
SENDING 73

RADIO YAESU FT-991

COM5384008 1 N PPT CAT      DATA/PKT    FAKE IT

AUDIO      SOUNDCARD      MIKE USB AUDIO CODEC OUTPUT YAESU OUT USB  
AUDIO CODEC

SAVE DIR C:/USERS/NOEL/APPDATA/LOCAL/WSJT-X/SAVE

AZEL DIR C:/USERS/NOEL/APPDATA/LOCAL/WSJT=X

REPORTING PROMPT TO LOG

NET    ENABLE PSK REPORTER SPOTTING      UDP SERVER 127.0.0.1 PORT 2237  
N1MM LOG ER AND BROADCASTS NOT ENABLED

991A SETTINGS

METER ALC    DT GAIN 6

MENU SETTINGS    ALL DEFAULT EXCEPT

29 RS232    38400

30 RS232 TOT      100

31 CAT RATE 38400

32 CAT TOT    100

33 CAT RTS    DISABLE

60 PC KEYING      DAKY

62 DATA MODE    OTHERS

63 PSK TONE      1000

64 OTHER DSP SSB 1500

65 OTHER SHIFT SSB      1500

66 DATA LCUT FREQ      OFF

68 DATA HCUT FREQ      OFF

70 DATA IN SEL      REAR

71 DATA PPT SEL    DAKY IS DEFAULT

72 DATA PORT SELECT    USB  
73 DATA OUT LEVEL       50  
113 CONTOUR WIDTH       11  
147 DATA VOX DELAY      1030

F M-LIST SETTINGS FOR VARA HF  
NAR/WIDE WIDE W 3K

AGC AUTO

MONI OFF

WIDTH 3000

ALL FILTERS OFF

SQL O

VARA HF WINLINK SETTINGS

RADIO FT991A

USB DIGITAL

NAME SOUND DEVICES IN CONTROL PANEL SO YOU KNOW WHAT THEY ARE FOR.

(YAESU IN -YAESU OUT) ONCE YOU SET THEM UP ALWAYS PLUG THEM IN THE  
SAME PHYSICAL PORTS. IF YOU PUT THEM SOMEWHERE ELSE WINDOWS TREATS  
THEM AS A NEW DEVICE. NO LONGER THE SAME PORT NUMBER.

CONTROL PORT # 38400 NO RTS, NO DTR

PPT FT991A 38400

VARA FM SETTINGS NARROW PPT CAT YAESU PORT# 5 FT991 38400

991A SETTINGS FOR VARA FM

MODE DF DATA FM

72 DATA PORT SELECT USB       OR    DATA FOR DRA50 / SIGNALINK

74 FM MIC SELECT REAR

MUST CHANGE BACK TO MIC FOR VOICE

75 FM OUT LEVEL 50-60

76 FM PKT PPT SELECT DAKY

77 FM PKT PORT SELECT USB    OR    DATA DRA50 / SIGNALINK

78 FM PKT TX GAIN 100

79 FM PKT MODE 1200    USB / SL OR    9600 DRA50    USB WILL NOT TX ON 9600  
SIMPLEX 145.030, 145.05 145.09

VARA FM SETTINGS        1/10/21

BAOFENG / SIGNALINK

PC SOUND SETTING 100/100

DIAL TX 2-3 RX 3-4  
RADIO VOL AT 9 O CLOCK  
MENU 35 STE OFF WAS ON  
36 RP-STE OFF WAS 5  
10 RDCS OFF 0  
11DCTCS OFF 0  
12 TDCS OFF 0  
13 T CTCS OFF 0

#### PEER TO PEER

CREATE A NEW MESSAGE AND BE SURE TO SET IT TO PEER-TO-PEER MESSAGE.  
USE THE CALL SIGN OF THE STATION YOU ARE SENDING ONLY. YOU CAN NOT SEND  
TO MULTIPLE STATIONS AS 1 MESSAGE

OPEN THE SESSION AND SWITCH IT TO PEER-TO-PEER.  
KEEP THE SESSION OPEN. IF A MESSAGE IS COMING IN YOUR SIDE OF THE SYSTEM  
WILL HANDLE THE INCOMING MESSAGE. IF YOU ARE GOING TO SEND YOUR  
MESSAGE PRESS "START" AND YOU WILL START TRANSMITTING YOUR MESSAGE.  
NOTE THAT MULTIPLE RECIPIENTS ARE NOT ALLOWED.  
THIS WHOLE THING WORKS AS SIMPLEX OR CAN BE ROUTED THROUGH A  
DIGIPEATER FOR MORE RANGE

NOEL MORTIER  
W9NMM