1	3	4	5	11
Cat	EDONT WILEEL	PM	OEM	£
1	FRONT WHEEL	Part no.		retail
pic				
ref.				
1	Hub cover – stainless, for f.w.h. 8" brake IMPORTED, UK	PMN035(8C)	42-5844	17.50
	below			
1	Hub cover – chrome for f.w.h. 8" brake, UK	PMN035/8CUK	42-5844	26.50
1	Hub cover – chrome for f.w.h. 7" brake	PMN035(7)	42-5843	15.50
2	Circlip, front FWH bearing	PMN228	42-5821	2.90
3	Dust cover, front FWH	PMN229	42-5820	2.00
	Spoke and nipple set (40), stainless steel, A7/A10/A50/A65	PMN049/7F	42-5811	49.00
4,6	7"FWH – front &/or rear depending on model		1	
4,6	Spoke and nipple set (40) , stainless steel, A7/A10/A50/A65 8"FWH – front wheel	PMN048/S8F	42-5848	49.00
5	Rim, wheel, 19", FWH front / rear, stainless. (Fits 7" and 8" hubs)	PMN048/RF	42-5810	58.00
7	Hub / drum		†	
8,	Brake shoes	+	+	
9,	Diake Silves			
25,			1	
26				
10	Spindle, front wheel, FWH		42-5824	29.50
11	Pivot pin, front FWH, (incs cable locating slot, i.e. adjuster on	PMN224	42-5885	7.50
	handlebar)			
11	Pivot pin, early front FWH, (incs threaded cable adjuster slot)	PMN224T	42-5863	7.90
12	Collar, distance, front FWH	PMN223	42-5822	1.40
13	Bearing, wheel, Full width cast iron hub	PMN237	37-0653	5.40
	Rear hub has one fitted,		06-5541	
	Front hub has two fitted.		42-5819	
14	Lock ring / bearing retainer, left hand thread, front FWH	PMN230	42-5823	18.50
15	Brake plate			
16	Nut, spindle / brake plate		42-5842	3.50
			37-1246	
17	Washer		03-1049	
18	Nut for pivot pin (42-5885), supplied in stainless steel		42-5864	3.80
18	Nut for pivot pin (42-5885), supplied in BZP		42-5864	2.80
19	Nut 3/8 CEI		02-0449	
20	Washer, 3/8		24-5914	
21	Clevis pin 1/4 x 7/16		42-5836	0.70
			37-2006	
22	Split pin		35-0701	0.10
23	Lever, actuating, front brake, FWH	PMN200	42-5886	10.80
			42-5854	
24	Brake operating cam		42-5830	
25	See 8,9		1	
26	See 8,9		1	
27	Spring, brake shoe pull off, fwh, 7" and 8", front and rear (1958), pr.		42-5841	2.90
27	Spring, brake shoe pull off, 7", 1959 on. Pr.		65-5904	5.80
l			37-2328	

1	3	4	5	11
Cat /	REAR WHEEL	PM	OEM	£
pic ref.	REAR WHEEL	Part no.		retail
1	Nut, rear wheel spindle, A10, 58- (see also 25B below)	PMN112	42-6077	6.00
1	Nut, rear wheel spindle, A10, 58- Strainless (see also 25B below)			6.50
2	Washer, for dummy spindle, A10, 58-	PMN110	42-6078	1.50
3	Spacer, fits on dummy spindle on rear FWH sprocket	PMN226	42-6324	10.50
4	Sprocket, rear wheel, post '58 models 42T		42-6333 42-6331	99.00
4	Sprocket, rear wheel, Ariel hub		42-6069	108.00
5	Chain, rear, see chains page			

6				
	Bearing, wheel, rear, inside sprocket, FWH	PMN236	89-3022	7.90
_	Also for Ariel hubs			+
7	Grease retainer, rear, FWH, sprocket bearing	PMN221	42-6105	4.90
8	Dummy spindle, rear, f.w.h	PMN280	42-6325	25.00
_	(see also 25B below)			
9	Dust cover/cap, rear hub FWH	PMN227	42-6328	5.40
10	Rim, wheel, 19", FWH front / rear, stainless. (Fits 7" and 8"	PMN048/RF	42-5810	57.50
	hubs)			
11	Rear hub / drum		42-6313	
12, 14,	Rear brake shoes			
41				
13	Spring, brake shoe pull off, fwh, front and rear (1958) pr.		42-5841	5.80
13	Spring, brake shoe pull off, 7", rear, 1959 on. Pr.		65-5904	5.80
14	See 12			
15	Collar, sleeve, abutment ring, centralising, rear FWH	PMN222	42-6329	9.80
16	Sleeve, distance piece		42-6323	
17	Bearing, wheel, Full width cast iron hub	PMN237	37-0653	5.40
	Rear hub has one fitted (see also 89-3022)	1 11111207	06-5541	0.40
	Front hub has two fitted.		42-5819	
18	Lock ring / bearing retainer, left hand thread, rear FWH	PMN231	42-6335	8.70
19	Rear brake plate, 1958, with cast on cable lug	1 19114231	72-0330	0.70
		1	40 5000	E 70
20	Rear brake fulcrum pin, 1958-60	ļ	42-5828	5.70
20	Rear brake fulcrum pin, 1960		42-6352	7.30
21	Washer stainless 3/8	ļ	02-2138	0.70
22	Dome nut, stainless		40-0162	
23	Spacer, rear wheel spindle, f.w.h.	PMN284	42-6330	4.50
	(see also 25B below)			
24	Washer, for rear wheel spindle, A10, 58-	PMN111	42-6336	2.50
25	Spindle, rear wheel, A10, 1958-	PMN108	42-6320	29.50
_	(see also 25B below)			
25B	Spindle set in stainless steel		42-6320	59.50
			42-6330	55.55
			42-6077	
			42-6325	
26	Bolt		03-0855	9.80
-0	Supplied 3" in stainless (Can be trimmed to 2 3/4")		03-0033	3.00
27	Split pin		35-0705	_
				_
28	Washer, shakeproof		66-4708	0.00
29	Washer, plain 7/16"		15-0431	0.20
			24-5860	
30	Half nut, 7/16" x 20 tpi BZP, anchor strap mount on		24-3000	2.10
	swinging arm			
	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor		15-0541	2.10
31	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate			2.50
31	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor			
31 30/31	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate			2.50
31 30/31 30/31	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless			2.50
30 31 30/31 30/31 32 33	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer		15-0541	2.50 2.50 1.70
31 30/31 30/31 32	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable		15-0541	2.50
31 30/31 30/31 32	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate.		15-0541	2.50 2.50 1.70
31 30/31 30/31 32 33	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres.		15-0541 15-0716 42-6084	2.50 2.50 1.70 10.20
30/31 30/31 32 33	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable		15-0541	2.50 2.50 1.70
30/31 30/31 30/31 32	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm		15-0541 15-0716 42-6084	2.50 2.50 1.70 10.20
31 30/31 30/31 32 33	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres		15-0541 15-0716 42-6084 42-6354	2.50 2.50 1.70 10.20
31 30/31 30/31 32 33 33A	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16		15-0541 15-0716 42-6084 42-6354 42-5836	2.50 2.50 1.70 10.20
31 30/31 30/31 32 33 33 34	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin		15-0541 15-0716 42-6084 42-6354 42-5836 35-0701	2.50 2.50 1.70 10.20
31 30/31 30/31 32 33 33 33A	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI		15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449	2.50 2.50 1.70 10.20
31 30/31 30/31 32 33 33 33A 34 35 36 37	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8		15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33A 34 35 36 37	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ¼ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with	PMN201	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449	2.50 2.50 1.70 10.20
31 30/31 30/31 32 33 33 33A 34 35 36 37	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ¼ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel	PMN201	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33A 34 35 36 37 38	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle	PMN201	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with	PMN201 PMN202	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33A 34 35 36 37 38	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle		15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33A 34 35 36 37 38	swinging arm Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable		15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33A 34 35 36 37 38	Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable passing under rear wheel spindle/		15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317 42-6353	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33 34 35 36 37 38	Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable passing under rear wheel spindle/ Brake operating cam	PMN202	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317 42-6353	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33 33A 34 35 36 37 38 38 38 40 UK	Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable passing under rear wheel spindle/ Brake operating cam Bolt, sprocket retaining, post 58 FWH models. UK made	PMN202 PMN251U	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317 42-6353 42-6353	2.50 2.50 1.70 10.20 6.60 10.00
31 30/31 30/31 32 33 33 33A 34 35 36 37 38 38 38 40 39	Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable passing under rear wheel spindle/ Brake operating cam	PMN202	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317 42-6353	2.50 2.50 1.70 10.20 6.60
31 30/31 30/31 32 33 33A 34 35 36 37 38 38 4 39 40 UK	Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable passing under rear wheel spindle/ Brake operating cam Bolt, sprocket retaining, post 58 FWH models. UK made Bolt, sprocket retaining, post 58 FWH models. Imported	PMN202 PMN251U	15-0541 15-0716 42-6084 42-6354 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317 42-6326 42-6326 42-6326	2.50 2.50 1.70 10.20 6.60 10.00 10.00
31 30/31 30/31 32 33 33 33 33 34 35 36 37 38	Half nut, 7/16" x 20 tpi BZP domed, open head, anchor strap mount on brake plate 7/16 UNF full, slim, nut supplied in stainless 7/16 thin nut Spring washer Torque arm / brake anchor, 1958/9, fwh, for hubs with cable adjuster cast into brake plate. 170mm between centres. Torque arm / brake anchor, 59-62, fwh, for hubs with cable adjuster as part of torque arm mounting stud. 147mm between centres Clevis pin ½ x 7/16 Split pin Nut 3/8 CEI Washer, 3/8 Lever, actuating, rear brake, fwh cast iron, for hubs with cast brake adjuster lug and cable passing over rear wheel spindle Lever, actuating, rear brake, fwh cast iron, for hubs with brake adjuster lug doubling as torque arm bolt and cable passing under rear wheel spindle/ Brake operating cam Bolt, sprocket retaining, post 58 FWH models. UK made	PMN202 PMN251U	15-0541 15-0716 42-6084 42-6354 42-5836 35-0701 02-0449 24-5914 42-6317 42-6353 42-6353	2.50 2.50 1.70 10.20 6.60 10.00

43	Spoke and nipple set (40), stainless steel, A7/A10/A50/A65 7"FWH – front &/or rear depending on model	PMN049/7F	42-5811	48.90
44	Nut, sprocket retaining, post 58 models	PMN250UK	42-6327	7.10
44b	Nut, sprocket retaining, post 58 models. A bit tight on the socket, otherwise V good.	PMN250IMP	42-6327	2.50
Not shown	Sleeve for ariel hub spindle		42-5606	9.20