

INSTRUCTION MANUAL



Model No: HHK-381107CLF

Please read this manual carefully before use and keep this manual for future reference.
This product is household use only.

Safety Precautions:

Before using this product, please read this manual carefully and follow the instructions:

1. Before use, please confirm whether the voltage used is consistent with the rated voltage on the nameplate.

2. If the power cord, plug, appliance is damaged, or malfunctioning in any way, do not use the appliance. Please take it to the nearest authorized service center for testing, repair, replacement, and adjustment. Do not attempt to replace it yourself to avoid electric shock.
 3. Do not leave the appliance unattended during operation.
 4. Do not allow children to use this appliance. Always supervise when children are nearby.
 5. Do not place the toaster oven in water or other liquids to avoid electric shock.
 6. Do not use the oven for any purpose other than intended.
 7. Unplug the appliance before it is not in use or before cleaning.
 8. When removing the baking tray from the hot oven, please use specialized gloves.
 10. Do not let the power cord hang over the edge of a table or place it on hot surfaces.
 11. Since the outer surface of the oven is hot during operation, avoid touching any outer surfaces to prevent burns. Only use knobs, handles, etc.
 12. Do not place the oven near electric stoves, gas stoves, or other ovens to prevent fires.
 13. To prevent fires, do not place the oven near combustible or flammable materials such as curtains during operation, and do not place anything above the oven.
 14. Before baking food, ensure that all paper, cardboard, or plastic has been removed.
 15. Do not cover the top of the oven with aluminum foil to avoid overheating.
 16. Do not place oversized food in the oven as it may cause fires or electric shocks.
 17. Do not use the oven for storage when not in use, especially paper, cardboard, or plastic.
 18. When closing the oven, ensure that all knobs are in the closed position.
 19. This appliance cannot be operated with additional timers or other remote control systems.
 20. Applicable for household and similar purposes, for example:
 - Employee kitchens used in shops, offices, and other work environments.
 - Farms.
 - Inns, motels, and other residential environments.
 - Bed and breakfast accommodations.
- Keep this instruction manual for future reference.

NAME OF PARTS:

****Note:****

- 1. During the initial use, the oven may emit a slight odor or smoke, which is caused by a protective film applied to the heating tube. This is normal. It is recommended to preheat the oven for about 15 minutes to remove the odor. When using for the first time, please open doors and windows to ensure indoor ventilation.
- 2. Maintain a distance of at least 3 cm between food and the upper heating tube for even heating.
- 3. The baking tray and grill rack are inserted above the oven's catch tray.
- 4. Before use, ensure that the drip tray is properly positioned.
- 5. Pay attention to the baking effect during operation to prevent food from burning.
- 6. There are four slots inside the oven at different heights. Place the grill rack according to the size of the **food and** the working mode of the heating tube to achieve the best baking effect.
- 7. This unit has basic functions including upper and lower heating tube functions, single upper heating tube function, and single lower heating tube function. Choose the appropriate function as needed.

****Warning:**** When removing food from the oven after baking, use specialized gloves to avoid burns.

OPERATION



FRIES



WINGS



BACON



VEGETABLES



CHICKEN



ROTISSERIE



TOAST



BAKE



ROAST



PIZZA



REHEAT



BROIL



DEHYDRATE



SLOW COOK



KEEP WARM

Time and Temperature Display Area

Touch Panel

Adjustment Knob

When powered on initially, all displays blink 5 times, emit a long "beep" sound, then  Light up, All menu functions illuminate, corresponding (default menu) blinks, digital screen displays the default time and temperature of that setting.

Start/Pause: After selecting the function, press 'Start/Pause' to start the oven operation. Press 'Start/Pause' again to pause the operation and stop the timer, returning to the function menu display. Press 'Start/Pause' repeatedly to toggle between starting and pausing.

Menu: Touch the menu button () to activate. Turn the knob clockwise to scroll through and select functions from top to bottom. Turn the knob counterclockwise to go back and select a function.

Temperature/Time: After selecting the function, press to () it will be blinking. Turn the knob clockwise to increase and counterclockwise to decrease. Adjust the time and touch it again. Use the knob to increase or decrease the temperature.

Rotisserie: This function is available in the 'Rotisserie' mode. When the menu function is selected and the rotisserie light is on, you can choose whether to activate the rotisserie. Press the 'Rotisserie' button to start. The operation indicator will blink.

Low-Speed Fan Function: This function is selectable only when the "Low-Speed Fan" mode is available. When the menu function is selected, the "Low-Speed Fan" indicator lights up. At this point, you can choose whether to activate it. Press the "Fan" button to start. The operation indicator will blink.

Oven Light: Press the "Light" button to turn on the oven light. It will automatically turn off after one minute. Press the light button again to turn the oven light on.

Custom Function Area: Press the independent upper or lower heating element button, and the corresponding light will turn on. Then, adjust the temperature and time using the respective buttons. Use the knob to make adjustments. The default time, temperature, and range are the same as for the Bake function.

There are several possible scenarios when the oven finishes its operation:

1. If the set working time has elapsed during operation, the buzzer will emit "beep-beep" sounds, and the oven will enter standby mode and turn off the heating element.

If an NTC (Negative Temperature Coefficient) open circuit or short circuit fault is detected during operation, the digital display will show E1 (open circuit) or E2 (short circuit). The buzzer will emit an alarm sound, and the display will flash "OFF", and the heating element will be turned off.

Menu Function Control Table

No	Function	Time Range	Default Time	Temperature Range	Default Temperature	Upper Element	Lower Element	Side Element	Fan	Preheat	Rotisserie	Power (W)
1	Fries	0:01-2:00	0:18	90-230	230	N	Y	Y	H	Y	N	980
2	Wings	0:01-2:00	0:20	90-230	230	N	Y	Y	H	Y	N	980
3	Bacon	0:01-2:00	0:20	90-230	200	N	Y	Y	H	Y	N	980
4	Vegetables	0:01-2:00	0:25	90-230	200	N	Y	Y	H	Y	N	980
5	Chicken	0:01-2:00	1:00	90-200	200	Y	Y	N	L	N	N	980
6	Rotisserie	0:01-2:00	1:00	90-230	180	Y	Y	N	L	N	Y	980
7	Toast	0:01-0:30	0:08	90-230	230	Y	Y	N	ON	N	N	980
8	Bake	01:00-90:00	0:30	90-230	180	Y	Y	N	L	Y	N	980
9	Roast	01:00-90:00	0:25	90-230	180	Y	Y	N	L	Y	N	980

10	Pizza	0:01-1:00	0:20	90-230	190	Y	Y	N	L	Y	N	980
11	Reheat	0:01-1:30	15:00	90-230	160	Y	Y	N	L	N	N	980
12	Broil	0:01-1:00	0:30	90-180	150	Y	N	N	L	N	N	490
13	Dehydrate	0:30-9:59	0:60	30-90	60	N	N	Y	H	N	N	490
14	Slow cook	0:10-2:00	1:30	90-230	120	Y	Y	N	L	N	N	980
15	Defrost	0:05-9:59	4:00	40-60	40	N	Y	N	L	N	N	490

****NOTE****

- Convection: Low-speed fan remains on constantly, not affected by temperature.
- Dehydrate: High-speed fan remains on constantly, not affected by temperature.
- Defrost: Low-speed fan remains on constantly, not affected by temperature.
- "H" denotes high speed for fan; "L" denotes low speed.

Cleaning and Maintenance

****Warning**:** Unplug the electric oven and let it cool completely before cleaning.

1. Use a mild detergent to clean all accessories.
2. Clean the interior of the oven with a soft cloth regularly.
3. Clean the oven door with a hot cloth soaked in detergent or soap.
4. Do not immerse the electric oven in water for cleaning.
5. Do not use a dishwasher to clean any accessories of this product.
6. Do not use abrasive cleaners to wipe the product.
7. Do not use abrasive cleaners, metal brushes, sponges, organic solvents, or corrosive liquids to wash any parts.
8. Clean accessories with a soft cloth soaked in detergent or soapy hot water.
9. Do not wipe the heating element.
10. Do not place the grill rack or baking tray directly on the lower heating element.
11. Do not use metal pads to wipe the surface of the electric oven to minimize abrasion.

Warning

1. To prevent damage to the bottom plate of the electric oven, remove excess food when operating.
2. Never open the glass door or place the baking tray (or other accessories) directly on the lower heating element when operating the electric oven.

TROUBLESHOOTING

No.	Problems	Possible Solution
1	Smoke is coming out of the oven.	It is a normal phenomenon that when the oven is used for the first time, there will be unusual smell or smoke, caused by the protective film on the heating elements which is to avoid erosion.
		It is because the bake tray or the interior of the oven is dirty.
		Make sure the interior of the oven is cleaned properly and not greasy.
		If the power cord catches fire, stop using and unplug it immediately.
2	The bake grill got stuck	Pull out the bake grill, clean the slot and check if

	and the door cannot be opened and closed properly.	the bake grill is deformed.
3	Foods are not completely cooked.	Increase cooking temperature or time. Make sure you choose the proper function.