



1) Pitch Control Input

As you may imagine, this controls the pitch of the sound

2) Pitch Knob

This controls both playback direction **and** pitch of the sound. Turning to the right increases the pitch, while turning to the left increases pitch but reverses playback. Input 1 controls the pitch relative to the direction and pitch selected by this knob.

3) Sound Select Button and Indicators

Pressing this button allows you to cycle between the 3 available sounds (rd) = ride cymbal || (cr) = crash cymbal || (both) = cowbell

4) Accent Control Input

Voltage here adds an accent

5) Level Knob

This controls the output level of (7)

6) Trigger Input

Voltage here triggers sound playback

7) Audio Output

Sound comes out here

