

VIDEO LOADING INSTRUCTIONS for videoCARD LITE version (1 on-off button + 1 skip button):

1. Plug in USB cable to both the videoCARD and USB port of a computer.
2. Power on the videoCARD unit. The computer should recognize it and show it as a removable drive. If not, check to see if USB cable inserted correctly.
3. Open the removable drive on your computer, create a folder called "video" (if it doesn't already exist), and copy your video files into this folder. All video files must be placed within the "video" folder otherwise the video files may not play.
4. Rename the video files appropriately. They will play in alphabetical order based on the filenames. For example, if "video1.avi" and "video2.avi" are loaded, "video1.avi" will be the first video played, followed by "video2.avi"
5. Disconnect USB cable. videoCARD is ready to play.

TO CHARGE: Use the included mini USB cable and plug into a USB port on a computer, AC wall charger, or other powered USB port for 30-45 minutes.

SUPPORTED CODECS: XVID, H.264, MPEG-4, MPEG-2, WMV9, MJPEG.

RESOLUTION: 480x272 (4.3" screen) or 800x480 (7.0" screen) or 1024x600 (10" screen), 320x240 to 1280x720 (supported)

NEED HELP? Just visit our FAQ and support page at
<https://support.bigdawgsgreetings.com>.



Support is handled via e-mail only.

Please e-mail us your questions or concerns at:

support@bigdawgspromo.com