

ENCHEN

Shanghai Qiaopusi Smart Sci-Tech Development Co., Ltd. Add: Room
103, 3th Bld, No.320 Donglan Rd, Minhang District, Shanghai, China
Made in P.R.C.

KROKY

- Step 1**
Remove the protective cover and press power switch to turn on the Product.
•You can use power mode by pressing power switch again.
- Step 2**
Gently slide the roller head back and forth or left and right on the dry and rough area of the feet and stay for 2 to 3 seconds. Do not press the Product too tightly when using it, and make the roller head run gently across the skin. During the process of using, it is allowed to stop to check if the dead skin is removed satisfactorily. If it is not, reapply the Product on the same area (for 2 or 3 seconds) and check again, until the smooth and delicate skin is restored.
- Step 3**
Press power switch to turn off the Product and put protective cover on to prevent the damage of the roller head.
- Step 4**
After grinding your feet, rinse them with water or remove excess dander with a wet towel.

- Notice:**
- 1. Improper use of the product may cause damage to the roller head, please confirm whether the roller head is in good condition before using. If damaged, stop using the Product.
 - 2. If pressed too tightly with too much force, the Product will stop operation.
 - 3. It is suggested to use the Product after washing the skin to clean and soften the skin. And wipe up the water on the area of the skin to guarantee the optimum effect.
 - 4. It can provide 150 mins of cordless using time after 2.5 hours of charging.
 - 5. Please clean the product after using to keep it in a clean and high-performance state.

PACKING LIST

- Electric foot callus remover *1
- Fine roller head (for daily care)*1
- Regular roller head (for removal of newly grown dead skin)*1
- Coarse roller head (for hard and thick callus)*1
- Charging cable*1
- Cleaning brush*1
- User manual *1.

ZÁRUČNÍ LIST

WARRANTY TERMS & CONDITIONS

- * All quality-related defects on items sold directly by ENCHEN or ENCHEN's authorized resellers are covered by an extensive warranty, staking from the date of purchase.
- * ENCHEN's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
- * This warranty covers only original ENCHEN products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
- * Warranty is for the primary product only nor transferable. Any free additional products) are not covered in this warranty.
- * If the product fails regardless of usage in compliance with the user manual and other written precaution, replacement will be provided free of charge.
- * To claim the warranty, contact the services team from the platform or store where you bought from.

Email: expok@enchen.cn

BATTERY DISPOSAL INSTRUCTION

- 1. Please take the battery out from the appliance first before discarding it.
- 2. Please make sure that the appliance is powered off before taking out the battery.
- 3. The battery should be disposed safely.

ENCHEN



Electric Foot Callus Remover

User Manual

 
* For safety issue, the product's battery status remains low during transporting.
Please fully charge the product before initial use!

Name :	
Address :	
Tel. No. :	
Date of purchase : (dd/mm/yy)	
Store name :	
Warranty period :	

HE

Problem	Cause	Solution
This Product cannot be powered on	Low battery	Fully recharge before using
	Damage of the product	Send to professional repair
The Roller head fails to rotate	The Roller head is not installed properly	Reinstall the roller head

PROFIL PRODUKTU

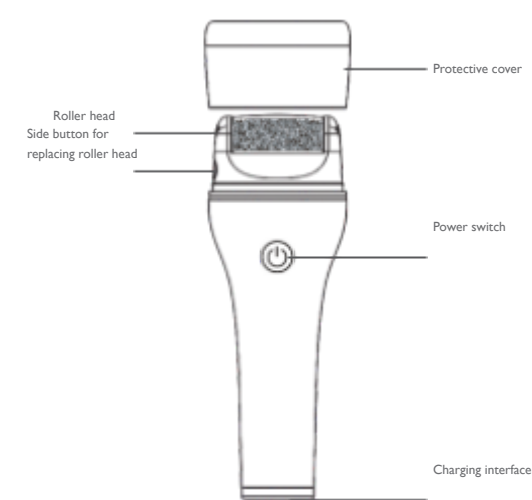

PRODUCT PARAMETERS

Product name: Electric foot callus remover Model: Rock
Input: 5V 1A Rated power: 3W
Charging time: 2.5 hours



DŮLEŽITÉ POZNÁMKY

- Please read the following safety notes carefully and abide by all routine preventive measures for safety.
- Please read this manual carefully and keep this manual well.
 - This product may be damaged due to any operation inconformity to this manual.

Warning

1. This product is not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the Product to ensure that they can use it safely.
2. This Product and its accessories are not toys. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the product.
3. Please use this Product for the correct purpose. This Product is only suitable for callus, hard and thick dead skin, such as heels. Please do not use the Product on normal skin.
4. Do not immerse this Product in water to charge, and do not charge it in a humid environment. Keep the Product dry after using it.
5. The Product contains a built-in rechargeable battery. Do not drop it into fire and never charge, use or place it at the place where temperature is high.
6. Please use and store the product at a temperature between 0°C and 40°C.
7. Do not drop or knock this Product. If this Product is damaged as a result of dropping or collision, do not use it again.
8. Do not try to fix or disassemble the Product by yourself.

Notice

 
1. After using each time, please put the protective cover on properly to prevent damage to the Product. To avoid any injury caused to the human body, do not use this Product if the roller head is damaged.
2. The roller head is subject to certain service life. In order to maintain good effect, it is suggested to replace it on a regular basis.
3. If this Product will be not used for a long time, please charge it at least once every six months.
4. If this Product does not operate properly, please submit it to the seller or the authorized service center for inspection.
5. Do not press this Product too hard on skin and do not directly contact your scar or damaged skin with roller head.
6. If you are undergoing treatment due to any skin problem, consult your professional doctor prior to use. This Product should not be used as a medical device. If you feel unwell after using the Product or if you skin becomes sore or inflamed, please stop using the Product and consult with your doctor.

NABÍJENÍ

1. Turn off the power of the Product.
2. Connect the charging cable to the Product and the Adapter, then plug the adapter into the 100-240V AC power outlet. *5V/1A Adapter shall be used.
3. The Product will be fully charged in approximately 2.5 hours.
4. Alternatively, you can connect the charging cable to the Product and the USB pork for charging.


REPLACE ROLLER HEAD

1. Before replacing the roller head, be sure to turn off the Product.
 2. When replacing the roller head, insert a new head into the Product until a “click” sound is heard. Make sure that the new head is stuck in place and properly installed. If the roller head is not properly connected, do not turn on the switch of the Product.
- * When unpacking the Product package, the roller head installed on the device body is Fine Roller head.

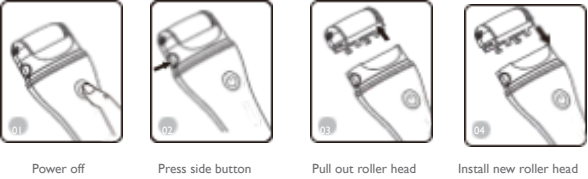

ČIŠTĚNÍ A ÚDRŽBA

 1. Before cleaning, be sure to turn off the Product.
2. After cleaning, wipe off the Product with a clean dry cloth.

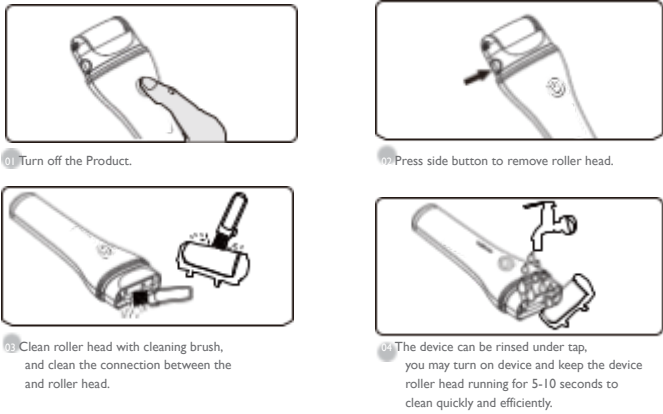

COMMON PROBLEMS AND TROUBLESHOOTING