

IRRIGATION

GUN

1. Turn hydrant off
2. Push 24+ to drain water.
3. Make sure gun is out of gear to tow.
4. Push Reset

To Start gun

1. Put gun in gear.
2. Put lever down using PTO.
3. Check metres and add on 5 or 6 metres.
4. Push start
5. Turn hydrant on
6. Go back and check in half hour to see that gun is coming in.