 
 



STEP 1

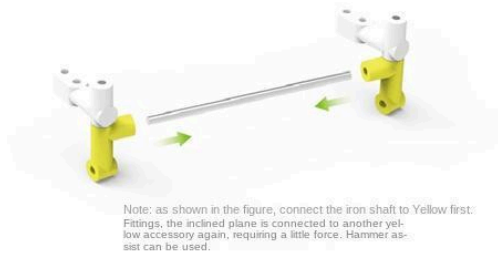


STEP 2

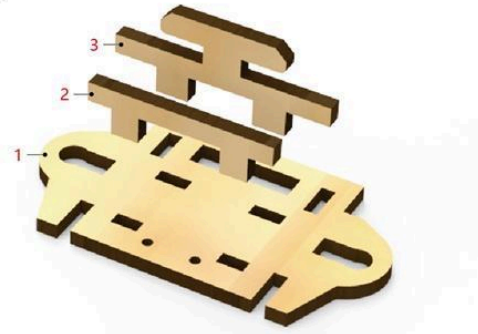

 
STEP 3

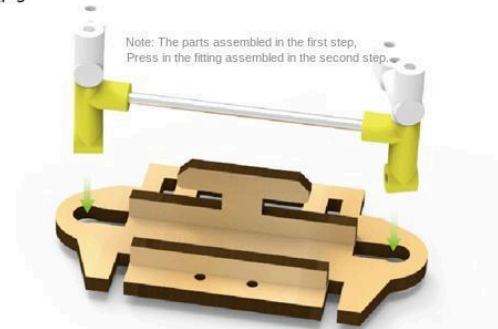

 
STEP 4

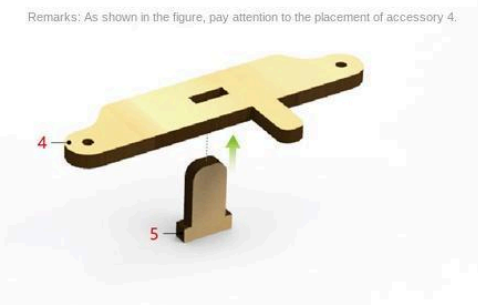

 STEP 5

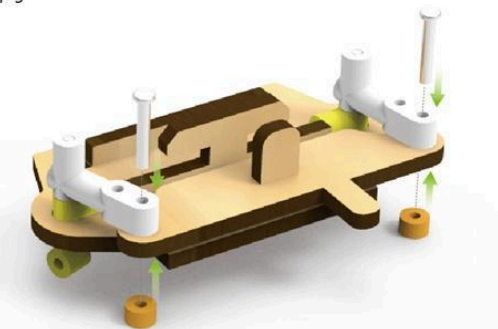

 STEP 6

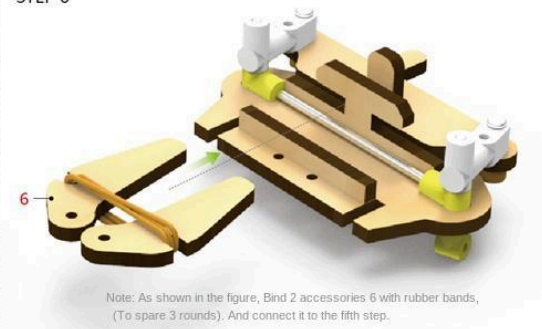


STEP 7




STEP 8



 
STEP 9

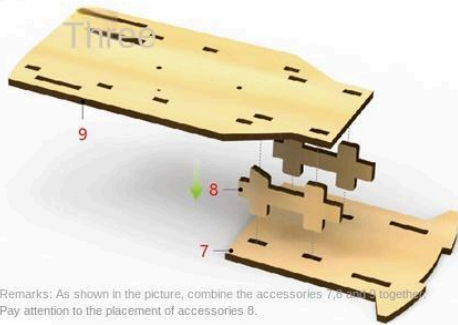

 
STEP 10

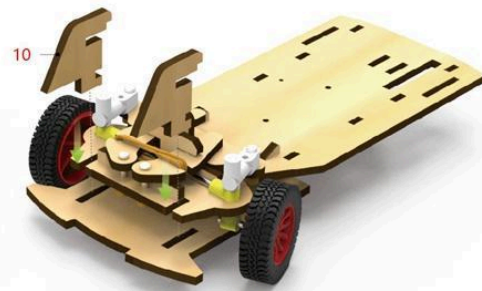

 STEP 11

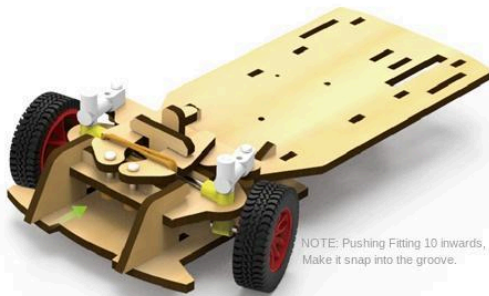

 STEP 12

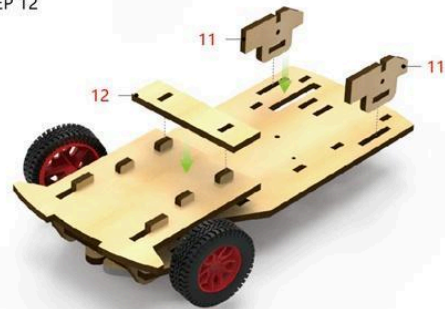


STEP 13




STEP 14



 
STEP 15

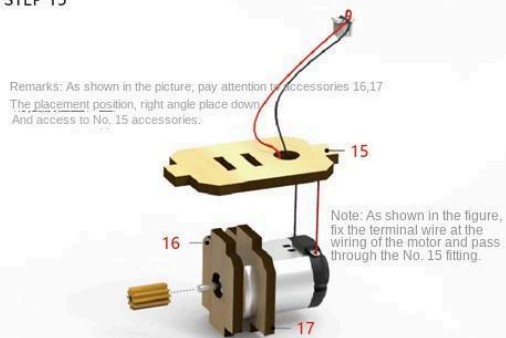

 STEP 16

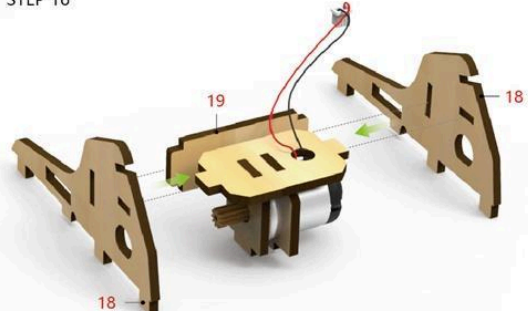

 STEP 17

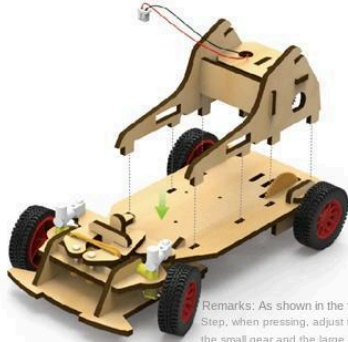


Remarks: As shown in the figure, press the 16 steps into the 14th Step, when pressing, adjust the distance between the small gear and the large gear, not too tight.

STEP 18



Note: Connect the terminal wire to the steering box as shown in the figure.

 STEP 19

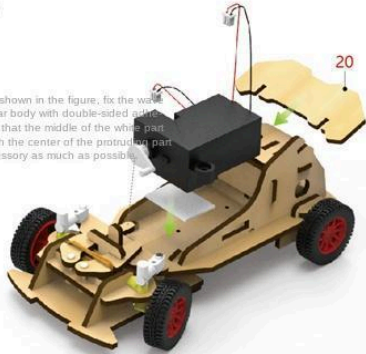


Remarks: as shown in the figure, fix the white box on the car body with double-sided adhesive tape, so that the middle of the white pad is aligned with the center of the protruding part of No. 4 accessory as much as possible.

STEP 20



Note: as shown in the figure, connect the terminal wires to M1 and M2 of the receiving Board respectively.

 STEP 21

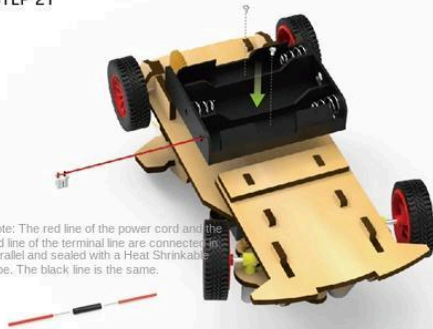

Note: The red line of the power cord and the red line of the terminal line are connected in parallel and sealed with a Heat Shrinkable tube. The black line is the same.

STEP 22



Note: As shown in the figure, connect the battery wire terminal port to the chip board where there is no text mark.

STEP 23



Remarks: Connect accessory 21. Fixed receiving plate, such as shaking, available white latex to be fixed.

STEP 24



Note: After the battery is loaded, the switch is moved to the far right to open the state, and then the switch of the remote control is combined to operate!