

Configuration for Non-WIND Devices

How To

- | | |
|------------|---|
| 1.1 | Configure APN and MMS Settings |
| 1.2 | Configure SMS Message Center Settings |
| 1.3 | Configure Voicemail and Voicemail Menu Tree |

Configuration for Non-WIND Devices

How To

**1.1 Configure APN and MMS Settings 1.2 Configure SMS Message
Center Settings 1.3 Configure Voicemail and Voicemail Menu Tree**

1.1 How to Configure APN and MMS

Note: Non WIND Phones may need to have the following APNs configured manually to use data or use MMS.

Please follow up with your handset manufacturer to obtain configuration instructions.

- Internet APN: Internet.windmobile.ca is required to connect the WIND data network.
- MMS APN: mms.windmobile.ca is required to be able to send/receive MMS.

Additional Information that may be required when configuring APN:

Internet APN	MMS APN
Name ■ Internet	Name ■ MMS
APN ■ Internet.windmobile.ca	APN ■ mms.windmobile.ca
Proxy ■ Not Set	Proxy ■ Not Set
Username ■ Not Set	Username ■ Not Set
Password ■ Not Set	Password ■ Not Set
Server ■ Not Set	Server ■ Not Set
MMSC ■ Not Set	MMSC ■ http://mms.Windmobile.ca
MMS Proxy ■ Not Set	MMS Proxy ■ 74.115.197.70
MMS Port ■ Not Set	MMS Port ■ 8080
MCC ■ 302	MCC ■ 302
MNC ■ 490	MNC ■ 490
Authentication type ■ Not Set	Authentication type ■ Not Set
APN Type ■ default	APN Type ■ mms

1.1 How to Configure APN and MMS

Note: Non WIND Phones may need to have the following APNs configured manually to use data or use MMS. Please follow up with your handset manufacturer to obtain configuration instructions.

- Internet APN: Internet.windmobile.ca is required to connect the WIND data network.
- MMS APN: mms.windmobile.ca is required to be able to send/receive MMS.

Additional Information that may be required when configuring APN:

Internet APN MMS APN Name = Internet Name = MMS APN = Internet.windmobile.ca APN = mms.windmobile.ca Proxy = Not Set Proxy = Not Set Username = Not Set Username = Not Set Password = Not Set Password = Not Set Server = Not Set Server = Not Set MMSC = Not Set MMSC = http://mms.Windmobile.ca MMS Proxy = Not Set MMS Proxy = 74.115.197.70 MMS Port = Not Set MMS Port = 8080 MCC = 302 MCC = 302 MNC = 490 MNC = 490 Authentication type = Not Set Authentication type = Not Set APN Type = default APN Type = mms

1.2 How to Configure SMS Message Center

The SMS Message Center functions as a server and forwards the message to the destination.

SMS Message Center Number is pre-configured on your WIND SIM card. In the event you are unable to send any SMS, this is the setting to verify to ensure your device is configured correctly.

*For non-WIND devices, please consult your hardware documentation for proper instructions

SMS Message Centre (or Service Centre): +16135009000

HUAWEI U8100

1. Touch **Messaging**
2. Select **Settings**
3. **SMS center number** +16135009000

HUAWEI U7519

4. Touch **Menu**
5. Select **Settings**
6. Click **Applications**
7. **Message settings** > SMS&MMS
8. Select **Send Settings** > **SMS message centre**
9. From **SIM** > **Options** > **Edit**
10. **SMS center number** +16135009000

HUAWEI U1250

1. Click **Menu**
2. Select **Settings**
3. Click **Message Settings**
4. Select **SMS & MMS**
5. Click **Send Settings**
6. **SMS message Center** +16135009000

Blackberry 9700 and 9100

1. Click **Options**
2. Select **SMS**
3. **Service Center:** +16135009000

Samsung Gravity 2

1. Click **Menu**
2. Select **Messaging**
3. Click **Settings** > **Messages settings**
4. Select **Text message center:** +16135009000

Note: SMS Service center is pre-configured for this device and will not let you edit this option



1.2 How to Configure SMS Message Center

The SMS Message Center functions as a server and forwards the message to the destination.

SMS Message Center Number is pre-configured on your WIND SIM card. In the event you are unable to send any SMS, this is the setting to verify to ensure your device is configured correctly. *For non-WIND devices, please consult your hardware documentation for proper instructions

SMS Message Centre (or Service Centre): +16135009000

HUAWEI U8100 1. Touch Messaging 2. Select Settings 3. SMS center number +16135009000

HUAWEI U7519 4. Touch Menu 5. Select Settings 6. Click Applications 7. Message settings > SMS&MMS 8. Select Send Settings > SMS message centre 9. From SIM >Options> Edit 10. SMS center number +16135009000

HUAWEI U1250 1. Click Menu 2. Select Settings 3. Click Message Settings 4. Select SMS & MMS 5. Click Send Settings 6. SMS message Center +16135009000

Blackberry 9700 and 9100 1. Click Options 2. Select SMS 3. Service Center: +16135009000

Samsung Gravity 2 1. Click Menu 2. Select Messaging 3. Click Settings > Messages settings 4. Select Text message center: +16135009000 Note: SMS Service center is pre-configured for this device and will not let you edit this option

HTC MAPLE

1. Click **Start**
2. Select **Settings**
3. Click **Phone**
4. Select **Call Options**
5. Text messages service center: +16135009000

Nokia 5230

1. Click **Menu**
2. Select **Messaging**
3. Click **Options > Settings**
4. Select **Text message**: +16135009000

Note: SMS Service center is pre-configured for this device and will not let you edit this option

MOTOROLA XT720

1. Dial *****#4636#*****
2. Select **Phone Information**
3. SMSC: "Click Refresh" +1615009000



5. Text messages service center: +16135009000

Nokia 5230 1. Click Menu 2. Select Messaging 3. Click Options > Settings 4. Select Text message: +16135009000 Note: SMS Service center is pre-configured for this device and will not let you edit this option

MOTOROLA XT720 1. Dial *##4636##* 2. Select Phone Information 3. SMSC: "Click Refresh" +1615009000

1.3 How to Configure Voicemail and Voicemail Menu Tree

To retrieve messages, you need to dial 777 on your WIND handset or 647-700-1777 from any other phone. To deposit messages, you must have the 647-700-1778 number set for voicemail (and call forwarding if needed) on your handset.

- 6477001777 – Retrieval Number
- 6477001778 – Deposit Number

Voicemail Menu Tree

Option 1 - Play Menu

- Replay message – Press 1
- Delete message and go to next – Press 7
- Save – Press 9
- Keep this message new and go to next – Press #
- To recover delete message - Press *3
- Pause during message play back (only during playback) – Press 2
- More options – Press 5
 - Toggle playback number – Press 3

Option 3 - Greetings Menu

- Play active greeting – Press 1
- Record active greeting – Press 2
- Delete active greeting – Press 3
- Activate/deactivate status greeting – Press 88
- Return to previous menu - *
- Return to main menu - * *

Option 4 - Personal Options Menu

Modify Personal Preferences – Press 4

- Modify Password – Press 1
- Modify playback preferences – Press 2
 - Change the order in which the messages will be played – Press 1
 - Change to Auto Playback Mode – Press 2
- Change Language for instructions and prompt – Press 5
 - English – Press 1
 - French – Press 2
- Return to previous menu - *
- Return to main menu - * *

Caller Menu

#-Send Message
3- Replay message



1.3 How to Configure Voicemail and Voicemail Menu Tree

To retrieve messages, you need to dial 777 on your WIND handset or 647-700-1777 from any other phone. To deposit messages, you must have the 647-700-1778 number set for voicemail (and call forwarding if needed) on your handset.

- 6477001777 – Retrieval Number
- 6477001778 – Deposit Number

Voicemail Menu Tree Option 1 - Play Menu

Option 3 - Greetings Menu

Caller Menu #-Send Message 3- Replay message