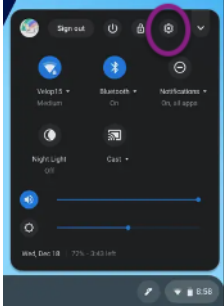 
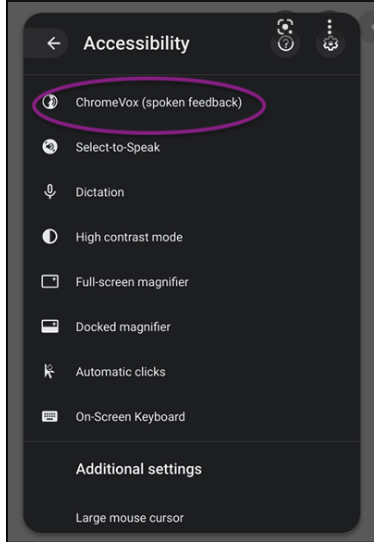 
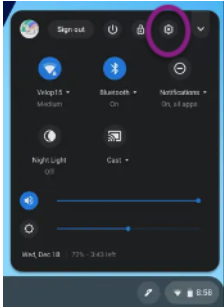 
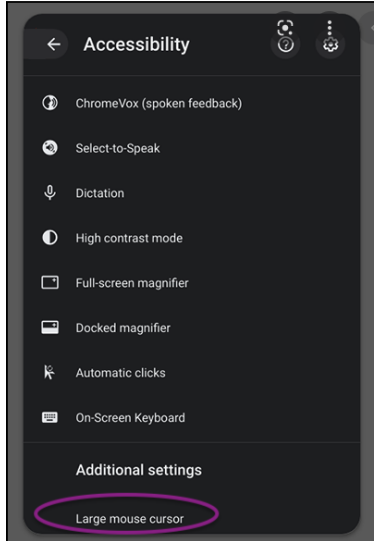 
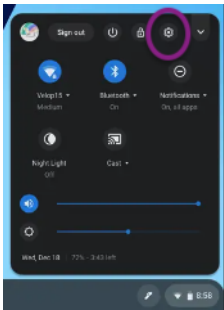 
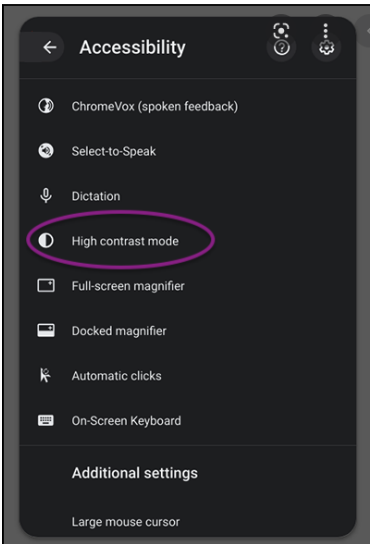 
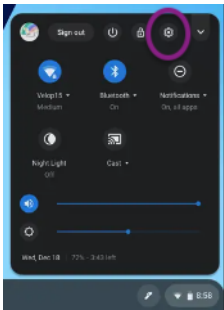 
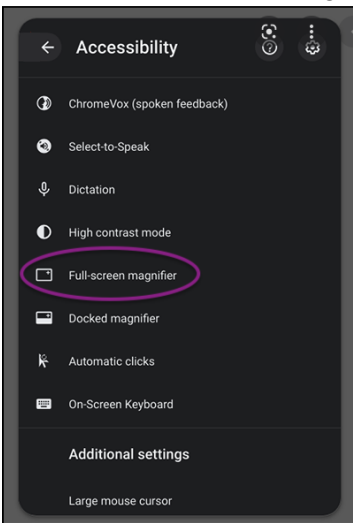 


Easy Chromebook Fixes

Symptom	Action Needed		
Boxes around text and narrator speaking	Profile icon → 	Accessibility →	Unselect “Chromevox” 
Large cursor	Profile icon → 	Accessibility →	Unselect “Large mouse cursor” 

Screen looks like negative film	Profile icon > 	Accessibility >	Unselect “High contrast mode” 
Screen is zoomed in	Navigate to bottom right corner of screen Profile icon > 	Accessibility >	Unselect “Full screen magnifier” 
Screen flipped on its side or upside down	Press ctrl+shift+[Refresh]	(↻) 90degrees with each turn.	