

Powerwash device

1. Turn off the chromebook.
2. Press and hold esc, refresh and then tap power on button. These are all in the top row of the chromebook- esc is top left, refresh is the one that looks like an arrow in a circle. A yellow exclamation point (!) or "Please insert a recovery USB stick" will be displayed after you press these.
3. Press CTRL and D
4. Press Enter
5. Wait for the screen to come back on
6. Press Space
7. Press Enter
8. The chromebook will start up now.
9. Follow the prompts to add wifi etc but stop when it asks you to sign in to the chromebook.
10. From the sign in screen, type CTRL, ALT, E all at the same time.
11. Now enter your username and password
12. All done, it will now ask you to log in once more, and you are all set.



