

Refresh Chromebook

Device not turning on? Screen or mouse frozen?

WiFi is not connecting or poor signal/slow? REFRESH!

1. Plug in the school device.
2. Hold down the refresh  and power  buttons at the same.



3. Power the device back on.