

## **Tiguan Electronic Modifications**

### **1 Horn on lock**

09 Central Electrics

Access 31347

Adaptation

Akustische-Rueckmeldung entriegeln (unlock acoustic feedback)

Akustische-Rueckmeldung verriegeln (Lock acoustic feedback)

Set either or both to ON

Then set following to ON

Menuesteuerung akustische Rueckmeldung (Acoustic lock menu)

Puts a menu in MIB in car settings Locking which can be set on or off or just lock or unlock

### **2 Stop Start Disable**

Control Unit 19 Code 20103

Adaptation

Start Stop Limit Voltage

VALUE Change from 7.8 to 12.0

### **3 High Beam Assist or by App**

Control Unit 09 (Central Electrics)

Code 31347

Adaptation

Fernlicht\_ Assistant- Menuesteuerung Fernlichassistent- Change from NOT to Present

Fernlicht\_ assistant Erweiterte\_Fernlichtsteuerung-

Change FROM AFS Fernlight UEBER AFS

TO AFS,FLA Fernlicht ueber AFS

Copied From Autoinstruct site

#### **4 Enable Traffic Information (TMC) on Headunit**

This enables the 'Traffic' button to work on the headunit, and will use radio frequency data to display nearby traffic information. Once activated, it may take over an hour for the initial messages to appear.

Select Control Unit 5F (Information Control Unit)

Adaptations

Change Fee Based Traffic Information (TMC) value to '1024'

Next, in the normal radio settings, enable 'Traffic Programme (TP)' and RDS

If you get an error, turn the headunit OFF and try again.

#### **5 Disable Sat Nav Safety Warning**

This tweak disabled the safety warning which appears each time you turn the car on

Select 5F

Coding

Byte 23

Initial Disclaimer – Off

Legal Disclaimer – Off

#### **6 Refuel Amount in Cluster**

After refuelling, the amount in litres will be displayed in the cluster.

Select Control unit 17 (Dashboard)

Control unit long coding

Byte 10

Bit 4 Activate

#### **7 Change Cluster Graphics**

Change the cluster background visuals to different models

Select Dashboard (17)

Adaptation

Tube\_Version

Variant\_2 = Default

Variant\_3 = Golf GTI

Variant\_4 = Golf R

### **8 Lane Assist Adjustments (Car must be fitted with Camera)**

Adjust the point in which the steering wheel will vibrate to indicate the vehicle is drifting out of the lane.

Steering Wheel Vibration

Select Control unit A5 (camera)

Security access

Enter unlock code 20103

Adaptation

Select channel intensity steering wheel vibration

Value adjust accordingly Default: medium options: early, middle, late

### **9 Disable Overtaking on Right Prevention (Undertaking)**

Allows ACC equipped RHD vehicles to overtake on the left side, which is blocked by default.

Adaptive Cruise Control (Module 13)

Long Coding

Overtaking\_right\_prevention

New Value Deactivated

Security code 20103

### **10 Adjusting Microphone Sensitivity**

Adjusts the microphone gain for handsfree usage.

Select Control unit 5F (infotainment)

Adaptation

Select Mikrofonempfindlichkeit (Microphone Sensitivity)

Adjust value as you wish.

### **11 Drivers Reaction Adjustment (Car must be fitted with Camera)**

Adjusts the sensitivity in which the car will alert the driver due to lack of steering input.

Select Control unit A5 (camera)

Security access

Enter unlock code 20103

## Adaptation

Select channel deactivation threshold driver activity

Value adjust accordingly Default: medium options: early, middle, late

### **12 Oil Temperature Display in Cluster**

Displays the engine oil temperature in the cluster.

Select Control unit 17

Control unit long coding

Byte 10

Bit 01 Activate

### **13 Dynamic light assist Courtesy of Phonebooth**

1. Connect OBD Eleven to your car.
2. Turn the ignition on, not the engine! These changes won't apply if the engine is on. I've tried it.
3. Go to central electrics module 09.
4. Select adaptations from the list.
5. Find "Fernlicht\_Assistent" and go into that menu.
6. Change "Erweiterte Fernlichtsteuerung" to AFS FLA Fernlicht (GLW:MDF).
7. Change "Menusteuerung Fernlichtassistent" to present.
8. Change "Menusteuerung Fernlichtassistent Worksteinstellung" to present.
9. Save your adaptations using the green tick.

### **Module A5 - Front Sensor**

1. Got to module A5 - Front Sensor.
2. From the list select "long coding".
3. At the top of the page click the little 0|1 to go into Byte/Bit format.
4. Find byte 19. Change it to hex value 30. You can change the hex values by tapping on the hex value in the app.
5. Find byte 21. Change it to hex value 40.
6. Save your coding using the green tick.

### **Module 4B - Multifunction Module**

1. Go to module 4B.

2. In the list, select long coding.
3. At the top of the page click the little 0|1 to go into Byte/Bit format.
4. Go to byte 9. Change the hex value to 10.
5. Go into byte 10. Tap the checkbox on bit 6 to enable it. Make sure bit 5 is unticked.
6. Go to byte 11. Tap the checkbox on bit 2 to enable it.
7. Use the green tick to save your adaptations.

#### **BEFORE YOU GO ANY FURTHER...**

1. Soft reset your head unit by holding the power button until the head unit powers down then powers back on. You can stop holding the power button when you see the VW logo appear.

#### **14 Adjust speed in Dash to be correct at 100k kph with 20" wheels**

##### **Control Unit 17 Dashboard**

Long coding Wheel Circ

Change from Version 1 To version 3

Brings speedo down from 4 fast to correct at 100 KPH

#### **15 Ripping CD \_Media \_ data**

5F Long coding

Byte 24 Activate

#### **16 Enable change nav whilst moving**

5F code 20103

Adaptations

Search for Blocked

Change all to Unblocked

Long Coding

Byte 23 Uncheck all

## **17 Puddles in mirrors on when reversing**

09 Central Electrics

Aussenlicht\_ubergreifend

Scroll down to

Umfeldeuchte ALS Manoevrierleuchte

Change to Active

Then 6C /long coding

Change Manoeuver\_light to Active

## **18 Disable “turn dipped headlights on” nag when turn ign on**

09 Central Electrics CODE 31347

Aussenlicht Uebergrifend

Fahrlichtwarnung\_Hinweis\_Konfig

Change from Hinweis\_in\_LDS\_Stellung\_Null\_und\_SL

to Kein\_Hinweis

## **APPS USED TO CHANGE THINGS**

### **19 Ambient Colours**

App changed from original to 30

### **20 Dial staging APP**

Change from Off to On

## **21 Scandinavian DRL's**

**Rears on with front DRL's (Scandinavian lights)**

App change from Off to ON

## **22 App Refuel quantity in dash**

Change from OFF to ON

## **23 Acc distance setting**

## **24 Lane assist warning level**

## **25 Lane assist wheel vibration**

## **26 Oil temp in display**

## **27 Refuel quantity in display**

## **28 DRLs off with handbrake (lights must be on) App**

## **29 Pulsing Light in Start button App**

## **30 Rear tails blink with turn indicators V1 or V2 App**

## **31 ACC mod that makes hazard lamp light up when ACC applies brakes**

## **Module 09**

**Enter security code 31347**

## **Adaptation**

**Scroll to Leuchte Warnblinktaster C48 Lichtfunktion G15**

**Change from NOT Active to Bremlight**

**Scroll to Leuchte35 LED Warnblinktaster C48 Dimmerwert GH15**

**Change from 0 to 100**

**When you press the brake pedal the Hazard light switch will illuminate.**

**It will also do so when ACC applies the brakes.**

**2018 onwards only as required settings don't appear in early BCM's**

**Have installed LED lamp in boot and changed reflectors in doors for LED lights pointing down and red facing rearwards when open**

**32 Fog lights as coming home lights**

**Done by App from Auto instruct**