

 









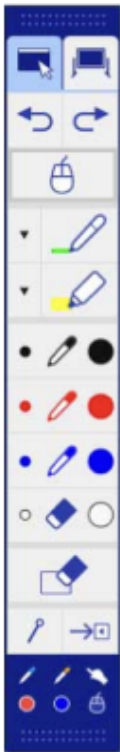


## Epson Interactive Projectors

 Brightlink 685Wi
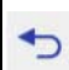
### How to: Write on the screen - projected from a laptop or on a digital whiteboard.

- Pick up your Epson Pen and start drawing.
- Use the Easy Interactive Tools toolbar to choose annotation or whiteboard mode.

### Epson Brightlink 685Wi Toolbar (Trant, Blumer, Nam, Shepherd, Spencer, Daniels, Yung, Price, Crehan, Bjork)

	 Switch to built-in annotation mode	 Black pen (fine point on left, thick on right)
	 Switch to built-in whiteboard mode	 Red pen (fine point on left, thick on right)
	 Undo the last annotation	 Blue pen (fine point on left, thick on right)
	 Redo the last undo	 Eraser (thin width on left, thick on right)
	 Switch to the computer interactive mode	 Clear all annotations
	<b>Note:</b> USB cable must be connected to switch to interactive mode (use pen as a mouse. See notes on next page.)	 Hide the toolbar after each annotation
 Close the toolbar		

### How to: Use the Epson Pen like a mouse to interact with a computer display (and write on the screen).

 
- Plug in the black USB cord that is on your media cart.
- Launch Easy Interactive Tools (EIT) software on your laptop.



### There are 3 Modes

On the left side of the EIT toolbar you can choose between three modes -


- Whiteboard
- Annotation
- Mouse

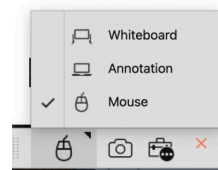


# Epson Interactive Projectors

Brightlink 685Wi
 
## Epson Easy Interactive Software Annotation and Whiteboard toolbar:

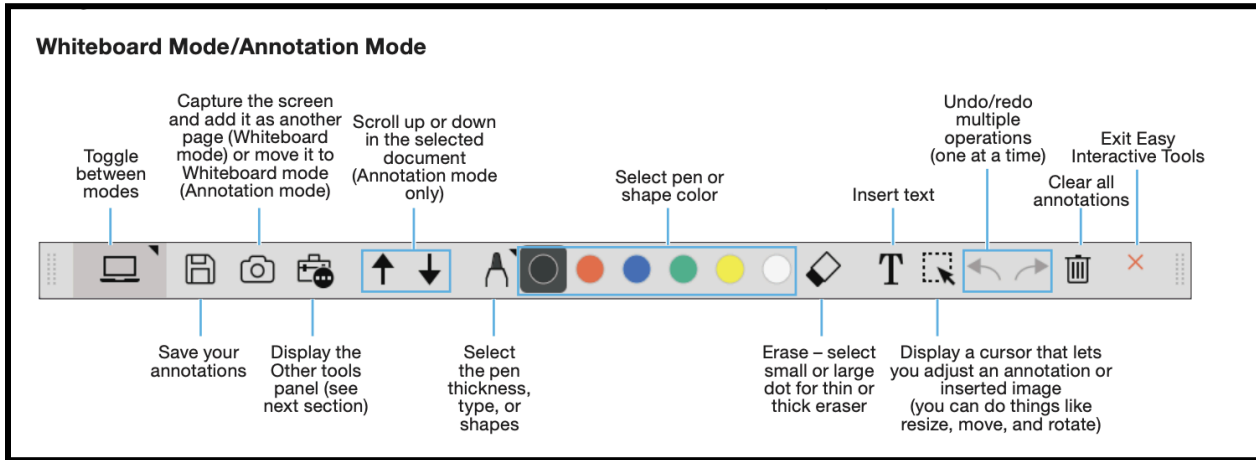

## Other Tools Panel

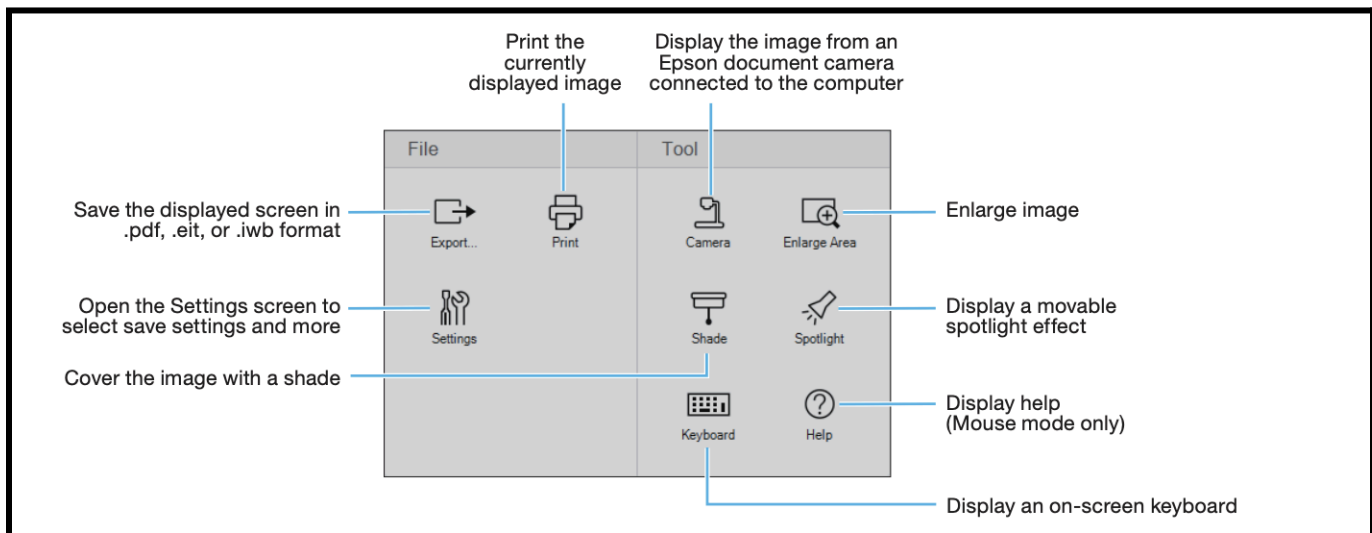 

## Troubleshooting and Notes

If you click the button on your pen and a small light doesn't turn on, the battery in the pen is dead.

You can customize the button on the pen in the settings. Click the **Toolbox icon** on the EIT toolbar and select **Settings**. You will see a drop down menu with different options in the **Right Click** section.

Projector settings - Menu/Settings/Easy Interactive/Pen Mode/ PC Interactive (shows only the EIT menu at the bottom of the screen)