
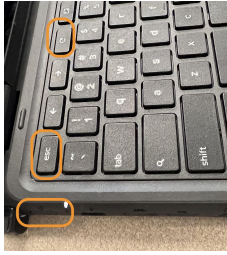


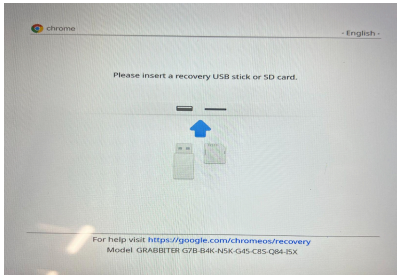

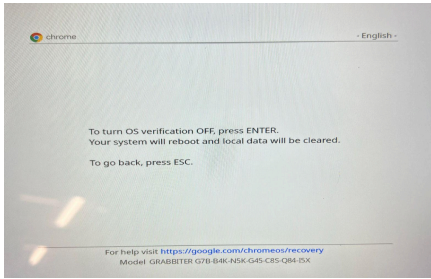


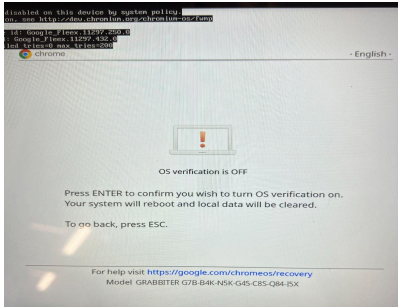
Powerwash Directions for PS

1.	For Kindergarten Chromebooks with touchscreens, press and hold Power + Esc +  .	
	For 1st and 2nd grade Chromebooks without touchscreens, press and hold Esc +  + Power.	
2.	When the screen turns white with a blue arrow and USB stick, press Ctrl + D.	 

3. When the screen turns white with black writing, press **Enter**.



4. When your screen turns white with the red exclamation, press **Enter**. Your Chromebook will turn off and turn back on.



5. Hold down the **Power** button until the Chromebook turns off. Kindergarten's button will be on the **left** and 1st & 2nd grade's will be on the **right**.



