

Side Step

The step will deploy automatically when the sliding door is open and will close automatically when the door is shut. A red light will display on the dashboard

If for any reason the step neither opens nor closes there is a handle under the right front corner. This connects to the motor which is held against the driving gear with a very strong spring. The toggle needs to be pulled very hard and by so doing, the drive is released and the step can be deployed or pushed back



THE IMAGE ABOVE, SHOWS ACCESS TO THE MANUAL STEP OVERRIDE WHICH SHOULD ONLY BE USED IN AN EMERGENCY. IT ALLOWS THE USER TO OPERATE THE STEP IN EITHER DIRECTION WHILST THE TOGGLE IS BEING PULLED TOWARD THE LEADING EDGE OF THE STEP. THIS UNIQUE FEATURE PREVENTS ELECTRICAL MOTOR FAILURE BEING THE CAUSE OF A V.O.R.

PLEASE NOTE THAT THE STEP MUST BE CLEANED EXTERNALLY ONCE PER MONTH IN EXTREME WEATHER CONDITIONS WITH A HOSE. THE INTERNAL BUSHES AND BEARINGS SHOULD BE LUBRICATED (WITH GT85 OR SIMILAR) EVERY 6 MONTHS AS A MINIMUM.

It is good practice to clean the step internals every time the vehicle itself is cleaned. This can be achieved by deploying the step, cleaning off any excess debris and hosing runners repeatedly within the cassette case.