




Chromebook OS Updates

Google regularly updates the operating system for the Chromebooks. These updates are meant to fix glitches or errors in the program and also keep devices more secure from hacking. Sometimes if you haven't run an update, it will cause glitches when you are using the Chromebooks. If you are having issues while using your Chromebook, update and then try to complete your task again.


1. Login to your Chromebook. Click in the taskbar in the bottom right corner.

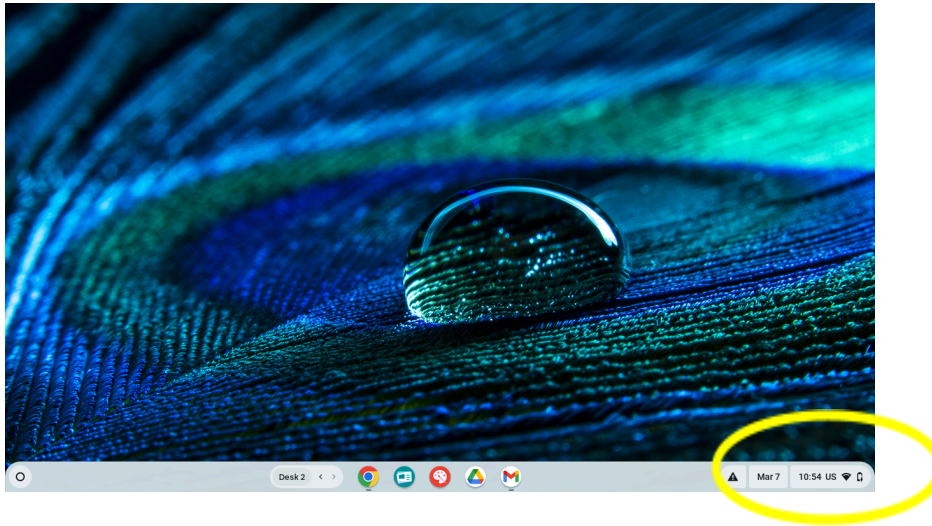


2. Click on the settings gear

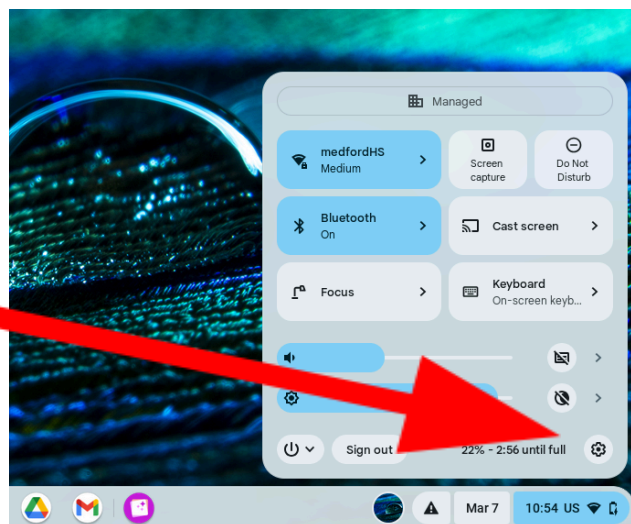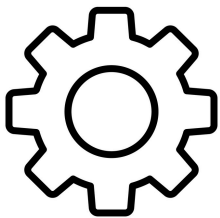

3. In the left taskbar of the window that popped up, click on “About Chrome OS”

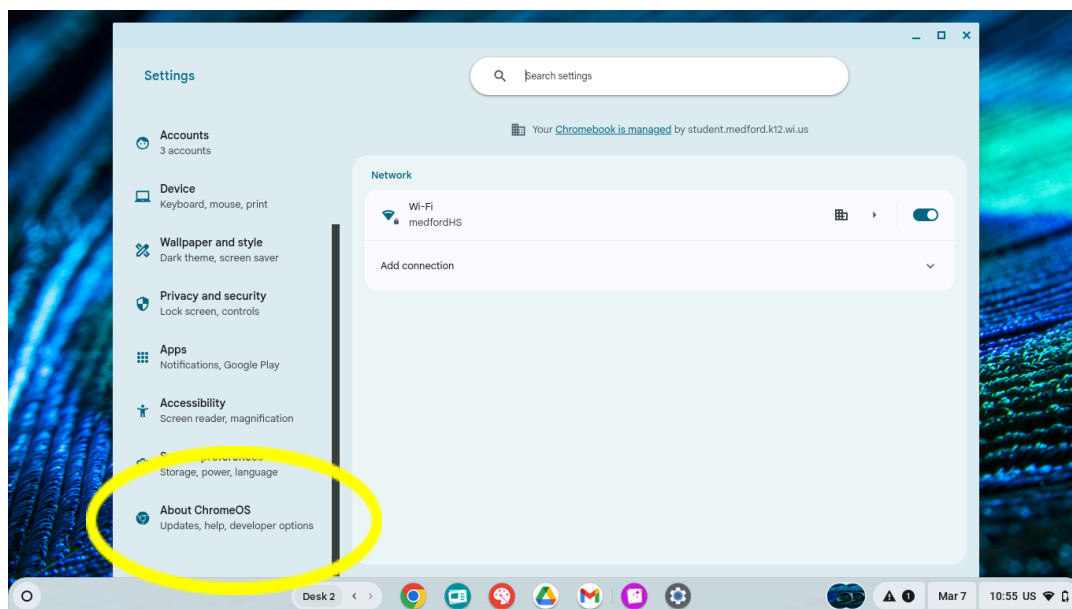

4. Click on “Check for Updates”

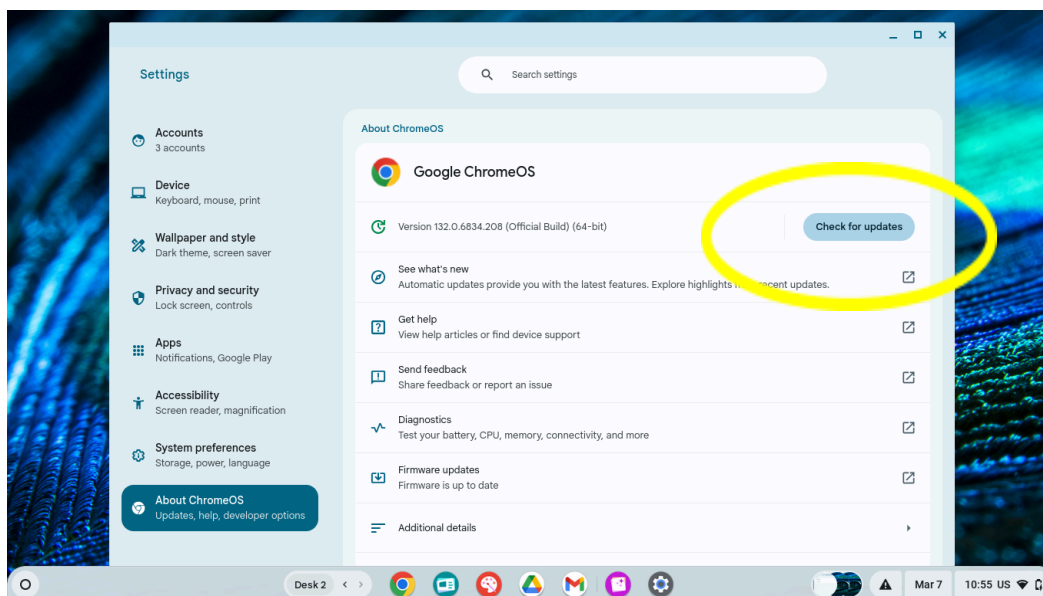

5. Let the updates run and restart when it asks you to restart.

