 



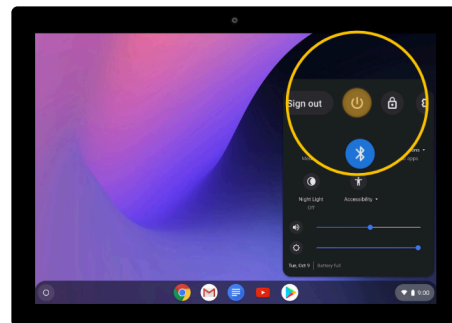 
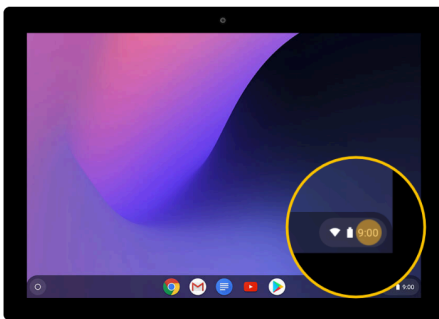 
Reset your Chromebook hardware (battery issues)



If your Chromebook is not charging properly, reset the device using the directions below.

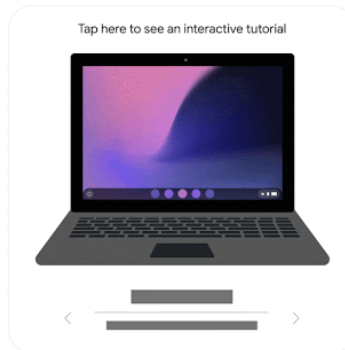


Hard reset your Chromebook:

1. Turn off your Chromebook by selecting the time button on the bottom right side of your screen. Select the Power  button to power off your device.



 
2. On your Chromebook's keyboard, press and hold the Refresh  button + the Power  button until your Chromebook starts back up.




3. When your Chromebook starts up, release the Refresh  button. Your Chromebook is now ready to use.

 
 
Reinicia el hardware de tu Chromebook (problemas con la batería)

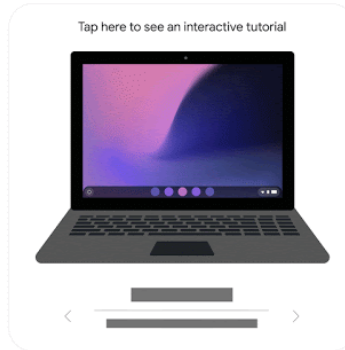

Si tu Chromebook no se carga adecuadamente, reinicia el aparato siguiendo las instrucciones a continuación.




Reestablecer tu Chromebook:

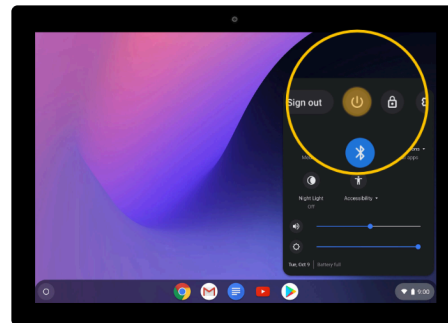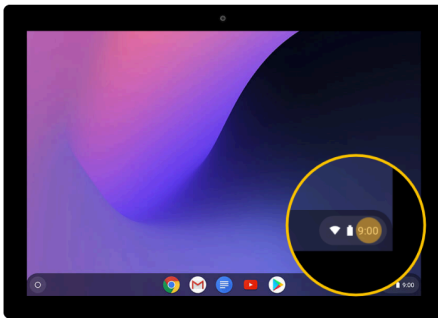1. Apaga tu Chromebook seleccionando el botón de la hora en la parte inferior derecha de tu pantalla. Selecciona el botón de Encendido  para apagar el aparato.



2. En el teclado de tu Chromebook, oprime por unos segundos el botón de Actualizar  junto con el botón de Encendido  hasta que el Chromebook se vuelva a encender.



3. Cuando el Chromebook encienda, soltar el botón de Actualizar . Tu Chromebook ya está listo para usarse.