

STKB003 Chromebook Trackpad - Right-Clicking

The trackpad for your Chromebook is located at the bottom of your device in the center. This trackpad will work as your mouse, or way to move the pointer and other objects around your screen



To Move the Pointer on your Screen:

Move your finger across the touchpad.

To click the trackpad:

Press or tap the lower half of the touchpad.

Contact the Help Desk with any questions.

tech@st.southallegheny.org