

FAST DRAW INSTRUCTIONS

ONE, TWO, THREE OR FOUR PLAYERS - - 3 BALLS PER PLAYER

INSERT COIN OR PRESS CREDIT BUTTON TO RESET MACHINE.

REPEAT FOR ADDITIONAL PLAYERS

POINTS ARE SCORED AS INDICATED.

COMPLETING A-B-C SEQUENCE DOUBLES BONUS VALUE. BONUS SCORES

DOUBLE ON LAST BALL OR TRIPLE IF A-B-C SEQUENCE IS

COMPLETED. COMPLETING EITHER GROUP OF DROP TARGETS AND

A-B-C SEQUENCE LIGHTS CORRESPONDING HOLE ALTERNATLEY FOR
SPECIAL. COMPLETING BOTH GROUPS OF DROP TARGETS RESETS
CENTER DROP TARGETS FOR 5000 POINTS.

A-B-C SEQUENCE AND DROP TARGETS RESET AFTER EACH BALL.

CENTER BUMPER SCORES 10 OR 1000 POINTS WHEN LIT.

BONUS IS SCORED AFTER COMPLETION OF BALL IN PLAY.

A TILT DOES NOT DISQUALIFY A PLAYER.

379

B-15946-3

