

Wulling Hall

Access points are on the following jacks.

"01-006-01-00110-AT"

"01-006-01-00140-AM"

"01-006-02-00220-AG"

"01-006-02-00232-AB"

"01-006-02-00240-BQ"

"01-006-03-00310-AI"

"01-006-03-00322-AA"

"01-006-04-00410-AZ"

"01-006-04-00422-AA"

"01-006-04-00430-BY"

 


BUILDING NAME	WULLING HALL
BUILDING NUMBER	006
FLOOR NUMBER	FIRST FLOOR



BUILDING NAME WULLING HALL
BUILDING NUMBER 006
FLOOR NUMBER SECOND FLOOR


FILE NAME 0100602
DATE 06/04/1997
SHEET NO. 2 OF 5





BUILDING NAME	WULLING HALL
BUILDING NUMBER	006
FLOOR NUMBER	THIRD FLOOR

FILE NAME	0100603
DATE	06/04/1997
SHEET NO.	3 OF 5

 



BUILDING NAME	WULLING HALL
BUILDING NUMBER	006
FLOOR NUMBER	FOURTH FLOOR
FILE NAME	0100604
DATE	12/15/1998
SHEET NO.	4 OF 5





BUILDING NAME	WULLING HALL
BUILDING NUMBER	006
FLOOR NUMBER	FIFTH FLOOR

FILE NAME	0100605
DATE	01/17/2014
SHEET NO.	5 OF 5

