

AquaGlide Dishwasher

Guide

Important Safety Instructions



Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

WARNING: When using the dishwasher, follow basic precautions, including the following:

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Use only detergents or rinse agents recommended for use in a dishwasher, and keep them out of the reach of children.
- When loading items to be washed:
 1. Locate sharp items so that they are not likely to damage the door seal; and
 2. Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- Do not operate the dishwasher unless all enclosure panels are properly in place.
- Do not tamper with controls.
- Do not abuse, sit on, or stand on the door, lid, or dish racks of the dishwasher.

Installation

1. Install Drain Hose:




- Attach the drain hose to the dishwasher and route it to the drain.

2. Connect Water Supply:

- Attach the water supply line to the dishwasher inlet and the water valve under the sink.

3. Electrical Connection:

- Turn off power. Connect wires according to the dishwasher's wiring diagram and secure them with wire nuts.

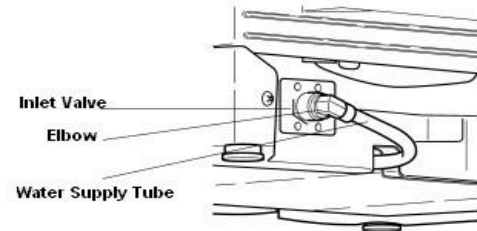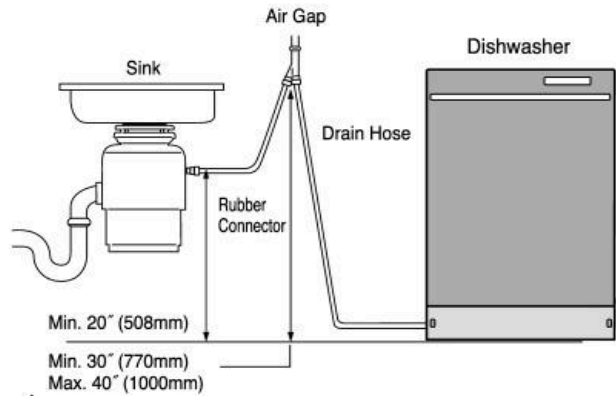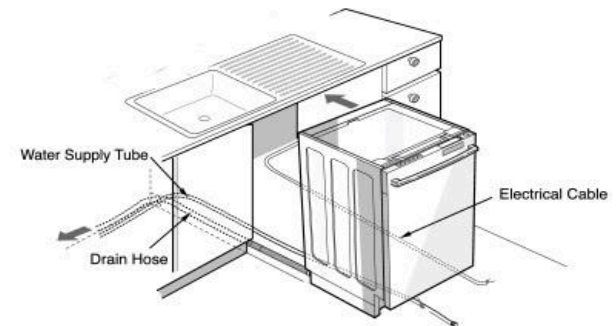

Operation

1. Load:

- Place dishes in racks and utensils in the basket.

2. Add Detergent:

- Fill the detergent dispenser.

3. Select Cycle:

- Choose the wash cycle based on your load.

4. Start:

- Close the door and press "Start."

Troubleshooting

Problem	Solution
NOT STARTING	Check Power: Ensure the dishwasher is plugged in and the circuit breaker is on. Door Latch: Make sure the door is properly closed and latched.
NOT DRAINING	Check Drain Hose: Ensure the hose isn't kinked or clogged. Inspect Filter: Clean the filter if it's clogged.
NOT CLEANING PROPERLY	Load Correctly: Ensure dishes aren't blocking spray arms. Check Spray Arms: Make sure they aren't clogged or obstructed.
LEAKS	Inspect Hoses: Check for loose or damaged hoses. Door Seal: Examine the door seal for any cracks or damage.
STRANGE NOISES	Check for Objects: Remove any foreign objects from the spray arms or filter. Inspect Racks: Ensure racks are properly positioned and not rubbing against the spray arms.
WATER TEMPERATURE ISSUES	Check Water Heater: Ensure the water heater is set to the correct temperature (usually 120°F or 49°C).
ODORS	Clean Filter: Regularly clean the filter and check for food debris. Run a Cleaning Cycle: Use a dishwasher cleaner to remove buildup and odors.

For persistent issues contact a professional for repairs.

AquaGlide Dishwasher Warranty

Thank you for choosing AquaGlide for your home. We are committed to providing you with high-quality products and exceptional customer service.

Coverage:

- **Duration:** 5-year limited warranty from purchase date.
- **Includes:** Defects in materials and workmanship; covers parts and labor.
- **Excludes:** Misuse, accidents, unauthorized modifications, normal wear and tear, and consumables like filters.

To Request Service:

- Contact customer service at 555-9617 or AquaGlideHelp@Gmail.com, and provide proof of purchase.

Important:

- **Register:** Register your dishwasher at AquaGlide.Fresh.Com or mail in the card.
- **Maintenance:** Follow the user manual for regular upkeep.

We appreciate your purchase and are here to assist you with any questions or concerns regarding your dishwasher.



AquaGlide

555-9617

AquaGlide.Fresh.Com