



Help is Here!


Department of Technology

Upside Down Chromebook Display

Have you ever had a Chromebook's display be upside down? This can easily be fixed in just two steps.

Example:

•

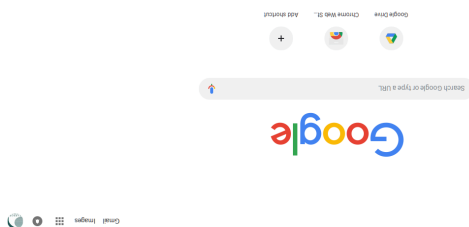

1. Press and hold "ctrl" and "shift" keys at the same time



2. Tap the "refresh" key until the screen is back to normal.



Back to normal:



Search Google or type a URL



Google Drive



Chrome Web St...



Add shortcut

