

Setting up your ShakeKit (4 shakers) or Shakekit Plus (6 shakers)

Note: shakekit PLUS has 6 shakers in 4 channels.

Use exact same instructions below.



- 1) Connect Shakekit to Power and PC (USB)
- 2) Place Shakeseat on your racing seat (Logo goes on top left. Near your left knee)
- 3) Turn on - press the On/Off Button

Detailed instructions (with screenshots):

<https://docs.google.com/document/d/16kJJ5dIXRAPjqIR85D4RPCvm17y2wDYyV0rzxcuRarY/edit?ts=5b5d0e26>

Simplified Instructions (no screenshots):

- 4) Open **Windows Sound Settings**
(in windows 11, go to **SOUNDS SETTINGS -> MORE SOUND SETTINGS**)
 - a) Find the "USB Sound Device"
 - i) Right-Click -> Configure Speakers
 - ii) Set to 5.1 (try 7.1 if you have issues with 5.1)
 - iii) Click TEST (You should hear a Tone - not a vibration) when sound is coming from L/R/RL and RR (rear or side is the same. Either should work)
 - iv) Select CENTER and SUBWOOFER ON if you have the elite or an extra BK2 connected to the shakekit
 - v) Set all speakers to FULL RANGE
 - vi) Set 48000 Hz Sample Rate Output
 - vii) Set USB sound card Volume to 90% (as starting point. You can change it later)
- 5) Open **SRS App**
 - a) Go to SETUP/HARDWARE Page
 - i) Select "USB Sound Card" as Soundcard
 - ii) Select profile 4 speakers (or Shakekit)
 - iii) SAVE
 - iv) Click on Rear Left, Front Left, Rear Right, Front Right. You should hear a vibration on the respective shaker.
 - v) If it does not work correctly, try Exit the SRS App (Right-Click on SRS tray icon - near windows clock) and re-open the SRS app.
 - vi) Go to the license page. If invalid, please contact us so we can issue a License Key (If Invalid, It stops after 5 minutes)
 - vii) Go to GAMES tab and ensure your game is "Ready to play"
 - viii) Read the tuning guide:
<https://www.simracingstudio.com/forum/shake-profiles/srs-2-0-shake-tuning-guide>

**Please make sure the USB Sound card is NOT the DEFAULT sound card for windows. If not, all PC and Game sound will come out from the Shakekit shakers.
Select another device to be the default (not the "USB SOUND DEVICE")**

For troubleshooting, please click here

https://docs.google.com/document/d/1_145S90p-36a6lwQd7Clw549_u_Pou7q911g5bOgyhl/edit

Enjoy it