


TCS Geovision NVR

PTZ Rotation


1. Toggle to show/hide PTZ control panel.




2. Choose PTZ camera button.

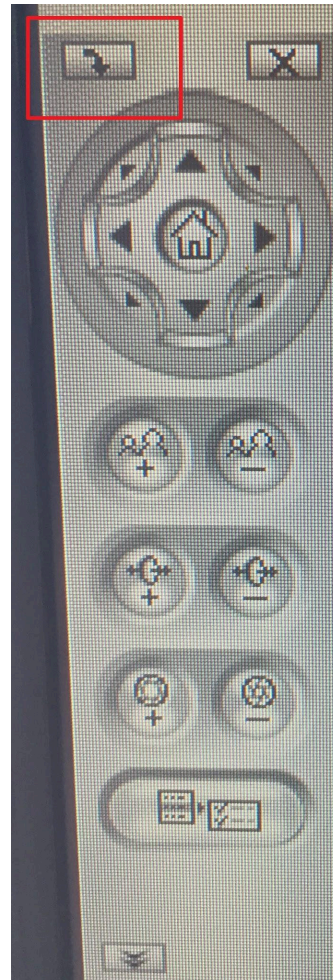

3. In this example “East (North PTZ)” chosen.

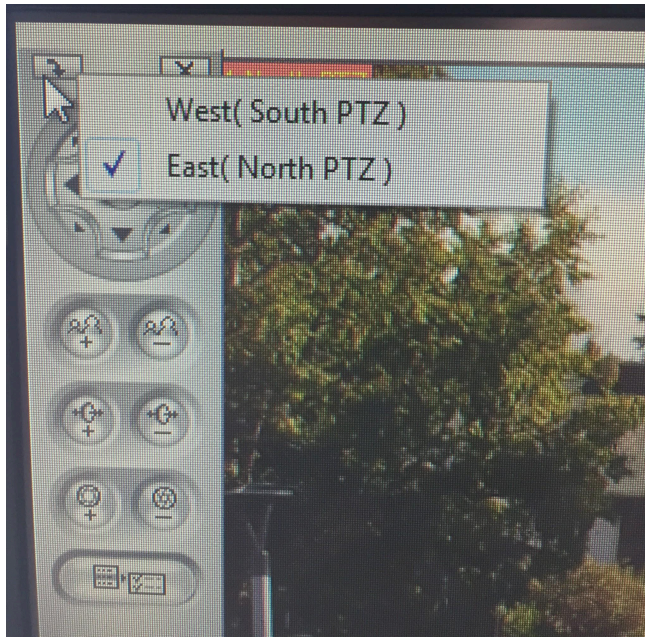

4. Start a rotation button.

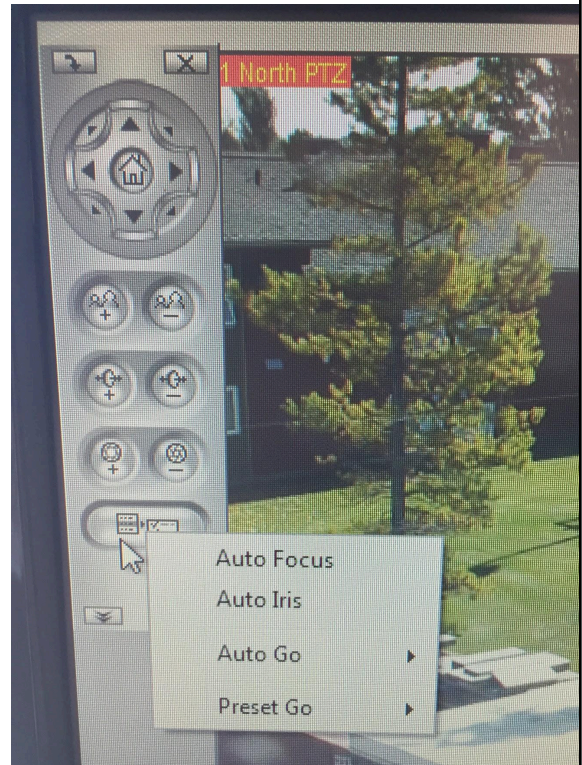

5. In this example Auto Go > Go **Cruise 2** rotation is started (Cruise 2 presets were defined beforehand).

