

TRIP ESSENTIALS

Wanderlust is easy to drive and to enjoy staying in; however, as this may be your first time in our campervan, we've jotted down some simple instructions which you may need and find useful to read in advance, and refer to at any point.

The KEYFOB has 3 buttons. The button closest to the ignition knob just opens the front cab. The bottom one just opens the side and rear doors. The middle button locks ALL DOORS when pressed once, and sets the van alarm when pressed for a second time. To lock the cab at night, press the lock button once and press the rear unlock button.

DOOR STOPPERS

The door stoppers need to be fitted while driving to prevent anything from escaping. The fridge door stopper is slightly longer than the others and is marked with a white dot.

Please make sure these are removed before the bed is lowered.

POWER

The main battery bank is in the front underseat storage unit, but there should be no need to go into this cabinet. It will display the % of power remaining.

The power green button should always remain on. Please do not switch off.

The consumer/Control unit is on the wall panel cupboard.

The control panel/consumer unit contains all switches for the Lighting, Water pump/heater, fridge, and sockets.

There are two 240V plug sockets. If using solar and not mains hook-up, please DO NOT OVERLOAD USAGE, i.e., air fryer and kettle, at the same time, as this will drain the battery very quickly and will trip the power pack.

FRIDGE

The FRIDGE switch on the control panel should always remain on to avoid it defrosting.

Please think about how your contents are packed away, to avoid things moving around and spilling or breaking in transit.

If using mains hook-up, switch the rotary lever (in the consumer/Control unit) to MAINS. If going off-grid and using solar panels, switch the rotary lever to POWER PACK. - The rotary switch relates to the Fridge and sockets only.

TABLE

The table is a simple pull-out, secured for driving with a bolt. Please make sure this is unlocked before use and bolted again before driving anywhere.

TOILET

Not a topic a lot of people like to talk about. The toilet is located in the shower to the right.

Simply press the yellow lever to release the drawer and pull it out. To push back in, press the yellow lever again, keeping it down until it locks and the door is flush with the wall.

The chemical toilet instructions can be found in the bottom cupboard next to the toilet, eco-friendly liquid.

WATER PUMP - SHOWER AND SINK

There is a cold water multi-functional tap fitted to the sink unit and bathroom. This water is *ok* for boiling, washing plates, and teeth, etc - we recommend buying drinking water to drink.

To use the water pump:

- Turn the water pump switch on
- Connect the hose pipe to the fresh water tap at the campsite
- Fit the hose connector to the van & connect the hose
- Turn the red lever to a horizontal position
- Turn on the water supply tap
- While filling, press the 'TANK TEST' button (provides the level of water) takes 100 L. When all lights are lit, the tank is full. The single red light means you are using the reserve.
- When full, turn the red lever up
- Unhook hose

BEFORE TURNING THE WATER HEATER ON - RUN THE HOT WATER TAP TO ENSURE THERE ARE NO AIR LOCKS BEFORE SWITCHING ON THE ELECTRIC HEATER.

- Turn the water heater switch on - turn off when driving.

PLEASE NOTE: WHEN THE WATER PUMP IS CONNECTED TO THE MAINS, THE WATER CAN BECOME VERY HOT, SO PLEASE TAKE CARE WHEN RUNNING THE TAP.

WATER HEATER

If not using a mains hookup, turn the water heater switch on in the consumer cupboard.

If on mains hookup, the water heater will start automatically.

The water heater can be switched on or off by the switch under the hob cupboard (the on/off switch is next to the red light). **Turn off at night to save power.**

LIGHTS

To operate the lights, turn the light switch on in the consumer cupboard.

Use the remote control located by the door for on/off, dim/bright, etc

The shower light is located outside the shower door by the fridge.

GREY WASTE/WASTE WATER

The wastewater tank is located in the rear door cupboard.

Place the tank flat on the ground on the driver's side next to the grey outlet cap.

Remove the grey cap, connect the white flow pipe, and place the angled end into the waste tank hole.

Please make sure you put the caps in a safe place.

To refill the large 100L water tank without a hose pipe, you need to use the refillable water container provided, located in the right rear cupboard. Please store the water tank empty when placed in the cupboard. Thank you.

HOB/HEATER

The heater/hob runs off diesel and its own power supply.

To turn the heater on, make sure the hob lid is down. Press the white switch on the control panel to the right until the red light comes on, then press again so the green light appears.

To operate the hob, lift the lid and press the white knob so the red light appears, both rings will heat up, the one to the left is the stronger of the two.

PLEASE NOTE - MAKE SURE A PAN OR SAUCEPAN IS PLACED ON THE HOB AND ALSO NOTE THE HOB GETS VERY HOT, SO BE SAFE WHEN USING IT.

To turn off, press the white knob until the lights go out on the control.

Extractor Fan

The extractor fan switch is located in the cupboard above the hob. Useful to use when cooking, and when the side door is shut.

DRIVING

PLEASE LET US KNOW IMMEDIATELY IF ANY WARNING LIGHTS COME ON!

NB: RED ARE WARNING AND REQUIRE URGENT ATTENTION, AMBER ARE ADVISORY WARNINGS BUT SHOULD NOT BE IGNORED.

On your adventure, you may want to go to beaches and down country lanes. Be advised, Wanderlust is over 3000kg and will sink in soft sand. As it's also Front Wheel Drive, it will struggle getting out of even shallow depressions if the ground is soft or loose.

GROUND CLEARANCE

It is important to allow enough ground clearance when going over uneven ground or speed humps.

The most common ways of grounding out are if you are suddenly changing the degree of incline/decline going onto park ups or steep roads, or mounting the curb.

If you are not sure whether you have enough ground clearance, then please get out and check before proceeding!

DIMENSIONS

Wanderlust is much longer than your average car, so obstacles need to be given a much wider berth.

Wanderlust is nearly 2.6m high, 6.1m long and 2.4m wide (with wing mirrors extended).



BATON DOWN THE HATCHES

- Stow away anything in the kitchen cupboards - make sure everything is tight, otherwise you will have a noisy journey!
- Try to make sure the pans in the cupboards are arranged so they don't move around too much.

FUEL

- Wanderlust uses **DIESEL**; the fuel cap is under the panel next to the passenger door.
- You will collect Wanderlust with a full tank; please return it full.

INSURANCE POLICY

- Motor insurance policy number: 26/BV/29428246/08
- Arranged by: Allianz

IN CASE OF AN ACCIDENT, PLEASE ENSURE YOU TAKE PHOTOGRAPHS AND DETAILS OF ANY OTHER VEHICLE INVOLVED, AND WITNESSES IF APPLICABLE.

BREAKDOWN INFORMATION

- Breakdown cover is provided by RAC
- Roadside Recovery: 01603 216366
- Policy number: MCAB70VR01
- Policyholder's name – Amanda McCallum
- Vehicle Details - Vauxhall Movano MJ16XMX

24-HOUR EMERGENCY HELPLINE – 01603 216366

- Roadside Assistance
- Cover at home
- Nationwide Recovery.

WHEEL JACK AND BRACE

These are located under the driver's and passenger seats. The spare tyre is under the rear of the van. Always change a tyre on a solid flat surface. NEVER GO UNDER ANY VEHICLE WHEN IT IS JACKED UP!

If you have any queries whilst out on your adventure, no matter how small they may seem, please call/text/WhatsApp me on: 07944694878 or email:
amandamccallum1904@gmail.com

KEEP SAFE AND ENJOY YOUR TRIP IN WANDERLUST!