

Change Printer Network & Password Using Wireless setup - Using the control panel

1. Gather these settings for your wireless network:

SSID (Network Name)	The name of your Wireless Network or Access Point.
Network Key	The Security Key, Encryption Key, WEP Key, Passphrase or password to connect to your network.

 If you're not sure about any of these settings, we may be able to help you find them. Click [here](#)(Opens in a new tab) for assistance.

- Click [here](#) for video instructions.

2. Have you previously set up your Brother machine with a wireless network connection?

- Yes: Reset your machine's network card. Click [here](#)(Opens in a new tab) for instructions.
- No: Go to [step 3](#).

3. Start the wireless Setup Wizard:

- Press ▲ or ▼ to display **Network** and then press **OK**.
- Press ▲ or ▼ to display **WLAN** and then press **OK**.
- Press ▲ or ▼ to display **Setup Wizard** and then press **OK**.

4. If **WLAN Enable?** is displayed, press ▼ (On). Your machine will search for and display a list of available networks.

 If your network is set to hide the network name, then it will not appear in the list. Click below for instructions on how to manually add your network name.

Add your network name

5. Press ▲ or ▼ to display your network name and then press **OK**.



If your network has an Open System and does not use a network key, then the machine will now try to connect. Go to [step 8](#).

6. When prompted, enter your network key and then press **OK**.



Click [here](#) for help with how to enter text on your machine.

If you're prompted to use WPS, you may do so if you don't know your wireless network key.

7. If prompted, press ▼ (Yes) to apply settings.

8. Your machine will try to connect to your wireless network.

- If **Connected** is displayed on the LCD, then the connection was successful. Press **OK** and then go to [step 9](#).

- If **Wrong Network Key** is displayed on the LCD, then the password or security settings that you entered don't match your wireless network's settings. Press **OK**. An error report will print with details. Click [here](#) for helpful troubleshooting steps to help fix this.

- If **Connection Fail** is displayed on the LCD, then your machine did not successfully connect to your network. Press **OK**. An error report will print with details. Click [here](#) for helpful troubleshooting steps to help fix this.



The Brother machine only supports WPA2-PSK with AES. If your network uses WPA2-PSK with TKIP you'll receive the "Connection Fail" error. You may also receive this error if you manually enter the wrong Authentication or Encryption method.

9. Wait about a minute and then print the Network Configuration report to verify that your Brother machine has acquired a valid IP address from your router. Click [here](#) for instructions.