

# Universal Laser system software installation


The laser cutter control software can be installed on any windows computer for testing, even if it is not connected to the machine.

**Note:** It will instal a printer driver aswell as the control panel software on your machine

Firstly go to the ULS downloads webpage [here](http://ulsinc.com/support/software-downloads).

Select **“UCP installer”** from the drivers drop down menu, then click download.

Run the installer.

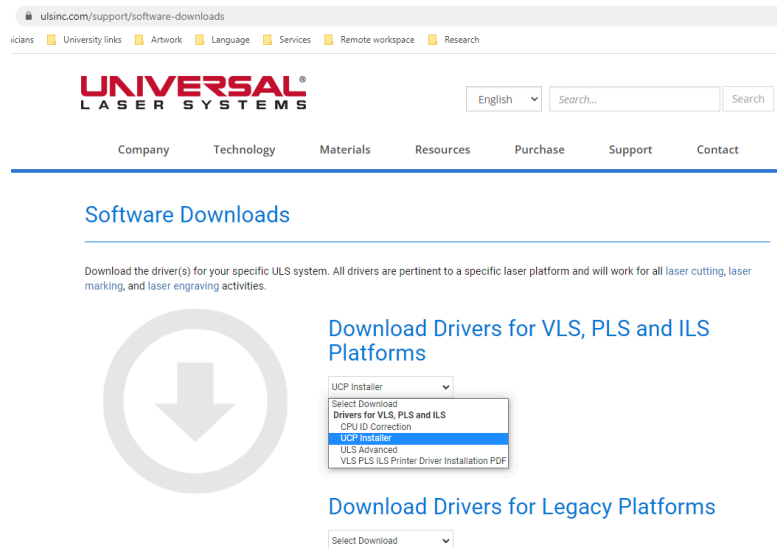

Select the ILS Platform.

Confirm installation of **“Universal Control Panel”** and **“Print Drivers”** as both are needed.




Select the Engraver model -  
**"ILS9.150D"**

Click next and install the software.

Reboot the machine when requested to.

Apon restart UCP will be installed Just as on the Laser cutter computers and a new printer "ILS9.150D" will be available.

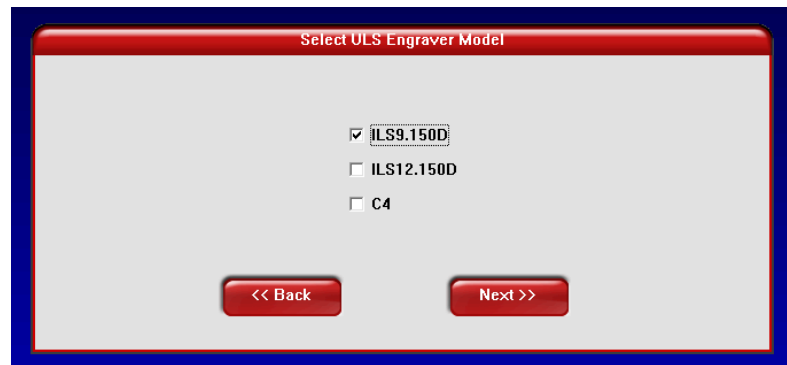

You can now send designs to the UCP program to test designs are coming through correctly and getting times estimates for your job using the "Estimate View" menu and clicking "Start" to simulate the job.

