


Screen and Knob Brightness Adjustment and Screensaver Settings Tutorial


This tutorial applies to all **DMP Streamer Series**.

I. Screen Brightness Adjustment

1. Access the home page of the streamer, go to **Settings > Display > Screen brightness**.

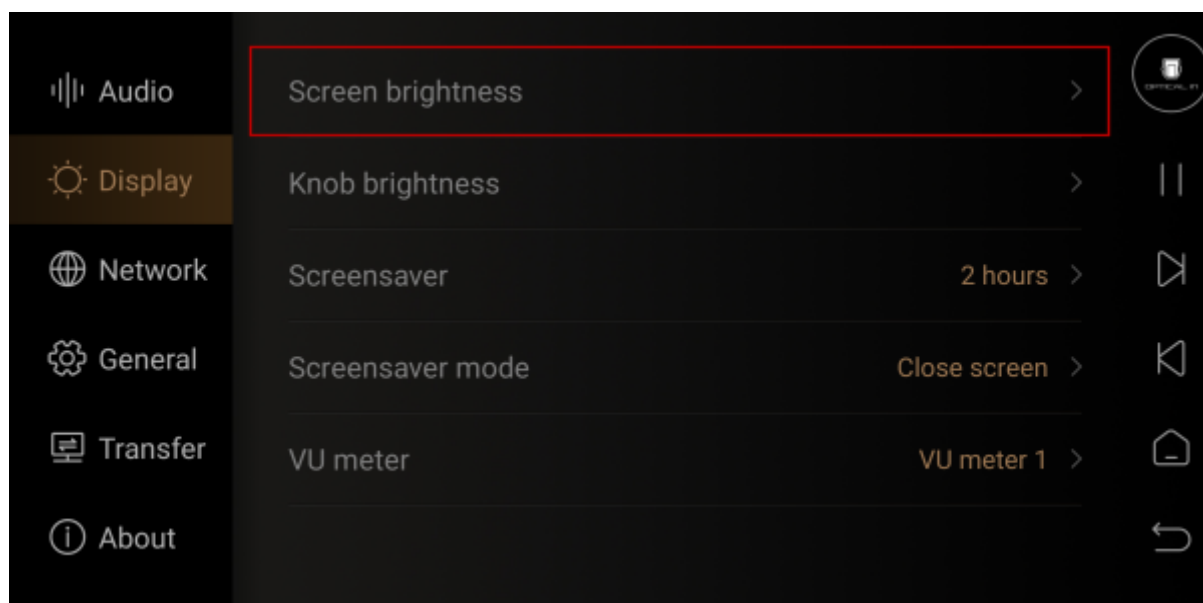


Adjust the brightness slider to set the brightness of the front screen.

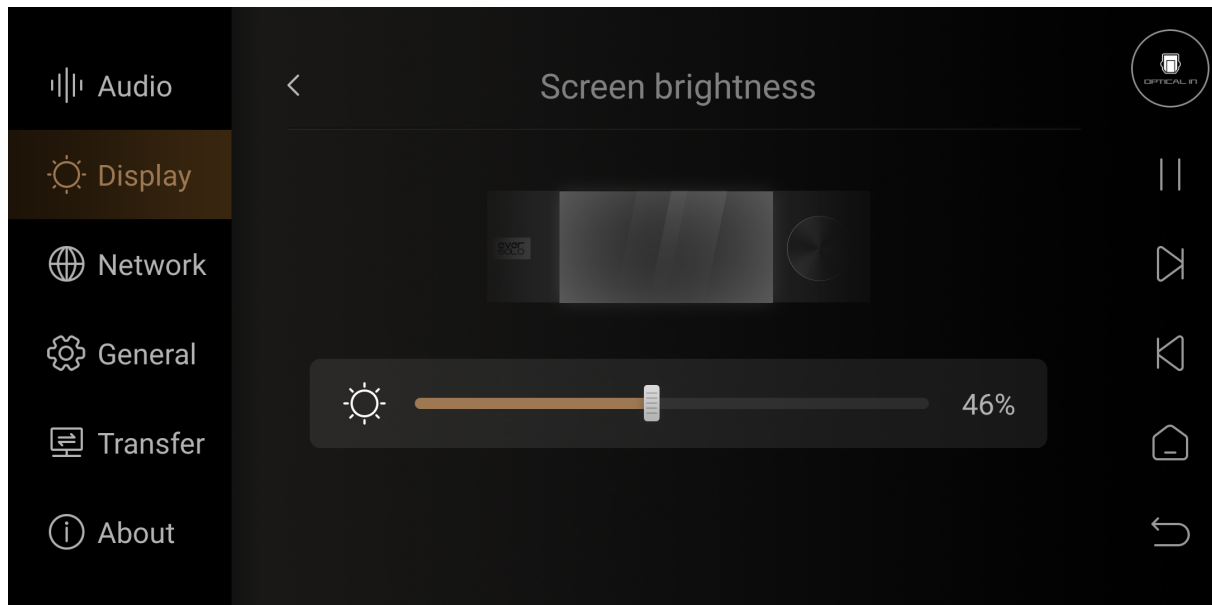


II. Knob Brightness Adjustment

1. Click on “Knob brightness” from the display menu.

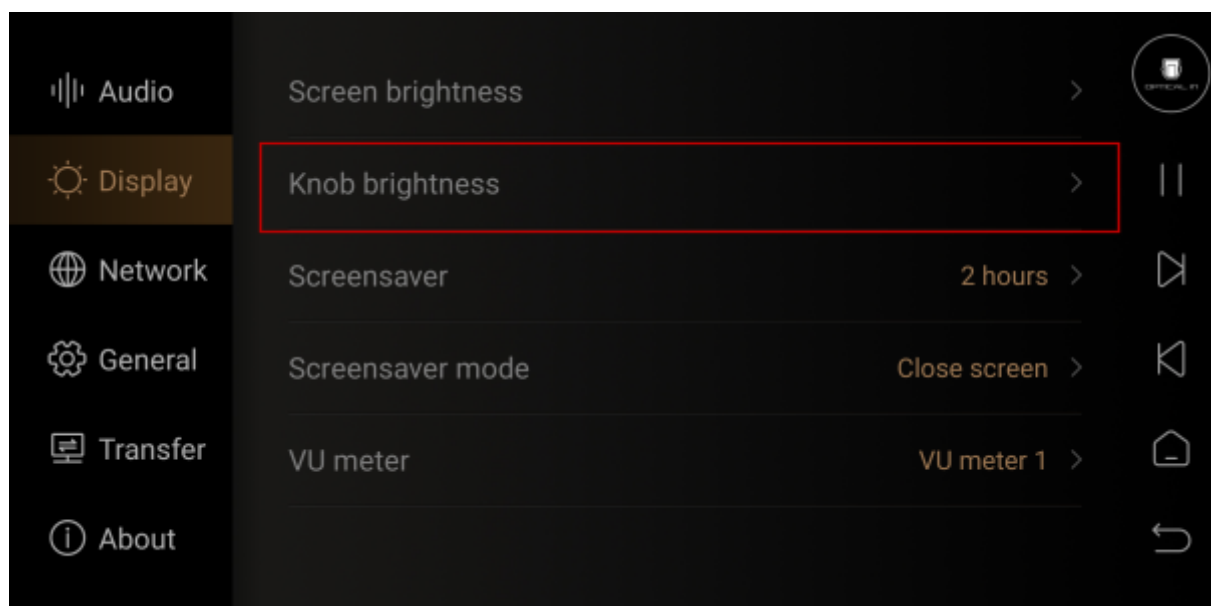


Completely extinguish when shutting down: When this option is enabled, the knob LED ring on the streamer will turn off completely after the device is powered down.

Knob brightness: Adjusts the brightness of the knob LED ring in the streamer's powered-on state. When set to the lowest level, the knob LED will turn off completely.

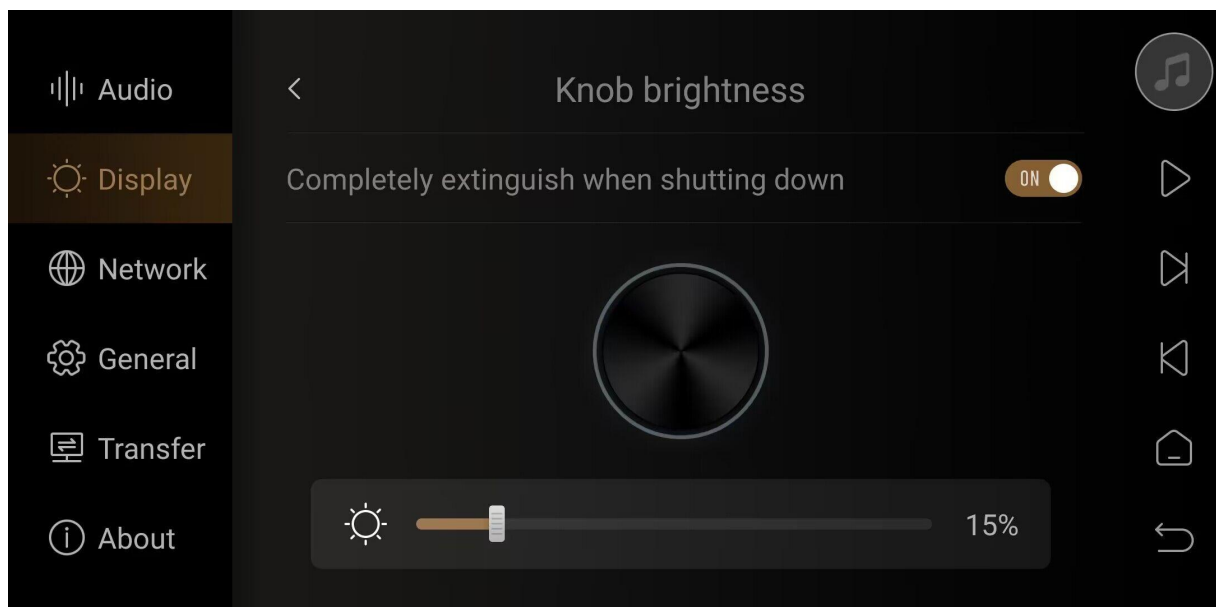


III. Screensaver

Click on “Screensaver” from display menu, then you can set Screensaver automatic wake-up function.

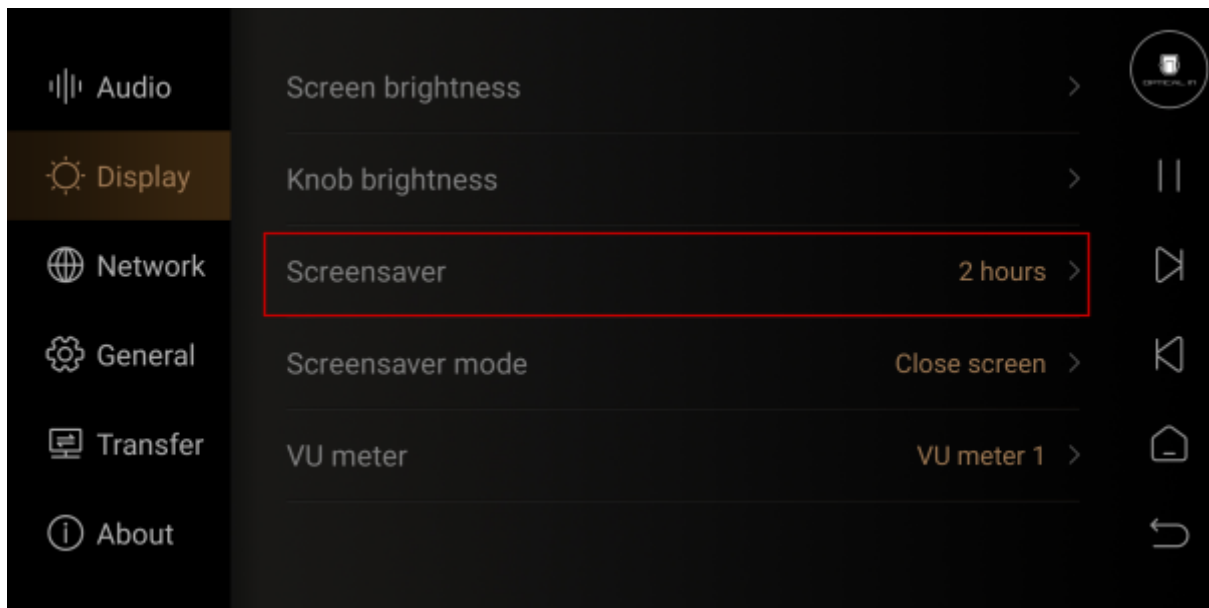


The default setting is 2 hours, and there are also options for 5, 15, 30 minutes, and 1 hour. (If you select 2 hours, then the screensaver will appear after 2 hours' inactivity.)

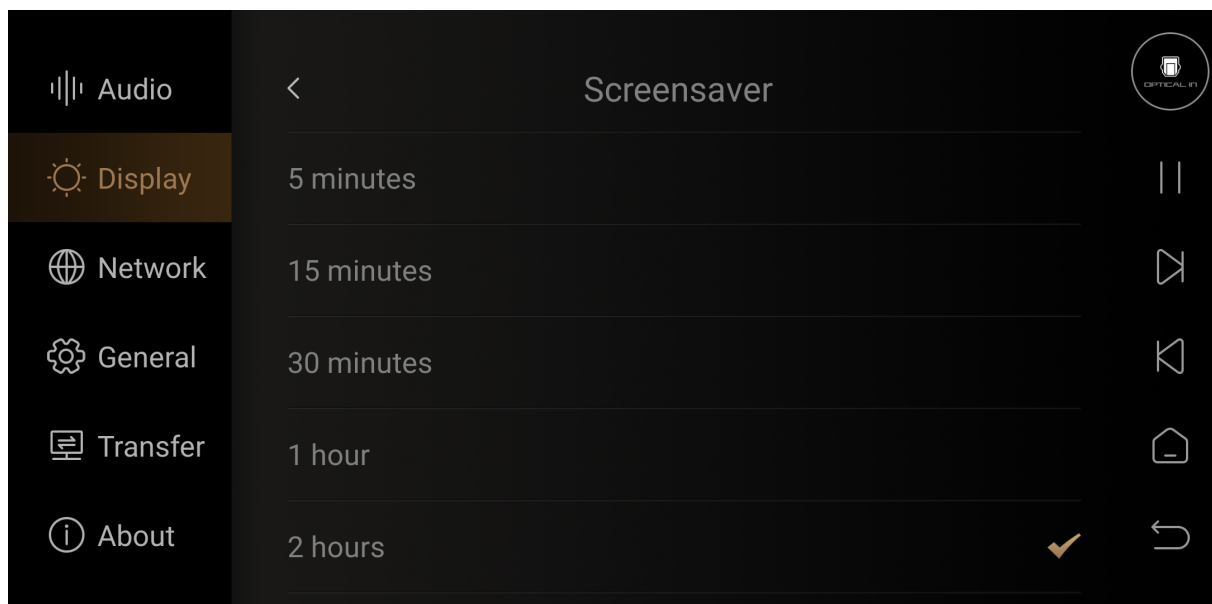

IV. Screensaver Mode

Click on “Screensaver mode”, then you can choose the display mode when activating the screensaver.

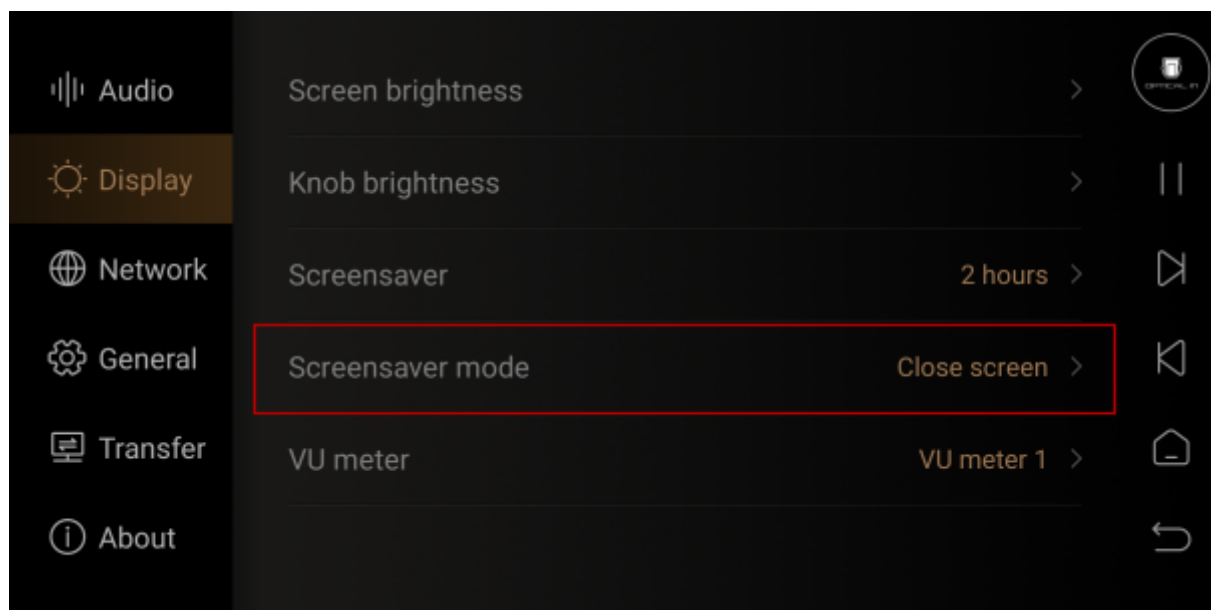

The device provides four modes. Please choose accordingly based on your needs.

