


APARTMENT'S DOOR GUIDE


NAME	FUNCTION
1. Keypad	Enter the entering code
2. Battery warning light	Turns on with an audible alarm when the battery charge is low
3. Emergency power terminal	In case the battery is completely discharge, a 9V battery can be placed here to provide enough power to access the unit
4. Outdoor handle	It is used to open or close the doors from outside the suite

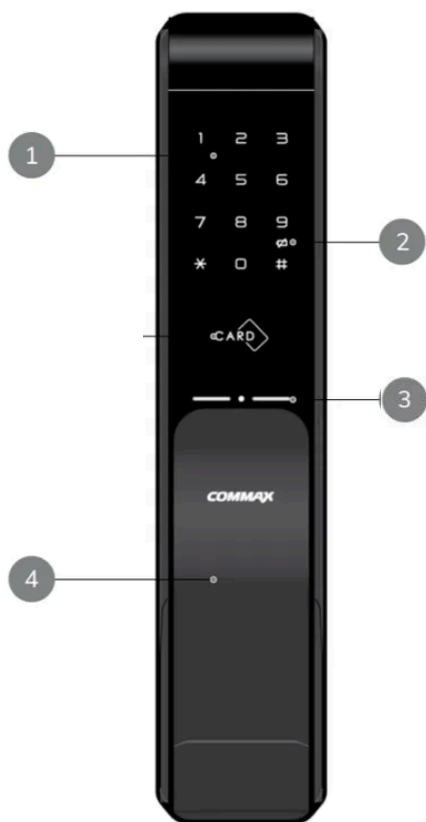


OPENING DOOR FROM OUTSIDE

- Tap the keypad screen (it will beep and light up)
- Insert all the code's number in the right sequence
- Press start (*)
- Pull the handle to open the door


CLOSING THE DOOR

From the inside		From outside	
	Find the bottom in the form of a transparent line behind the lock. Press the button, it		By tapping in the black screen you will be able to close the door

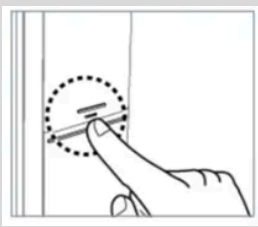

will light a blue light
and the door will close

Wall pad - Apartment control

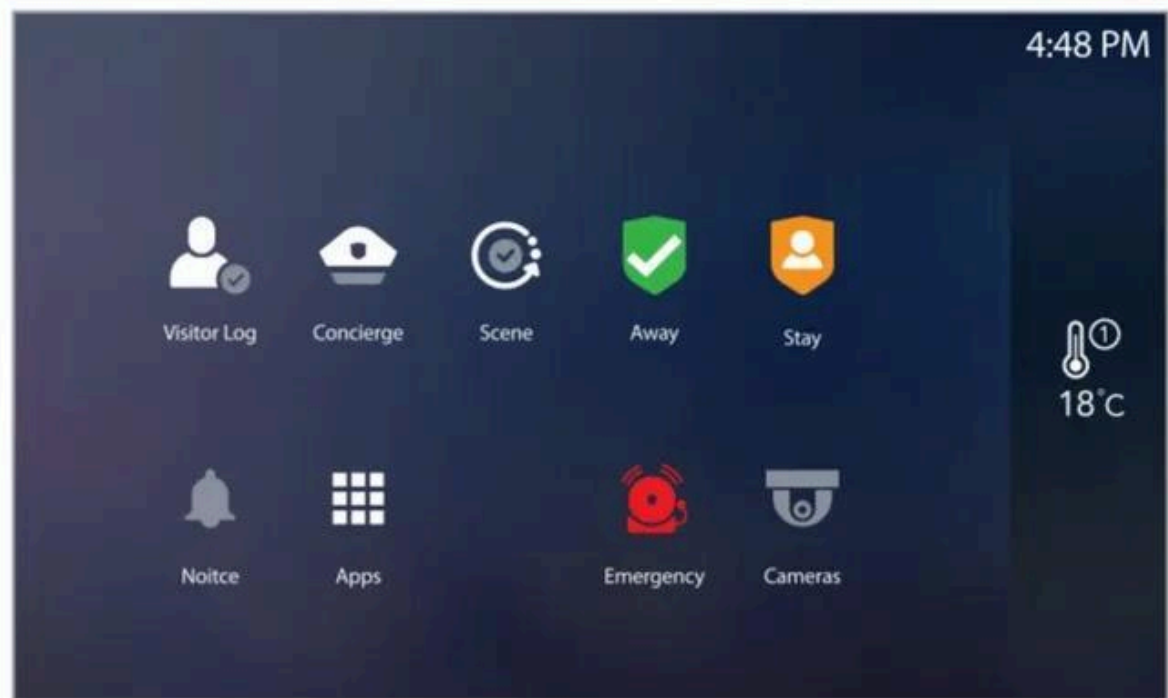

Wall Pad Home Screen.



VISITOR LOG

View and manage the captured images of visitors



CONCIERGE

Call the Concierge



AWAY

Set the 'Away Mode' security setting



STAY

Set the 'Stay Mode' security setting



NOTICE

View and manage posted notices



APPS

Installed apps



EMERGENCY

Activate suite alarm



CAMERAS

View Security Cameras within your community



THERMOSTAT

Set and program thermostat(s)



SCENE

Program or activate desired "Scene"


0

THERMOSTAT - A/C & HEATING SETTINGS



⚙️ If your suite is integrated with HVAC thermostat controls the following describes how to control it.

The thermostat(s) for your suite can be accessed by pressing the 'Thermostat' icon on the right edge of the home screen. The temperature displayed on the icon is the current suite temperature. If your home has multiple thermostats, there will be more than one icon displayed and you can set each thermostat independently. The thermostat setting screen is shown below.

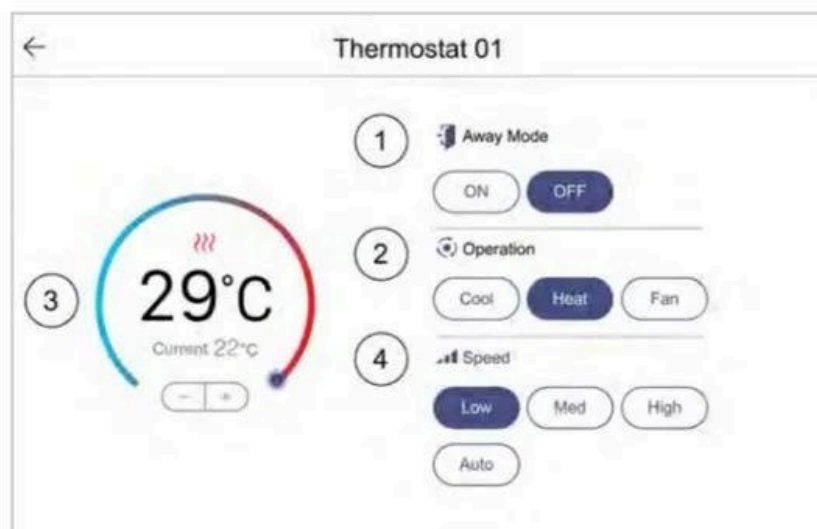

⚙️ Interface will be different based on your community HVAC

Thermostat Interface

Each thermostat can set a different temperature when in 'Away mode'. 'Away mode' is used to reset the temperature when your alarm has been activated and you're not home. This allows the option to reduce energy costs. We've numbered the features on the thermostat image above with explanations:

- ① The control button displayed is used to turn 'Away mode' On to allow you to set a desired temperature. When 'Away mode' is set to Off, normal operation continues.
- ② On the thermostat screen shown above is where the cooling, heating, or fan only function is set. Click on either Cool, Heat, or Fan as desired.
- ③ Shows where the temperature can be adjusted using the – and + symbols or by sliding the control ring.
- ④ On the thermostat screen shown above is where the fan speed is set. When Auto is selected, the fan coil will automatically set the optimal speed for the unit. Selecting Low, Med, or High will set the fan speed and override the Auto setting.