

FT DX 10

Set freq and mode

Press M, move to the memory channel that you want to save to and press and hold M

Set Name if you want to

Back

Enter Freq

Press last 3 digits on screen and enter your freq and then the Mode button to change the mode

Hold STEP/MCH button to it blinks, turn back big dial to switch between memories or groups.

Enable Groups

F button

Ops Settings

Mem Groups

Turn ON

Back and back again

Activate Groups

Press F

Press M-Group

Group 1 is M01 to M19

Group 2 is M20 to M39

Group 3 is M40 to M59

Group 4 is M60 to M79

Group 5 is M80 to M99

PMS Channels are M80 L/U to P9 L/U (Chapter 6)

Waterfall

F

Level (adjust it to it looks like blades of grass)

Rotate the F button to adjust

## Memory Storage

1. Set the frequency, mode, and status, as desired.

2. Press the [M] key.

The memory channel list will be displayed.

3. From the channel list, touch and select the desired memory channel

Alternately, the memory channel may be selected by rotating the [FUNC] knob.

4. Press and hold the [M] key to store the frequency and other data into the selected memory channel.

- This method may also be used to overwrite the contents previously stored to a memory channel.

5. Touch [BACK] or press the [M] key, the memory is stored and the screen returns to normal.

## Labeling Memories

Alphanumeric labels ("Tags") may be appended to memory channels, to aid in recollection of the channel's use (such as a club name, a location etc.).

1. Press the [M] key.

The memory channel list is displayed.

2. From the channel list, touch and select the desired memory channel.

Alternately, the memory channel may be selected by rotating the [FUNC] knob.

3. Touch [NAME] area on the screen.

The character input screen will be displayed.

- The character input screen may also be displayed by pressing the [FUNC] knob for 1 second, then, rotate the [FUNC] knob to select [NAME], and then press the [FUNC] knob.

4. Touch a character key on the display to enter the letters, numbers, or symbols of the desired label.

Up to 12 characters may be used in the creation of a label

5. Touch [ENT] .

If the character input screen is displayed by a long press of the [FUNC] knob in step 3, touch [BACK] or rotate the [FUNC] knob to select [BACK] and press the [FUNC] knob to return to the state of step 1.

To add a label to another memory, repeat steps 2 to 5 above.

6. Touch [BACK] or press the [M] key to save the new settings and return to normal operation

<https://www.manualslib.com/manual/2150765/Yaesu-Ftdx10.html?page=72#manual>