

ByteTech RoadPad Document 02

Any memory checks that will fail on the system POST (Power-on self test) should give a 2 beep or 5 beep sequence.

Beep code	What it means
1 beep, pause	Incompatible RAM types are installed
2 beeps, pause	Bad SODIMM RAM bank in slot 1/4
3 beeps, pause	Bad SODIMM RAM bank in slot 2/4
4 beeps, pause	Bad SODIMM RAM bank in slot 3/4
5 beeps, pause	Bad SODIMM RAM bank in slot 4/4