

## E22 add prefix F7:

Please use E22 to read configuration code as below(only 1 code):



889002991C.