

 
PuniRunes Guide (Punirunzu)

Note: Translated into English from the original Japanese user guide. Author used both personal knowledge of Japanese (beginner) and google translate for most translations. Wording was also rearranged to be more easily understood in the English language.

For ease of access, an external source is linked to view the “passwords” screen answers as well as translations for the fortune-teller game. Also linked are some English YouTube channels/videos with helpful user guides, as well, for visual learners. These videos, FAQs, and more are at the end of the guide!

Enjoy!

Name of each part

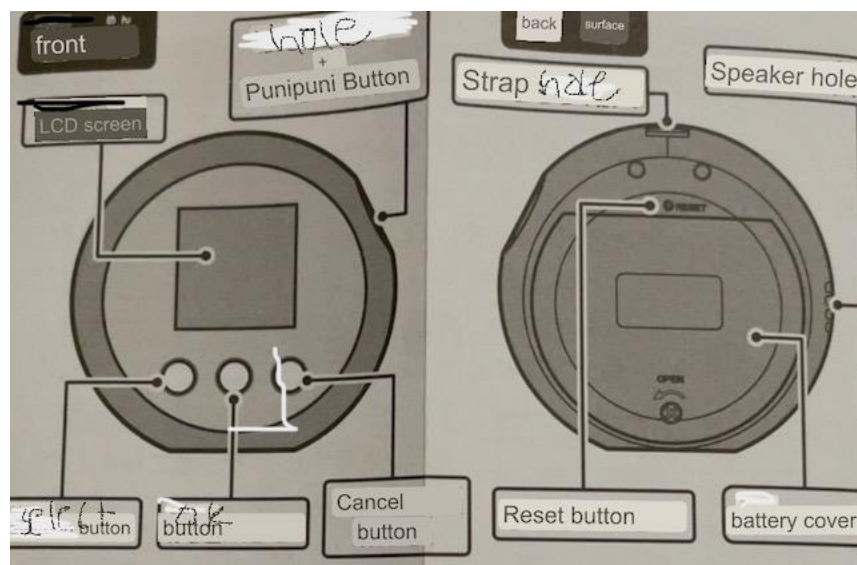

Front:

LCD Screen

Mystery Hole + Punipuni Button

Selection Button, Enter Button, Cancel Button

Back Side:

Strap Hole

Speaker Hole

Reset Button

Battery Cover

To Power On / Power Off

If you hold the enter button for about two seconds, it will turn on.

Press and hold the enter button for about two seconds to turn it off.

If no button is pressed for about one minute, the display will automatically power off.


Resetting

When you insert the battery, lightly press the reset button with a thin stick. Even if you press the reset button, the saved data will not be deleted.

Preparation before playing

How to insert the battery:

1. Open the battery cover on the back of the main unit. (Loosen the screw with a Phillips)
2. Insert 3 AAA Alkaline batteries (Sold separately). Check the plus (+) and minus (-) sides carefully and set them correctly.
3. Replace the battery cover and tighten the screws.

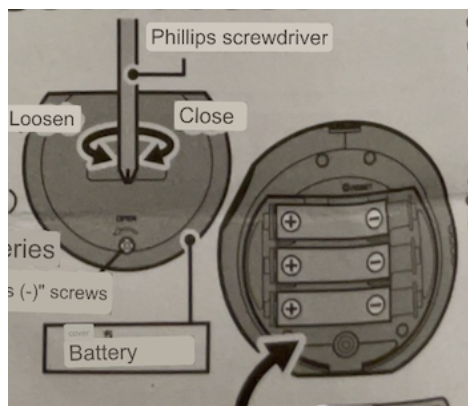


Labels on photo:

Loosen
Close
Phillips screwdriver
Battery

NOTE: Batteries should be replaced by a guardian

When to replace the batteries:

When the battery level is low, the screen below is displayed. In that case, replace all three AAA batteries with new ones. Insert the batteries by referring “how to insert the batteries” above. Reseat the battery cover and press enter.

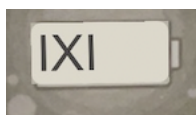

Initial Settings (See photo below)

Date Screen:

When you press the select button (far left) the number will increase so press the enter (center OK) button when the current year is selected, then the month and day settings are also set here (in that order). If you want to go back one step press the cancel button (far right button).


Time Screen:

(Set in military time)

When you press the selection button, the number will increase, so set it to the current time. Press the enter button in the same way as the date screen. If you want to go back one step press the cancel button.

Basic Play

Petting the punipuni a lot while on the room screen will make Punirunes happy! Push the button to the front, back, left, and right to pet and move Punipuni. Press and hold the punipuni button down to release it and makes punirunes jump. If you hold it down and move it left or right, it will jump in the direction you choose.

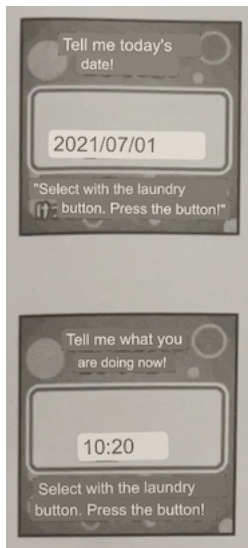

Please Note: Buttons should not be scratched or pulled strongly with your fingernails, but you should gently use the pad of your finger instead.

Pay attention!

If you leave it alone for too long or if it gets hungry, Punipuni will lose its energy, making it sad. If you give it food or play a game, it will jump up and down with glee. If you leave Punirunes alone, you may lose energy and melt...!? If it is melted, you will not be able to select some of the menus, so pet and roll it back to its shape!

When the Puninomoto appears:

After a certain period of time, Puninomoto will appear in your room! Jump punirunes and get them!

You use Puninomoto to make food and change items you want to make. When you make or grow punirunes, you can use the red, yellow, or blue Puninomoto.

Note: If you keep your finger in the finger hole, you may not be able to operate the buttons. In that case, pull out your finger.

Osewa Menu (Menu Icons)

Rice (Food)

Give your punirunes food that you have made in your kitchen or a gummy bear

Kitchen

Make the punirunes food using recipes you bought from the market.

Cleaning

Used to clean the dust from your room. Move the punirunes around and rub the dust for a couple of seconds to clean the room.

Bath

Clean the punirunes; Especially after cleaning your room when you have the dust attached to you!

Toilet

Use when punirunes have left a circle in the bottom left of your screen (jelly poop) to wash the poop away!

Items

You can add items to your Punirunes and change its room.

Bookshelf

You can see punirunes you raised and souvenirs you've received from punirunes.

Outing

To access the market, playground, and mystery code. You can also get a new "egg" this way as well (explained later)

Friendship

Check the punipuni's hunger and happiness meter, Puninomoto count and Puni coins.

Settings

Change brightness, volume, and erase data.

Note: Punirunes sleep between 8PM-6AM. Some functions cannot be used (You can use the bookcase and friendship)

Rice (Food)

Select the food you want to give your punipuni with the selection button and then press the enter button. Use the punipuni button in the finger hole to push the food towards your pet. The number in the top left of the foods' menu shows your current number in possession of that food item (up to 99 each).

Your punirunes have favorite foods! You will get one of three reactions:

“Not good,” (has frustrated symbol)

“Normal” (music symbol) and

“Like” (heart symbol with jumping).

Foods other than the gummy bear can be made in (2) the Kitchen. You can give gummy bears infinitely without buying them. Some foods they don't like and sometimes they are full.

Kitchen

Combine the ingredients that you bought at the market (outing>market>recipes).

To make the food, press the OK button to display the detail screen. Press okay again on the yes, or “decided” button.

Note: The recipes will give you hints on how to make them before you mix them in the kitchen! Pay attention and select the right Puninomoto color(s)

Choose the Puninomoto the recipe suggests by pressing enter. There will be a mark under the selected one. You can also choose two of the same color.

Make the food by turning the punipuni button. If the combination is correct, the food is complete! If you make a mistake, a “punibone” will be created.

Cleaning

Dust appears in your room from time to time. From the menu, select the cleaning (third) option and press the OK button. Move punirunes left and right with the punipuni button to catch the dust. Dust sticks to punirunes to clean your room. Put punirunes covered with dust in the bath to clean them.

Bath

Put the dusty punirunes in the bath. Choose the bath (fourth) option and press the OK button. Wash it with the punipuni button. Even if it isn't dusty, you can still use the bath.

Toilet

Punirunes sometimes have a round poop in the room. Clean it up by choosing the toilet (fifth) option in the menu and press the OK button. Water will flow down to clean up the poop.

Items

There are two options under items: accessories and rooms. Please choose either one, then press the enter button.

Items

Buy the item you want to wear from the market (outing>market>accessories). If you select an item that is already been purchased, you will be taken to another screen to return or change its color.

You can add two colors to your items. You can also use two of the same color.

1. Press the punipuni button to change the color of the item. The original combination will change the finished color of the item!
2. Your set! If you choose change, your clothes will change. If you choose to stop, you remove the item and return to your room. If you select back, you can go back to change the color

Rooms

1. Select the room you want to change from the rooms you bought at the Market (Outing>Market>rooms). Press the OK button to change the room.

Bookshelf

The bookshelf has two options: punirunes and puni souvenirs. Select either one, then press the enter button.

My Punirunes

You can check the punirunes that you have grown so far. Select the one you want to check and press the OK button to see details and change the color (for details about growth keep reading.)

Souvenirs

Souvenirs punirunes gave you.

Check the source by checking the details (click the OK button)

Outing

Game Park

- a. Puni Mochi Game

Use the punipuni button to match the timing of Nyarune's hits. Let's make that mochi! Be careful not to get your hands caught!

- b. Wise Man*

If you press the punipuni button, you will be told a fortune. Fortune telling does not guarantee anything different will happen or any specific number of coins will be given.

- c. Punipuni Panic

When the punipuni come out of the pot, press the punipuni button. You will be stunned if you touch the thorns, so be careful not to touch them.

d. Punitto Jump

Use the punipuni button to jump and aim for the goal at the top. Be careful not to hit any crabs or press the punipuni button the wrong way! You can push the punipuni button to the right or left to jump in that direction.

e. Punitto Dance

Flow along with the music and when the notes enter the circle, press the punipuni button. For the long button, continue holding the button down.

f. Puni Bubbles

Use the punipuni button to make a bubble, catch more bubbles and avoid coral and other fish. Push forward to raise and backward (towards yourself) to sink it.

Clear the game and get coins! If you clear each mini game, you will get coins that can be used in the market according to the results.

Fortune-Teller (Wise Man) Game Translations:

- <https://docs.google.com/spreadsheets/d/1vysQ4zSdkW8W4S7yusBResojx8L2jAyxFTDcLeD8nCk/edit#gid=0>

Credit to: [GMMan_BZFlag](#)

Market

At the market you can shop for things like recipes, accessories, and rooms. Select what you want to buy and press the OK button.

Food

- At the top, you will see your puni coin total followed by the price of the item.
- Select the recipe you want and press the OK button for the detail screen to appear. Choose the number you want to buy.

Items

- Select the item you want to buy,
- press the OK button and complete the purchase.

Rooms

- To buy, press the OK button. Select the first option to complete the purchase.
- For items and rooms, SOLD OUT will be displayed for items that you have bought before.

Password Lake

Enter the password to get items. All passwords are valid (you can use all of them if you'd like) All passwords can be found here:

- <https://imgur.com/a/EXmIw5Q>

Credit to: [@GMMan_BZFlag](#)

Punipuni Forrest

Place for adult puni to say farewell to raise a new punirunes.

Friendship

Condition of the Punirunes you are raising

At the top, you will see the punirunes sprite followed by their name and type (in the banner). Then you find their happiness and hunger levels. Lastly, you see your puni coin total to use in the market. Get coins at mini games in Punitto park!

Press the OK button to go to the next screen.

Here you see your total of puninomoto.

Press the OK button to go to the next screen.

Here you see the possible transformations your current puni can grow up into.

Settings

Various settings such as date and time, volume, screen brightness, and resetting your device are here. Select the icon you want and press the OK button.

TIME

change the data or time

VOLUME

change how loud your sound is

BRIGHTNESS

change the screen brightness

RESET

erase all data to restore it

About Punirunes Growth:

Bebipuni - Baby Stage

Kidzupuni - Child Stage

Adult - Adult stage

MIX



The message above says to mix puninomoto as a sign of growth! Press the OK button. Mix and grow Punirunes depending on the type and color of your current puni and Puninomoto that you add.

NOTE: There are various shapes?



When it is time to leave:

After some time has passed, Leave for the Forrest. Choose “Yes” to say goodbye and “No” to stick with me.

Note: When you say goodbye, you will receive a souvenir. You can check it out in the bookcase)

If the following happen:

Does not power on

Even if the battery replacement screen does not appear, still perform battery replacement. Follow the steps above under “How to insert the battery.” Be sure to use alkaline batteries.

If the screen still does not turn on, move or if the display is having issue

Make sure your finger is not in the finger hole.

If not, try pressing the enter button for at least 3 seconds. If no luck, press the reset button on the back of the unit.

Videos and Other Sources

[Author's Reddit Page \(Original Source Material\)](#)

Videos

[Author's YouTube \(Not yet filmed\)](#)

[LilbohBeat - Basic Gameplay](#)

[LolbohBeat - Pt. 2 \(More in depth\)](#)

[Reznulius - Unboxing and Startup](#)

Japanese Official Guides

[Takara Tomy - Product Page \(Japanese natively\)](#)

[Official Japanese User Guide](#)

FAQs on Next Page...

FAQs

The cover of the button has come off. Can I repair or replace it?

The Puni Puni button cannot be repaired or replaced. Please note that if you handle it violently, such as intentionally scratching, it will cause damage.

How long does the battery last?

It takes about 6 hours to use a new alkaline battery. (It depends on the usage situation, meaning 6 hours of “screen time”)

The above is the official answer, however it is misunderstood, if you turn the sound and brightness down, the batteries can last much longer.

How many rare characters are there? How can I get it?

There are three types of rare characters.

If you play and take care of various things, and grow various Punis, you can get the mysterious puni of rare characters.

How many characters are there?

There are 50+ collectible Punis.

What is the password at the Mysterious Lake?

All passwords can be found here:

<https://imgur.com/a/EXmIw5Q>

Credit to: @GMMan_BZFlag

Is there a difference in the color of the main body of Punirunes?

The content is the same on each shell.

Available color options are teal blue, pink, and purple.

What does that old man angel want?

He is a fortune teller, and the amount of puni coins he gives you are random and usually low.

Translations for his fortunes can be found below:

<https://docs.google.com/spreadsheets/d/1vysQ4zSdkW8W4S7yusBResojx8L2jAyxFTDcLeD8nCK/edit#gid=0>

Credit to: [GMMan_BZFlag](#)