



Sony Z150 Cheat Sheet

- Power on camera (battery or A/C adapter cord)
- insert SD card
- open up lens with lens cover latch
- unfold viewfinder
- Format memory card
 - MENU - OTHERS - MEDIA FORMAT
- format for 4k resolution
 - REC SET - FILE FORMAT - XAVC QFHD
 - REC FORMAT - 4K
- MAKE SURE FULL AUTO BUTTON TURNED OFF
- Turn on Histogram, Zebra and Peaking
 - DISPLAY SET - HISTOGRAM, ZEBRA, PEAKING
- Adjust Image Brightness
 - Use iris, gain, shutter speed, or ND filter switch
 - buttons for each function, 4 position ND filter switch (CLEAR/1/2/3)
- Adjust Color Tone
 - hold up white sheet and press the white balance button
- Press Thumbnail button for playback mode to view footage