

# RK烧录工具指导(Burning Tutorial)

特别说明: 使用烧录工具前, 先安装RK驱动

TIP: Before using the burning tool, install the RK driver, Please visit the [tutorial documentation](#) and see the video linked below

准备工具: 电脑、双头USB线、待烧录机器、[RKDevTool\\_Release\\_v2.79.zip](#)


Tools: Computer, the USB A to A male cable, TV BOX to be burned, [RKDevTool\\_Release\\_v2.79](#)

[\*\*WATCH VIDEO HOW TO UPGRADE?\*\*](#)

操作步骤:

Operation steps:

1. RKDevTool\_Release\_v2.79(1)压缩包, 打开RKDevTool\_Release\_v2.79(1)文件夹中的RKDevTool.exe  
Unzip file named RKDevTool\_Release\_v2.79(1) and open RKDevTool.exe in the unzipped folder

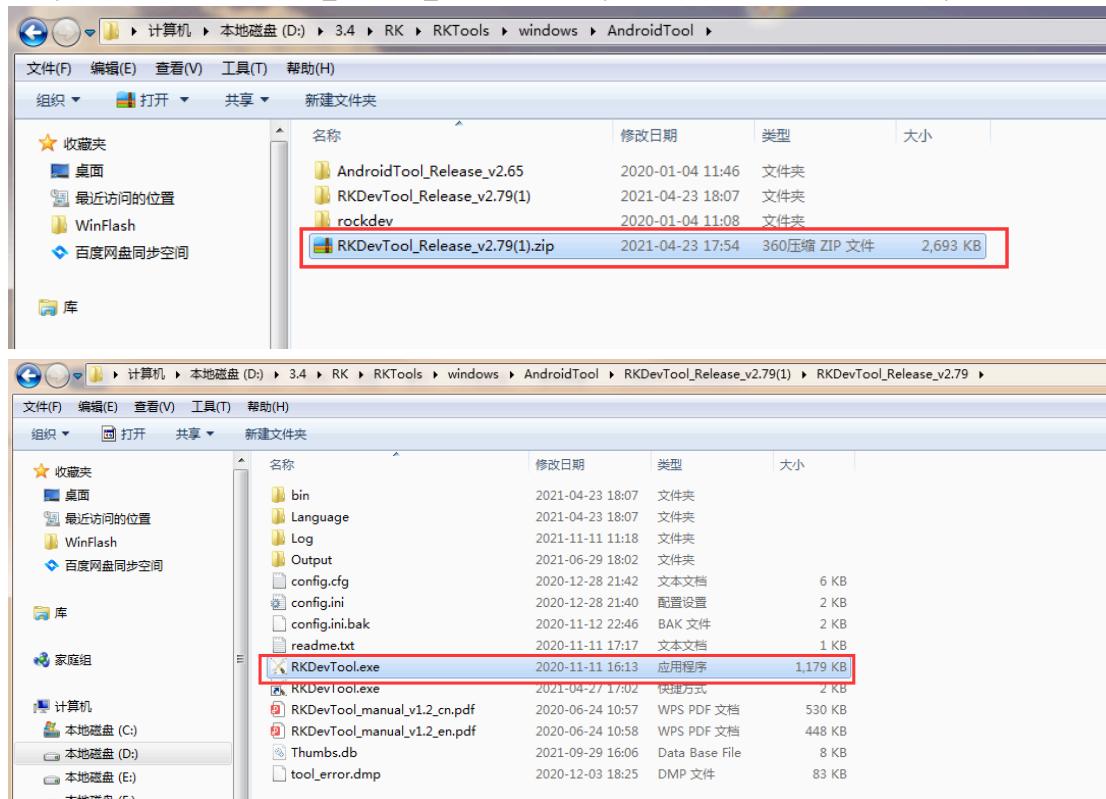


2. 打开RKDevTool.exe后, 点击固件, 准备导入固件

After opening RKDevTool.exe, click Firmware and prepare to import the firmware (as shown in the figure).



3. 选择到烧录软件, 然后点击打开

Select the downloaded firmware file

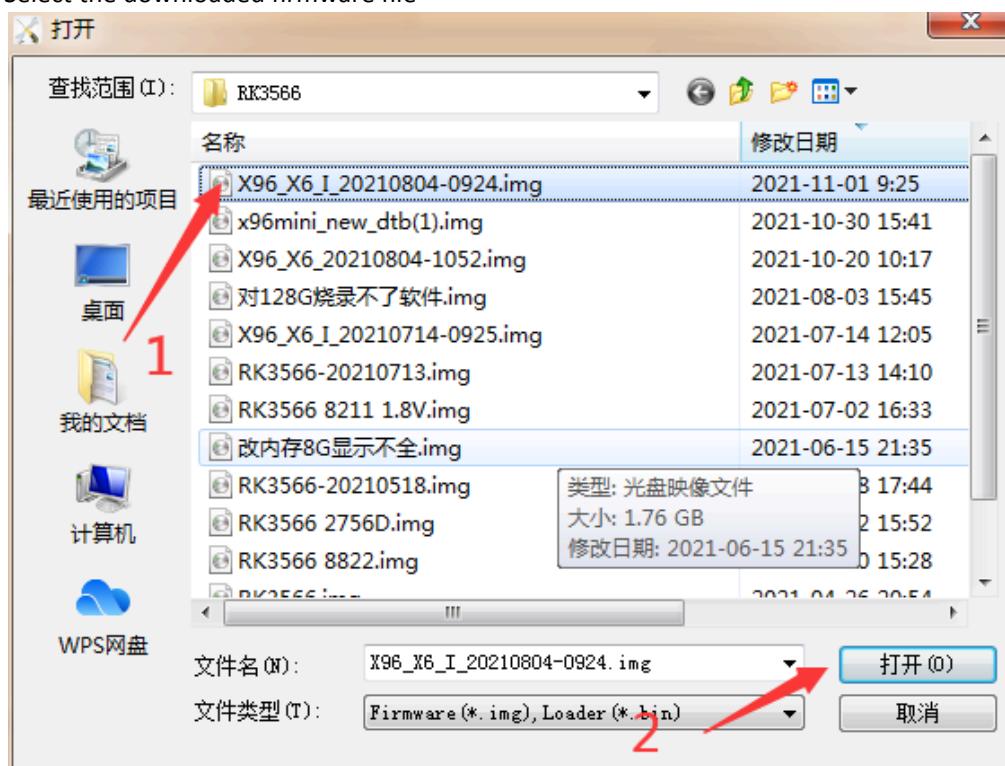

4. 固件导入成功

The firmware is imported successfully



5. 连接盒子，需要注意的是盒子连接电脑的连接顺序：1、先按住升级键（盒子初次烧录因没有烧录过软件可以不用按）；2、USB烧录线插入盒子2.0USB口

Connect the tv box (pay attention to the connection order of the box to the computer) :

1. Press the **upgrade** button first
2. USB A to A male cable into the box USB2.0 port;
3. 3 seconds later, release the **upgrade** button



## 6. 识别成功并点击升级

Recognize that a device is connected then click **Update button**



## 7. 烧录成功

Complete the firmware installation.



For more details, please contact: [Jerry@amediatech.cn](mailto:Jerry@amediatech.cn)