## Attach Wheels

## Attach the wheels

- Take note of the slot inside the wheel.
- Line up the slot inside the wheel with the white peg on the motor and push wheel onto peg until secure.
- support the motor when attaching. If you only hold the chassis, it will put stress on the motor mount and it may snap.
- Repeat for both motors.

