

CEB Press Operations Guide

Version 16.09 v8

Contents

[Machine Setup](#)

[Safety and Maintenance Checks](#)

[Manual Operation](#)

[Auto Mode Setup](#)

[General Maintenance](#)

[Troubleshooting](#)

Machine Setup

Components

Connections


Material Handling

Safety and Maintenance Checks

Manual Operation

Auto Mode Setup

- Verify the machines proper and safe function by manual operation
- Compress a block manually of desired thickness
- Release pressure slightly
- Switch Auto Mode to ON
- Machine will Initiate by measuring block
- Then it will begin automatic replication

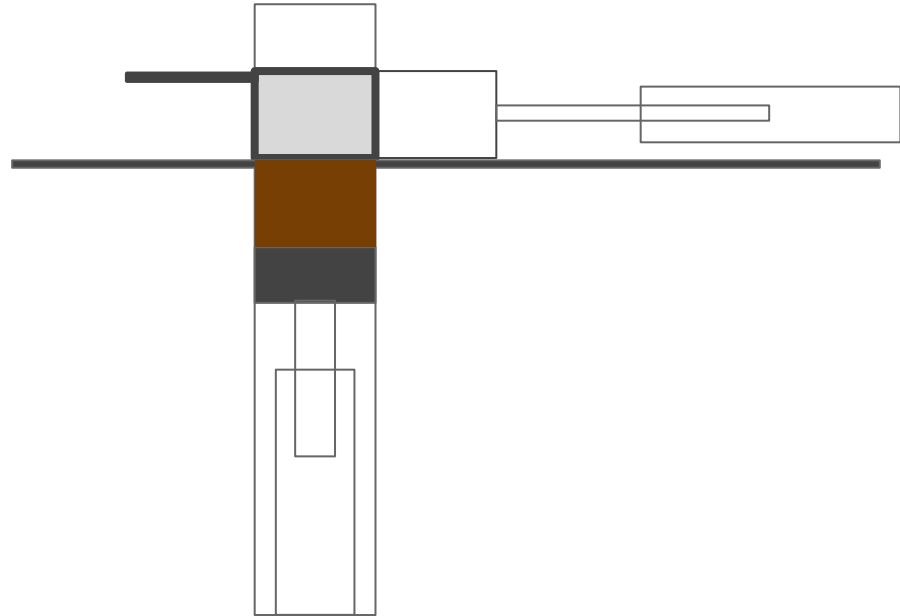

General Maintenance

Troubleshooting