

GY-QBFXYP500Pro Laser Cleaning System User Manual

Scope of application (customizable)

Standard QBH connectors; Custom QCS connectors: 20 mm;

1 Preface

1.1 Welcome

Thank you for choosing our GY-QBFXYP500Pro laser cleaning system. This user manual provides important safety, operation, and maintenance guidelines. Therefore, please read this manual carefully before using the product and keep it safely stored. To ensure safe operation and maintain the optimal condition of the product, please adhere to the following precautions and warnings.

This user manual is not a quality assurance document; any corrections to printing errors, modifications to the information contained herein, or improvements to the product shall be subject to interpretation by our company at any time without prior notice; such corrections will be incorporated into a revised edition of this user manual.

2 Product Introduction

Laser cleaning is a novel technology based on the interaction between lasers and materials, enabling the removal of contaminants and adhered deposits from object surfaces. Compared to traditional cleaning methods, laser cleaning offers advantages such as being contactless, non-destructive to the substrate, allowing for precise cleaning, being environmentally friendly, and supporting online processing; it is particularly well-suited for high-speed online cleaning applications in designated areas.

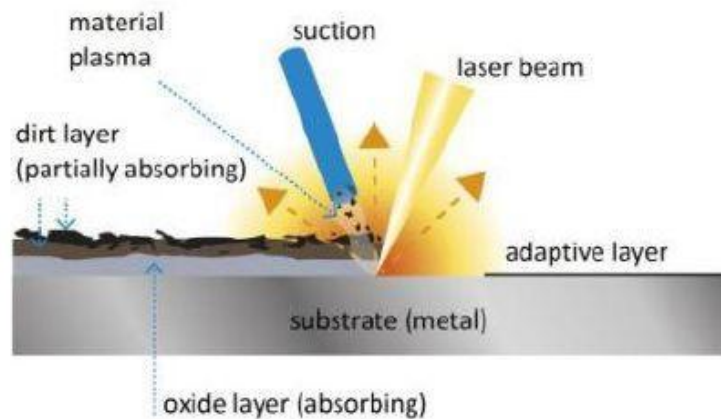


Figure 2.1 – Laser cleaning schematic diagram

The laser cleaning equipment manufactured by our company represents a cutting-edge high-tech solution for surface treatment; it is easy to install, operate, and automate. The operation is straightforward: simply connect the power supply and turn on the device to initiate a cleaning process that requires no chemical reagents, no cleaning media, no dust, and no water. This system is capable of cleaning curved surfaces and ensures exceptional surface cleanliness by effectively removing resin, paint, oil stains, dirt, grime, rust, coatings, plating layers, and oxide layers from surfaces. It finds wide application across various industries, including marine engineering, automotive repair, rubber mold manufacturing, high-end machine tool applications, rail systems, and environmental protection sectors.

2.1 Laser Cleaning Characteristics and Implementation Standards

(1) Laser cleaning characteristics

- ◎ Contactless cleaning – does not damage the component substrate;
- ◎ Precision cleaning enables selective cleaning at precise locations and with exact dimensional accuracy;
- ◎ No chemical cleaning solutions required; no consumables needed – safe and environmentally friendly;
- ◎ Simple operation – can be used handheld or in conjunction with a robotic arm for automated cleaning;
- ◎ Ergonomic design significantly reduces operational fatigue;
- ◎ The laser cleaning system is stable and requires almost no maintenance;

(2) Product Implementation Standards

Our company has obtained ISO 9001 International Quality Management System certification and has established a comprehensive quality assurance system covering the design, manufacturing, and service of small-and medium-power laser processing equipment.

Our company has established detailed standards covering the work environment and working conditions during the production process, basic technical requirements, cooling requirements, laser radiation safety, electrical safety, testing methods, inspection and acceptance procedures, as well as packaging and transportation. The national standards referenced in these standards include:

GB10320 – Electrical Safety for Laser Equipment and Facilities

GB7247 – Radiation Safety, Equipment Classification, Requirements and User Manual for Laser Products

GB2421 – Basic Environmental Test Procedures for Electronic Products

GB/TB360 – Specification for testing instruments for laser power energy measurement



GB/T13740 – Test method for divergence angle of laser radiation

GB/T13741 – Test method for determining the beam diameter of laser radiation beams

GB/T13862-92 – Test method for laser radiation power

GB2828-2829-87 – Batch-by-Batch Periodic Inspection Counting Sampling Procedures and Sampling Tables

2.2 Laser Cleaning Product Applications

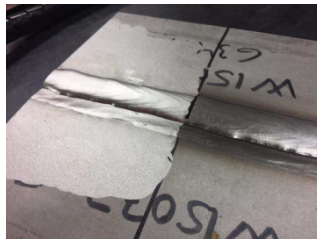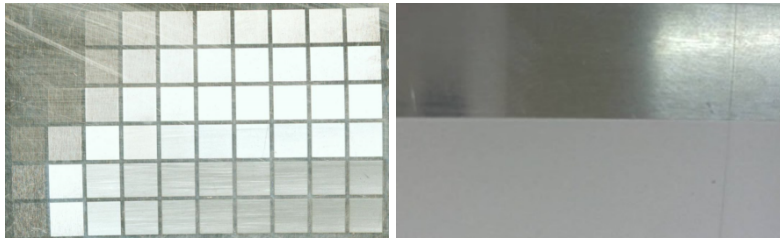

Laser cleaning of aluminum alloy before and after welding



b Metal surface oxide laser cleaning



C Laser cleaning for oil and paint contamination



D-Laser Rust Removal
Figure 2.2 – Typical laser cleaning applications

2.3 Product Technical Features

Our company's independently developed laser cleaning system features the following characteristics:

(1) Independently developed specialized underlying control system and application software for laser cleaning

- Perfectly compatible with the vast majority of laser cleaning light sources available on the market;
- The dedicated software features a clear and concise interface with user-friendly operation;
- Built-in database system capable of storing and editing up to 100 sets of process data;
- Laser parameters such as laser power and laser repetition frequency can be freely adjusted;
- Equipped with an online pulse width adjustment function (if the laser supports it), allowing for the optimization of process parameters based on specific field conditions;
- The system enables real-time monitoring of laser parameters, operating status, alarm status, and other functions directly on the screen interface; when an alarm is triggered, users can operate the device without connecting

it to the laser host computer software, providing faster and more intelligent operation.

- Optimized mirror control and sine wave signal control effectively reduce the heat generation in the mirror, thereby extending its service life;
- The dual-axis version offers 13 cleaning modes: Linear, Rectangular 1, Rectangular 2, Circular, Sinusoidal, Spiral, Free Mode, Ring, Rotating, Triangular, Rotating Circle, Rotating Linear, and Linear Rotating Circle – catering to a wide range of application scenarios;
- Adjustable scanning speed, up to 30 m/s;

(2) Professional laser cleaning optical design

- High damage threshold galvanometer mirrors and field lenses with high optical efficiency and large focal depth are designed for long-term operation in high-power laser cleaning applications;
- High-performance laser galvanometer featuring fast scanning speed and high precision; when combined with a professional control software system, it meets a wide range of laser cleaning application requirements;

(3) Lightweight cleaning head structural design

- Portable design: The cleaning head is compact and easy to carry, with a comfortable grip for effortless use;
- Lightweight design: The cleaning head weighs less than 1.25 kg, making it more suitable for extended handheld use;
- Dust-proof sealing design: An external optical path sealing and dust-proofing solution that effectively prevents dust or other contaminants generated during cleaning from entering the optical path or the cleaning head, thereby preventing performance degradation or damage;
- The field lens features a front-mounted dust-blowing curtain design, effectively protecting the lens from airborne dust or oil contamination;
- Anti-interference design: The interference resistance of the cleaning head is enhanced through measures such as signal amplification, signal line shielding layers, mirror encapsulation, and a metal shielding housing. This ensures that the system does not interfere with the stability of light output when integrated with robots or vacuum cleaners.

2.4 Cleaning Head Structure and Dimensional Drawing

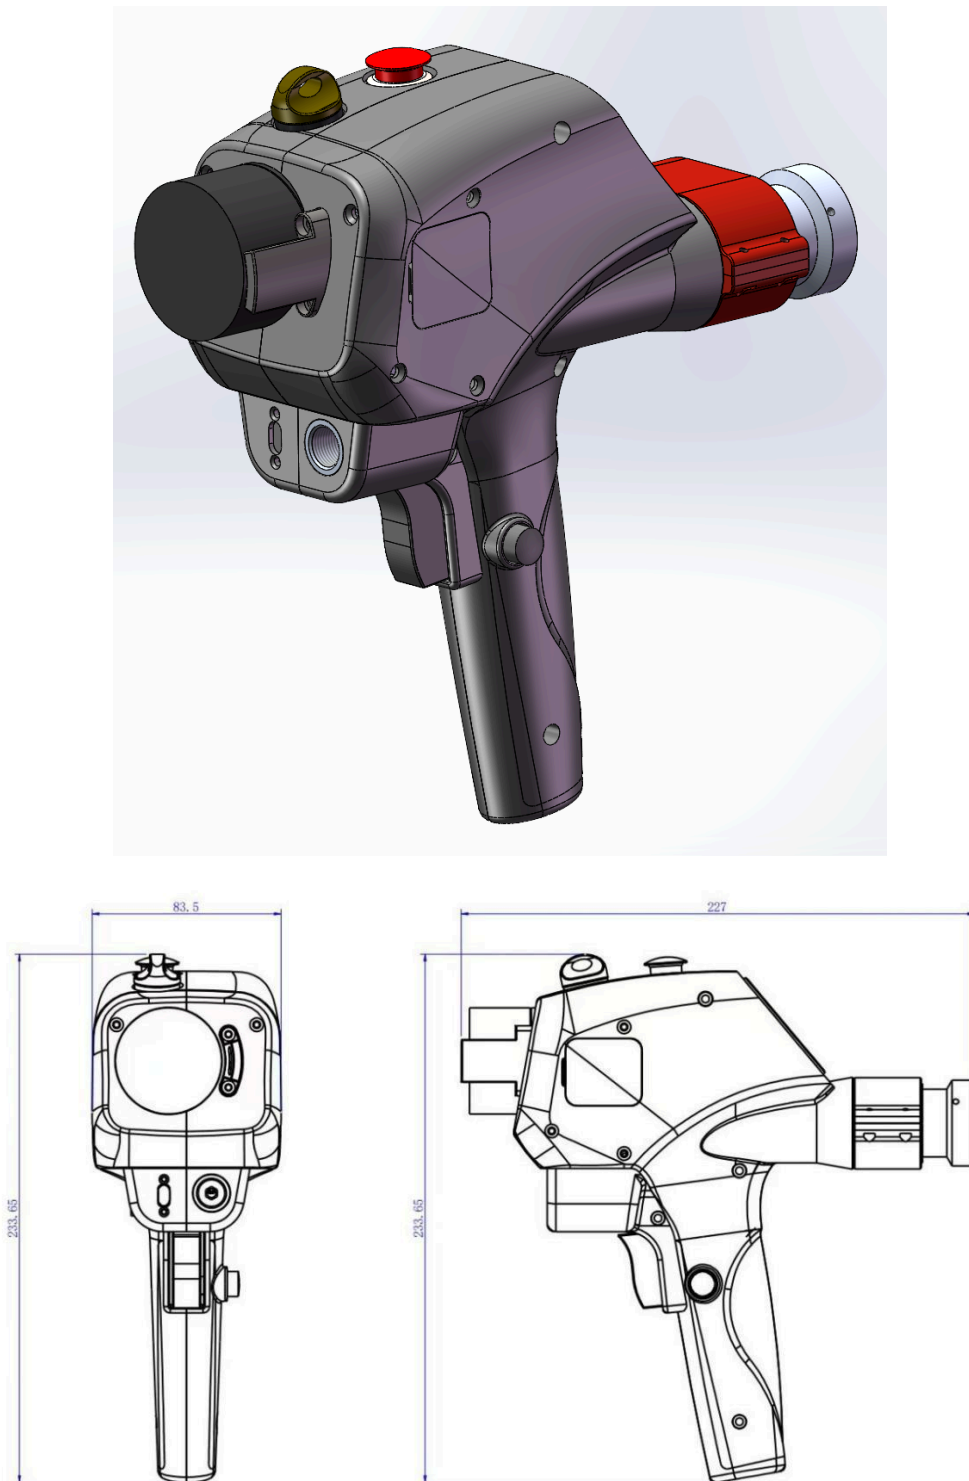


Figure 2.3 GY-QBFXYP500Pro

2.5 Main Product Technical Specifications

Java runtime environment Java	
content	parameter
service voltage	Single-phase 220 V $\pm 10\%$, 50/60 Hz AC power supply (Customizable: 110V, 50Hz AC power)
System power consumption	Less than 120 W
operating ambient temperature	0°C ~ 40°C
Work environment humidity	$\leq 80\%$
Optical parameters	
Acceptable average laser power	$\leq 500\text{W}$
Light transmittance	$\geq 98\%$
Laser power adjustment	10%–100% continuous gradient adjustable
Laser pulse frequency adjustment	Continuous adjustable frequency range from 1 kHz to 4000 kHz (customizable)
Laser pulse width adjustment function	support
focal distance	Standard: 254 mm (available in 160 mm, 254 mm, 330 mm, or 420 mm options)
Incident light spot diameter	$< 14\text{mm}$
Cleaning head and galvanometer/field mirror parameters	
Cleaning head dimensions	As shown in Figure 2.3, the special QCS joint supports customization.
Cleaning head weight	$< 1.3\text{KG}$
run-length	Available in 0 mm–300 mm ranges
scan frequency	Maximum frequency: no less than 70 Hz
Maximum scan line speed	Approximately 30 m/s
Mirror material	quartz
Mirror material	quartz
Field shot	quartz
Other parameters	
screen size	Standard: 7-inch display (4.3-inch optional) + 1.6-inch circular screen
Cable length	Standard length: 10 meters
mode of operation	Handheld/Automated

2.6 Configuration List

name	ts	unit	quantity	remarks
Laser cleaning head	GY-QBFXYP500Pro	individual	1	
Control Card/Box	GY-FLCS	Set	1	Includes a galvanometer mirror system, etc.
touch screen	7-inch	individual	1	Features a 1.6-inch circular display
Process Database	built-in	Set	1	
Field shot	Standard F254 field lens included	individual	1	Available in 160 mm – 420 mm ranges
Protective lens cover	43*2	Film	2	

3 Installation and Operation of the Laser Cleaning Machine

Pre-use precautions:

- Check whether the product appearance is abnormal or if the output cables are damaged, among other issues;
- Please connect the quick connector correctly according to the label on the control box;
- Connect the power supply correctly and ensure that the power cord connections are secure;
- Check and ensure that the cleaning head's protective lens is free of dust or dirt on both the inside and outside surfaces;

3.1 Operating Procedure

Step 1: Remove the handheld cleaning gun, ensure that the button switch on the handle is in the released position, and take off the dust cover from the front end of the laser cleaning gun;

Step 2: Unplug the external power cord to power on the device, then turn on the emergency stop switch;

Step 3: Press the "Start" button – the system will power on and initialize;

Step 4: After the system has started up, complete the laser cleaning parameter settings via the touchscreen interface;

Step 5: After completing the laser parameter settings, press the Laser Enable button on the laser cleaning operation screen (before pressing the button, be sure to confirm that the button switch on the handheld head handle is in the released position);

Step 6: Wear laser safety goggles, align the gun tip with the workpiece to be cleaned, and press the black button on the handheld handle – the gun tip will then emit light for cleaning.

Step 7: After use, sequentially turn off the enable button, cover the field lens dust cover, release the "Start" button, deactivate the emergency stop switch, return the cleaning nozzle to its storage compartment in the main unit, and disconnect the mains

power supply.

3.2 Software Control Interface

3.2.1 Boot Screen

When the device is powered on, it enters the Power-On Wait Interface (as shown in Figure 3.1); the display of this interface indicates that the screen and the control board are currently connected. If the connection is normal (this process takes approximately 5 seconds), the system will transition to the operation interface. If the transition does not occur within a reasonable time frame, it may indicate an abnormal connection between the screen and the control board; in this case, please power off the device and check whether the connectors are properly and securely seated.



Figure 3.1 – Software Startup Interface

Note: The software interface logo, device model, company information, etc., can be customized; this illustration is for descriptive purposes only (the same applies below).

3.2.2 Setup Interface

After the system initialization is complete, the operation interface will be displayed. Before using the cleaning equipment, first click the "Settings" button located in the lower-left corner of the operation interface to access the Cleaning System Settings interface, as shown in Figure 3.2. The System Settings interface

displays the control card version number and the touchscreen version number. From this interface, you can configure settings such as the safety distance, laser type, and the laser output control mode (selected by single-or double-tapping the temperature button); additionally, you can specify the mirror type (single-axis or dual-axis).



- Automatic Shutdown Enable: Set the automatic shutdown enable duration (in minutes). When the preset time is reached while the laser is active, clicking "Enable" will disable the automatic shutdown function; clicking "Disable" will reactivate it.
- Timed laser shutdown: Set the duration of a single laser pulse (unit: seconds); once the single laser pulse reaches its set duration, the laser output will stop;
- Safety Distance: The ranging sensor's operating range is set by default to a minimum of 10 cm and a maximum of 50 cm; when the distance is less than 10 cm or greater than 50 cm, the ranging alarm will not emit light; however, the laser will emit normally within the range of 10–50 cm.
- Single-click: Press the Cleaning Head button once to emit a laser beam; after clicking "Single-Click", switch to Double-Click mode. Double-axis: The cleaning head operates on both X and Y axes; if the cleaning head is single-axis, click "Double-Axis" to switch to Single-Axis mode. Distance Measurement: Activates the distance measurement sensor; Mirror Activation: Activates the mirror alarm switch; Chiller Activation: Activates the chiller alarm switch; if the equipment is not equipped with a chiller, click "Chiller Activation" to disable the chiller alarm.
- X/Y Coefficients: Used for field lens/focusing lens configuration; when the focal length or actual working distance of different field lenses/focusing lenses differs, the actual scanning width and height can be corrected using the field lens coefficient. Password: 123;

Field Lens Model	wide in width(mm)	focal distance(mm)	coefficient	remarks
F150	120	150	100	F150 requires customization.
F200	150	200	120	
F250	180	250	140	
F300	220	300	170	
F350	260	350	195	The F350 requires customization.
F400	290	400	220	
F500	360	500	280	

- Language Switch: Configure your system language settings; 15 languages are currently supported – additional languages can be customized if needed.
- Distance function: Default – enabled;
- Temperature setting: Default – 50°C;

3.3 User Interface

3.3.1 Scanning Method

The operating interface offers 13 cleaning modes, which can be switched via the "Scan Mode" option on the screen (with cyclic switching): Linear Mode, Rectangular Mode 1, Rectangular Mode 2, Circular Mode, Sinusoidal Mode, Spiral Mode, Free Mode, Ring Mode, Rotation Mode, Triangle Mode, Rotating Circle Mode, Rotating Linear Path, and Linearly Rotating Circle.

(1) Linear Mode

In this mode, the scanning method is linear; the interface is shown in Figure 3.3.



Figure 3.3 – Linear Scan Mode Operation Interface

- Laser power: Set the average laser output power within the range of 10%–100%;
- Frequency: Laser pulse repetition frequency setting, range: 1–4000 kHz;
- Scanning speed: The speed at which the laser spot focused on the workpiece surface moves; the maximum scanning speed depends on the scanning width;

run-length(mm)	Scanning speed (mm/s) (Upper limit)
Over 50	30000
40-49	18000
30-39	14000
20-29	12000
10-19	6000
5-9	3000
3-5	2000
1-3	1000

- Scan width: Set the linear scan width, ranging from 5 mm to Mx (the Mx value depends on the size of the field lens or focusing lens);

Scene type	Scanning range: Mx (mm)
F150	120
F200	150
F250	180
F300	220
F350	260
F400	290
F500	360

- Scan count: To be used under special circumstances; the number of scans can be set; when the specified number of scans is reached, the light output will stop; the default value is 0;
- Enable: After completing the parameter settings, click the Enable button; the system and laser will then enter the light output preparation state.
- Pulse width: Set according to actual field requirements; range: 1–500 ns;
- Edge Coefficient: Edge Extinction – eliminates the intense light spots at both ends of the laser beam; default value is 0; maximum setting is 2000 – adjust this value according to actual field requirements; when using this function, it is recommended to set the value to 500; Password: 123;
- Damping Delay: When combined with the Edge Coefficient, this feature effectively eliminates strong light spots on both sides; the default value is 0 – it is recommended to set this to 0.5 when using this function. Password: 123;
- Chiller alarm: The chiller's fault output signal is connected to the control card; when an alarm is triggered, the interface will display it. For air-cooled equipment, please short-circuit this signal to suppress it or disable the chiller alarm signal on the screen interface.

(2) Rectangular Mode

In this mode, the scanning method is rectangular; the interface is shown in Figure 3.4. The definitions and ranges for power, frequency, pulse width (duty cycle), scanning speed, scanning width, and number of scans are the same as those in the

linear mode; they will not be repeated here (the same applies below).




Figure 3.4 – Rectangular Scanning Mode Operation Interface

- Fill Distance: Sets the laser filling distance within the rectangle (range: 0.01–1 mm); affects the spot overlap rate along the Y-axis; default value: 0.1;
- Scan Height: Sets the scanning height for the rectangle; range: 1 mm – Mx (the Mx value depends on the field lens coefficient);

Scene type	Scanning range: Mx (mm)
F150	120
F200	150
F250	180
F300	220
F350	260
F400	290
F500	360

(3) Rectangular Two-Mode

The Rectangular Mode II is essentially the same as Rectangular Mode I; it adds a horizontal cleaning mode to the vertical cleaning mode of Rectangular Mode I.

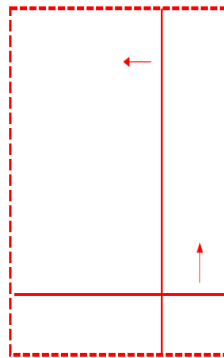

(4) **Circular Mode**

In this mode, the scanned shape is circular (as shown in Figure 3.5); the scanning range is defined solely by the circular diameter and the fill spacing;

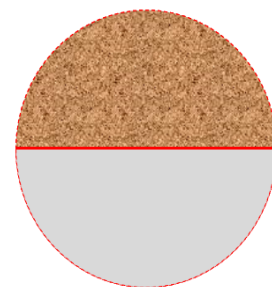
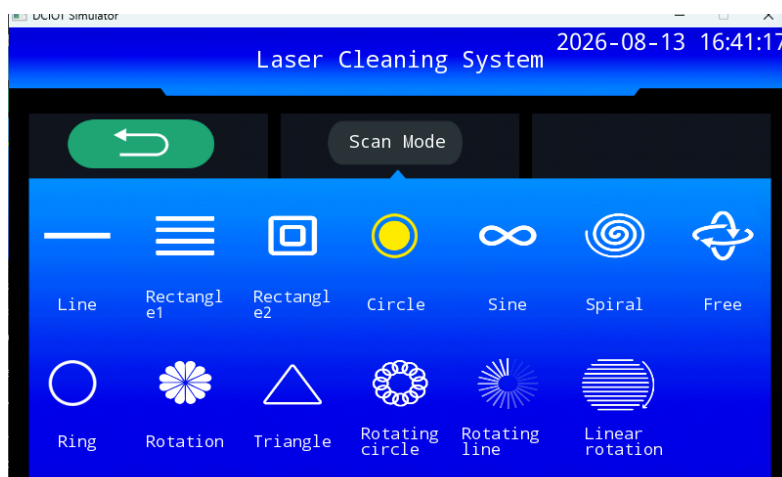


Figure 3.5 – Circular Scanning Mode Operation Interface

(5) Sinusoidal Mode

In Sinusoidal Mode, the scanning waveform is a sine curve; the operating interface is shown in Figure 3.6. In Sinusoidal Mode, the sinusoidal period must be set: this represents the period of the sine wave along the X-axis; a smaller numerical value corresponds to a higher waveform oscillation frequency, with a range of 1 mm–100 mm;

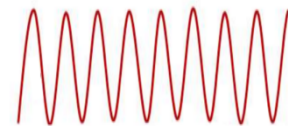
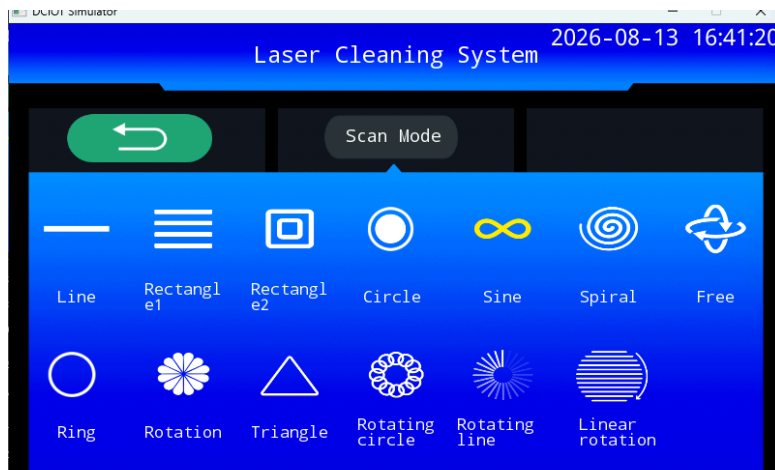


Figure 3.6 – Sinusoidal Scanning Mode Operation Interface

(6) Spiral Mode

In the spiral mode, the scanning waveform follows a spiral curve; the operating interface is shown in Figure 3.7. The parameter settings are identical to those in the sine wave mode.


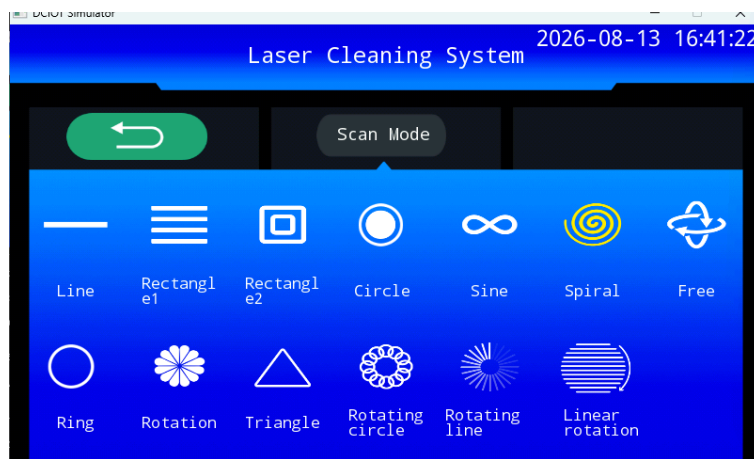


Figure 3.7 – Helical Scanning Mode Operation Interface

- Series: Number of waveforms in spiral mode (range: 1–16);

(7) Free Mode

In Free Mode, the width and frequency of the X-and Y-axis motors can be freely

configured within specified ranges. In this mode, the scanning speed is not constant and may not be accurately calculated; moreover, various scanning waveforms are possible. This mode serves as a supplement to the aforementioned five modes, enabling it to accommodate a wider range of application scenarios.



Figure 3.8 – Free Scan Mode Operation Interface

- X/Y frequency: less than 100 Hz;
- Scan Height: Set the scan height for Free Mode; range: 1 mm – 50 mm;

(8) Circle


This mode represents a scenario where a ring gradually contracts inward, as shown in Figure 3.9; here, the fill spacing corresponds to the rate of the ring's contraction.



Figure 3.9 – Ring Mode Operation Interface

- Edge coefficient: Adjustable inner circle size (range: 0–100%);

(9) Rotation

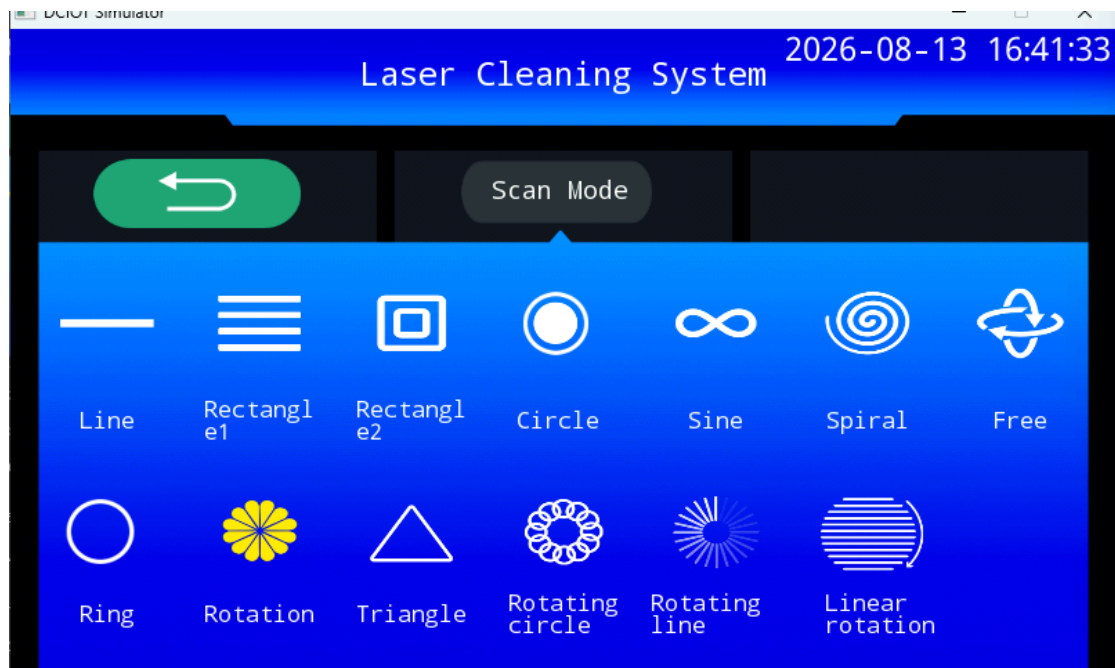


- The graph can be customized based on parameters such as period and series;

(10) Triangle



- Scan Parameters Interface – Adjust triangle size;

(11) Rotating circle

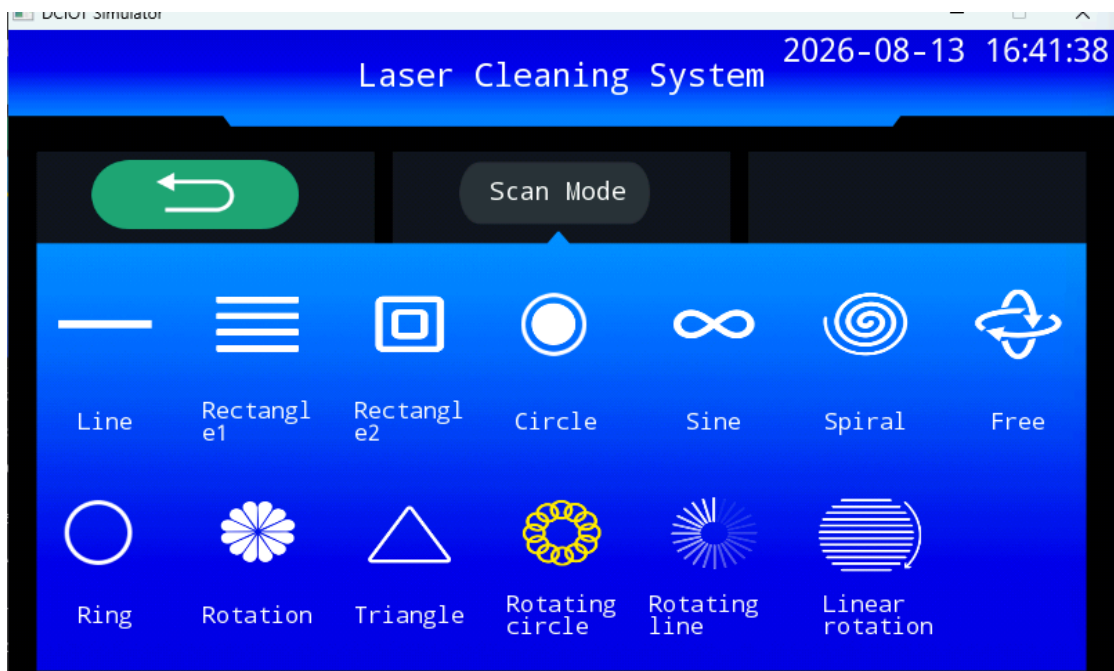


- Multiple circular elements are seamlessly connected and arranged in a 360° circle; their size can be adjusted on the scanning interface;

(12) Rotating line



- The endpoints of the straight line segment point toward the center; rotating the segment by 360° enables rotational scanning cleaning;

(13) Linear rotating circle

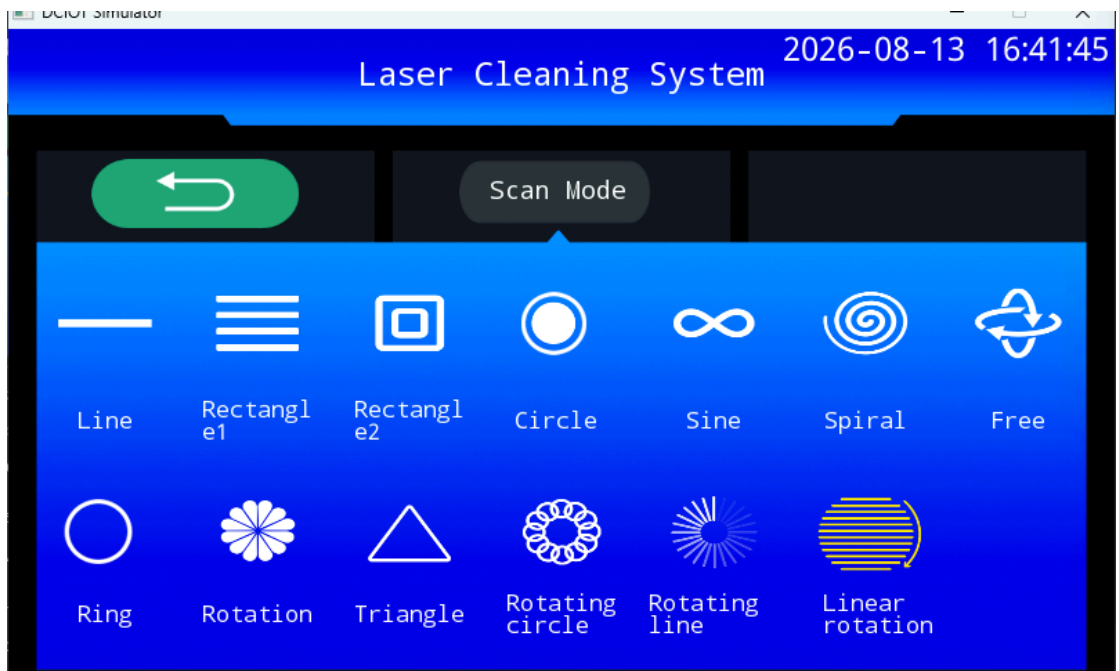


- The linear path performs a multi-angle 环绕 scan; in this mode, no fill spacing needs to be configured.


3.3.2 Database

(1) Custom Database

Custom cleaning parameters: This system provides a total of 100 customizable parameter sets (ranging from Set 1 to Set 100), with Set 1 designated as the default set and Sets 2–21 supporting custom cleaning parameter labels (Chinese/English; other languages are not currently supported). By configuring different process set parameters, users can quickly retrieve the appropriate parameter set to meet specific cleaning requirements, eliminating the need for manual reconfiguration.

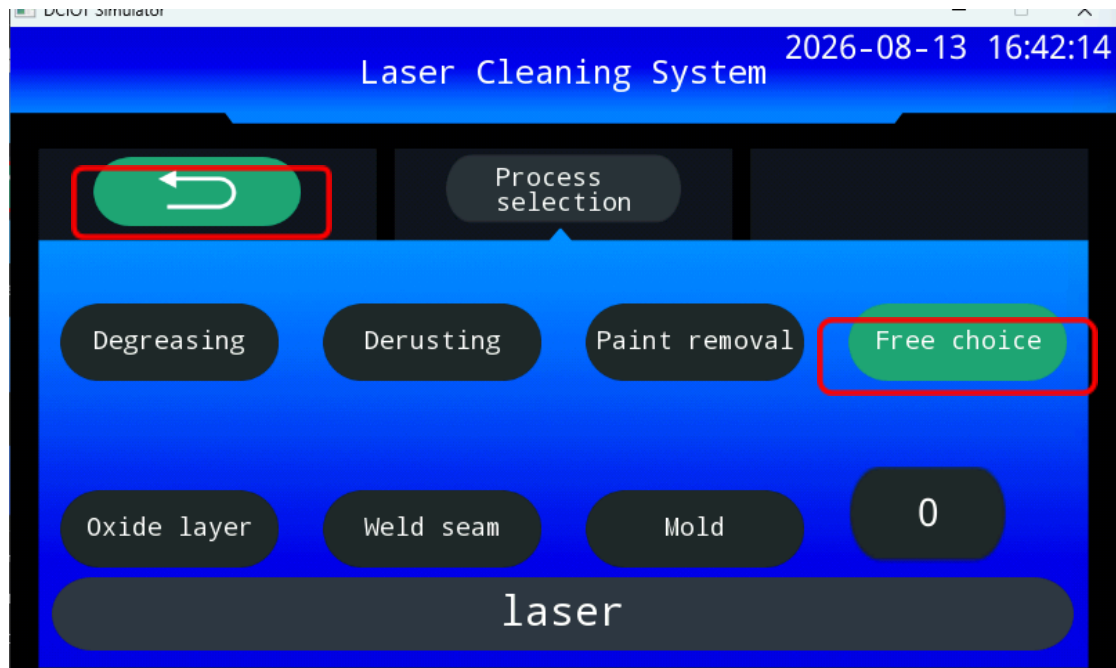

- Enter the "Process Selection" menu, then click the "Free Selection" button. In the numeric input field below "Free Selection," enter your custom parameter set. Based on the actual cleaning conditions, adjust the parameters to suit your needs, then sequentially input the relevant parameters. Finally, enter the process tag "wood" in the "Process Tag" field (Chinese/English support is currently available).

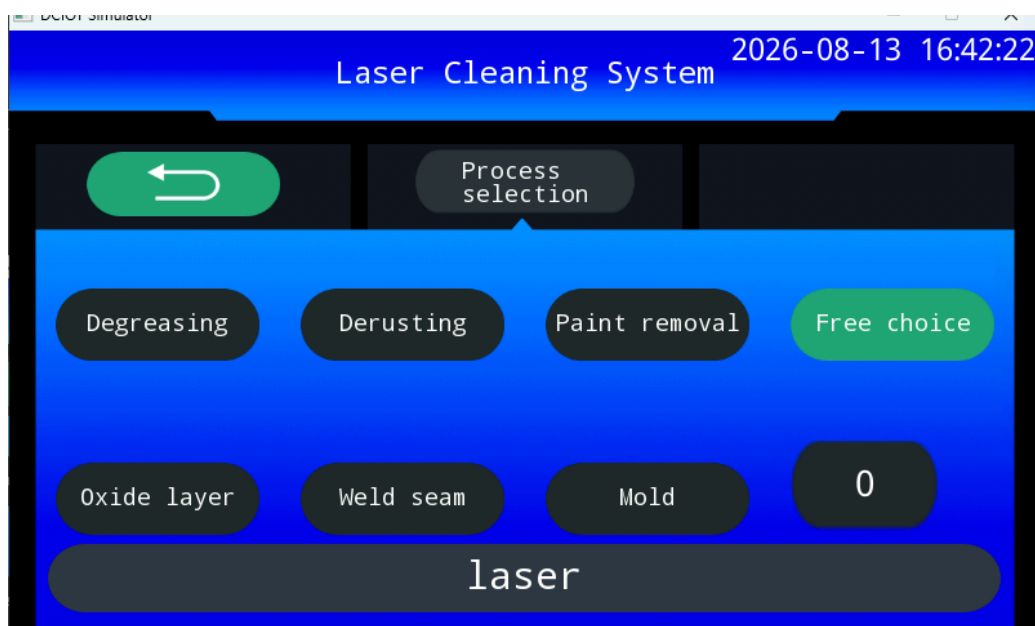


(2) Default Process Library

- The default process library is a system-integrated process database designed to accommodate lasers from various brands and specifications. By selecting and invoking the appropriate parameters, the parameter adjustment process can be effectively streamlined, the equipment's compatibility improved, and the operational complexity for personnel reduced.
- Serial Number: Select the database ID to retrieve the process data stored for that serial number (default: ID 1); Password: 123.
- Step 1: Before using the device, please verify the laser brand, single-pulse energy, and other parameters according to the data provided by the laser supplier. Refer to the JPT Laser Example to confirm the relevant laser parameters.

指标 \ 型号		YDFLP-CL-200	YDFLP-CL-300	YDFLP-CL-200	YDFLP-CL-300	YDFLP-CL-300
		-1	-1	-5	-5	-10
M ² 典型值		2		5		12
输出光缆长度	m	5				
平均输出功率	W	>200	>300	>200	>300	>300
最大脉冲能量	mJ	1.5		5		15
频率可调范围	kHz	1-4000				
脉冲宽度	ns	2-500				

- Step 2: After powering on the device, access the Laser Cleaning System and click the "System Settings" option. A password entry window will appear;

enter the primary password ("123") to access the Device Management Interface. Then, click "Laser Selection" to enter the Laser Selection page. Based on the supplier's documentation, select the appropriate laser option; the laser model selected for the machine will be displayed in the top-right corner. At this point, the default parameters (corrosion removal, degreasing) have been applied, and the data is ready. (To switch to the default process library automatically, simply click the "Free Selection" button on the process library page to return to the Custom Process screen.)

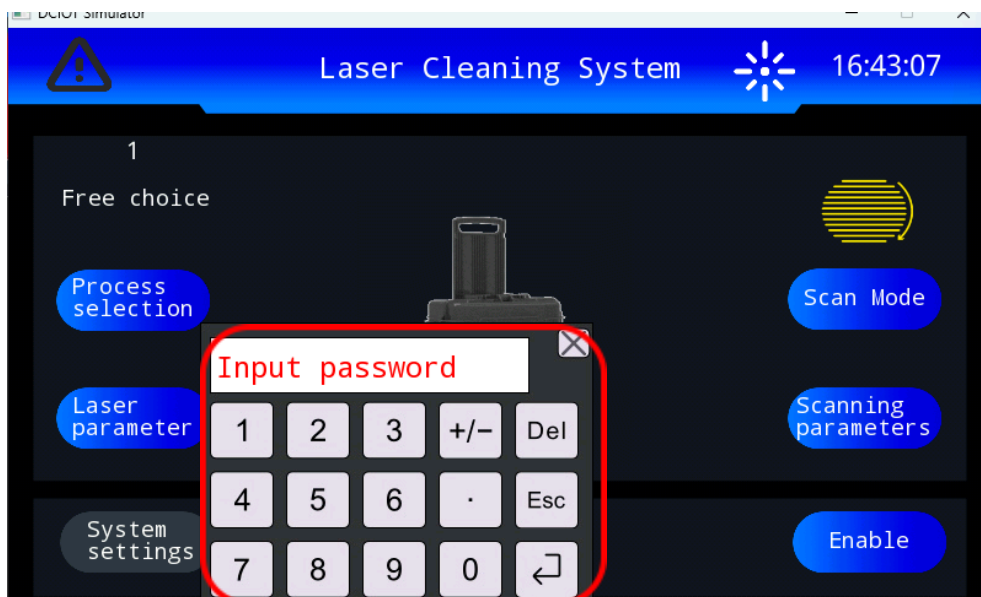

Select the appropriate laser type.

- Step 3: Return to "Process Selection." Depending on the workpiece, simply

click the "Rusting Removal" button; the corresponding process label will then appear on the label line. This indicates that the system has already prepared the process parameters for the rust removal operation. Return to the "Main Page," click "Enable," and then press the "Lighting" button to initiate the rust removal process. The same procedure applies to other default process operations.


3.3.3 Parameter Settings

(1) laser parameter



- Laser power: Set the average laser output power within the range of 10%–100%;
- Frequency: Laser pulse repetition frequency setting, range: 1–4000 kHz;
- Pulse width: adjustable from 1–500 ns;


(2) Scanning Parameters

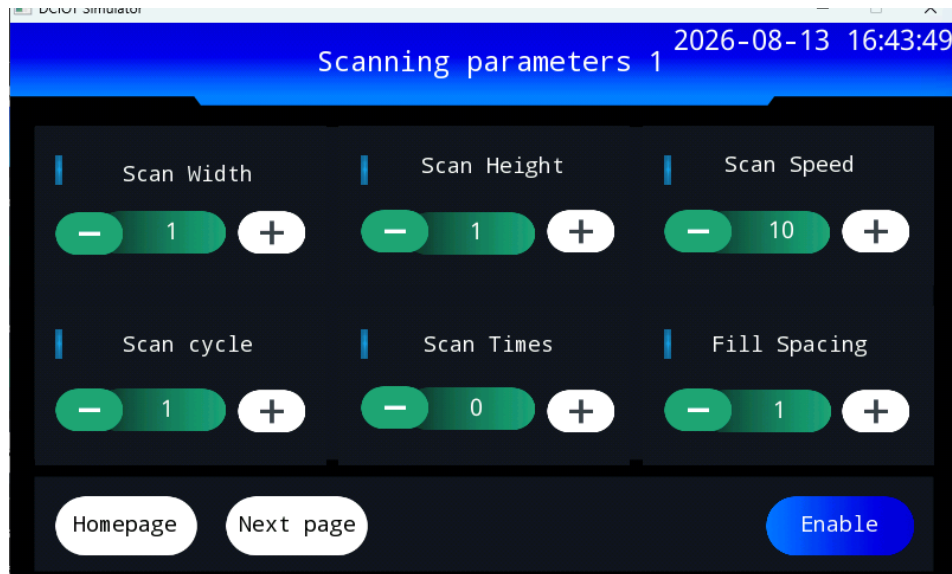




- Scanning Parameters: This interface allows you to configure parameters such as scanning width, scanning height, scanning speed, scanning cycle, number of scans, and fill spacing;

3.3.4 Decryption and Password Setup

- During the trial period, the phrase "Please activate" will appear in the top-right corner, indicating that the trial period has expired and the software needs to be activated.

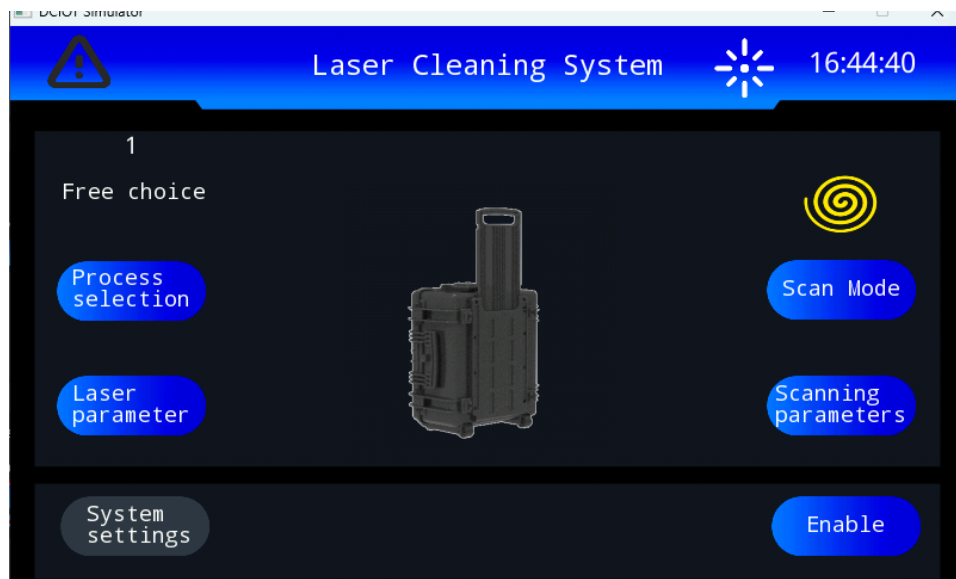


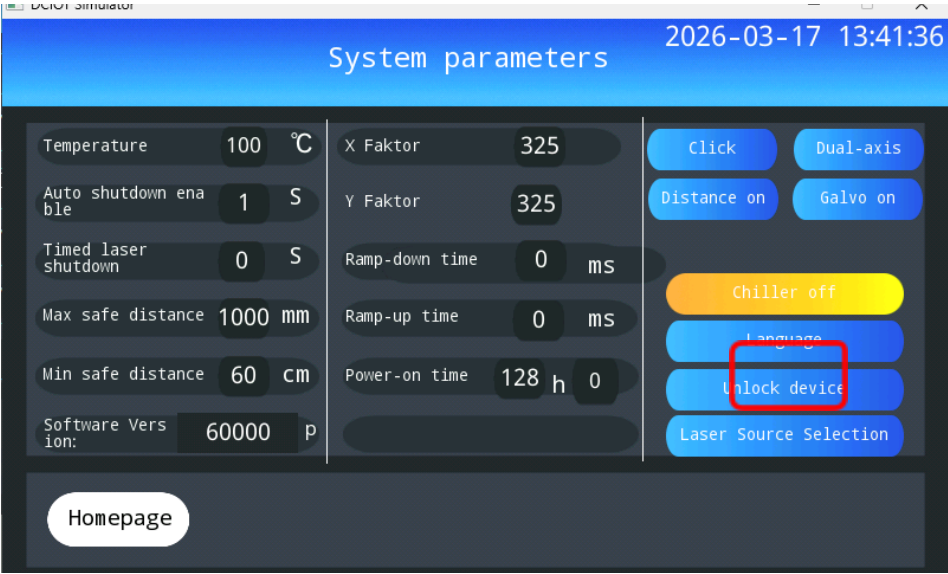

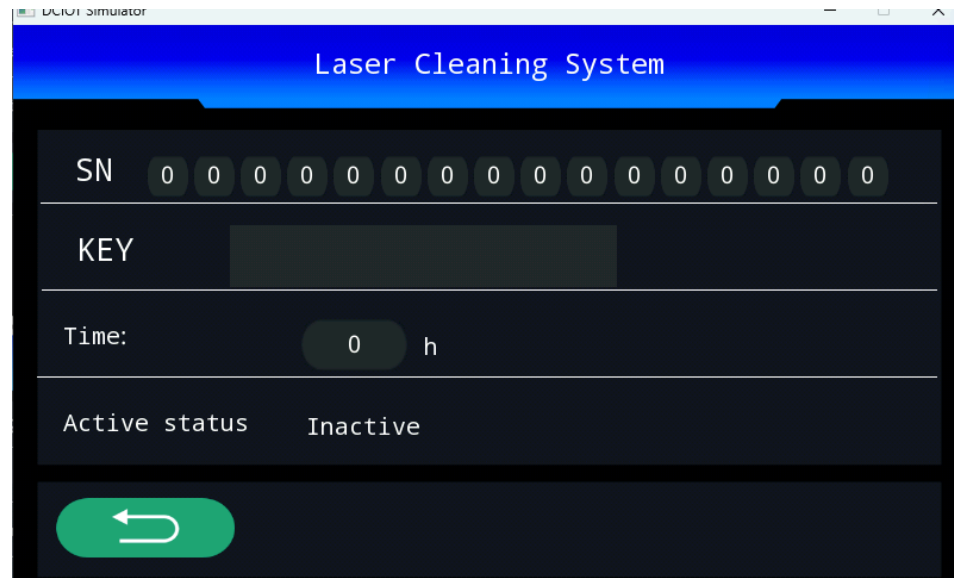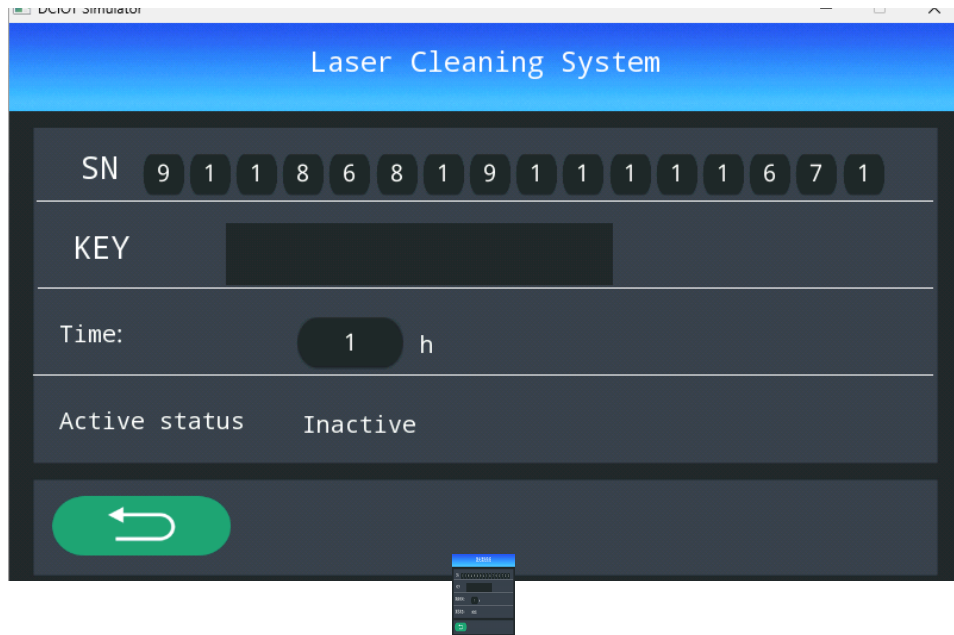



- Users can set a trial period or enable permanent decryption based on their specific on-site requirements.

(12) Other (Light Extraction Step)

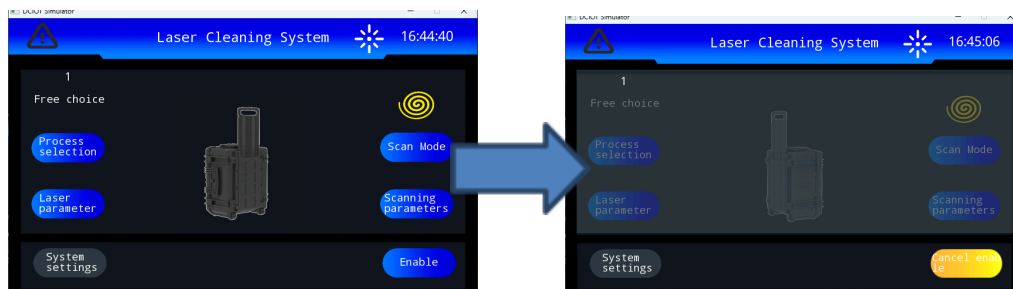

Main Interface – Confirm


Main Interface – Confirm

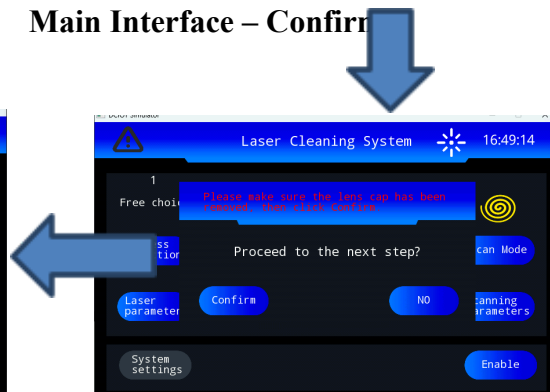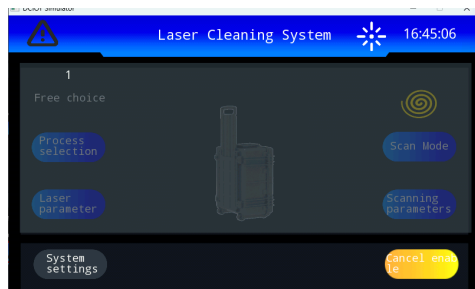


Hikari Nakazawa –After enabling


Hikari Nakazawa – After enabling

(14) Alarm View

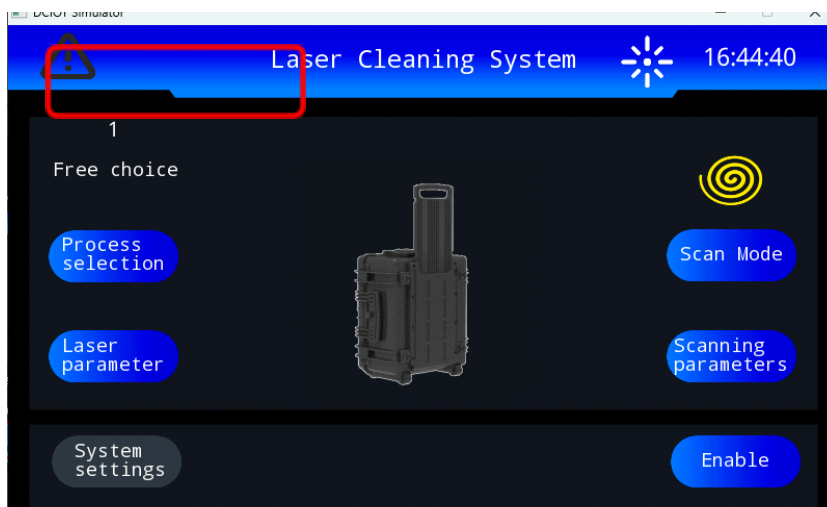

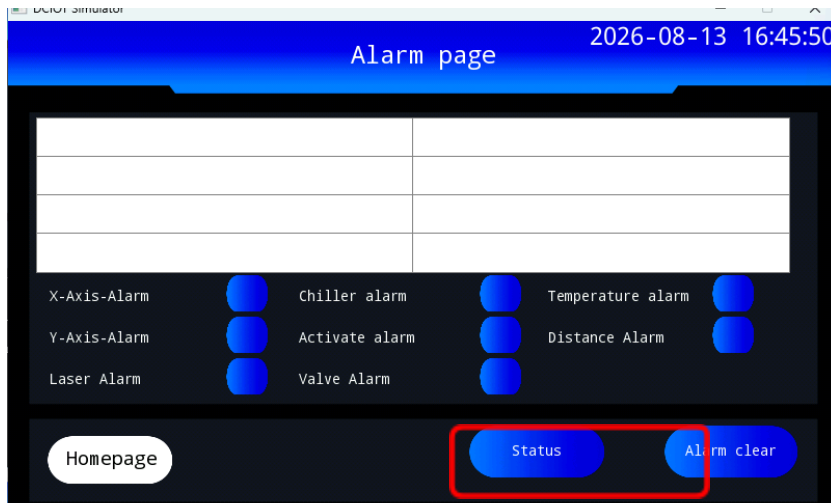


- This interface displays the alarm status of each component; red indicates an alarm, while blue indicates normal operation.

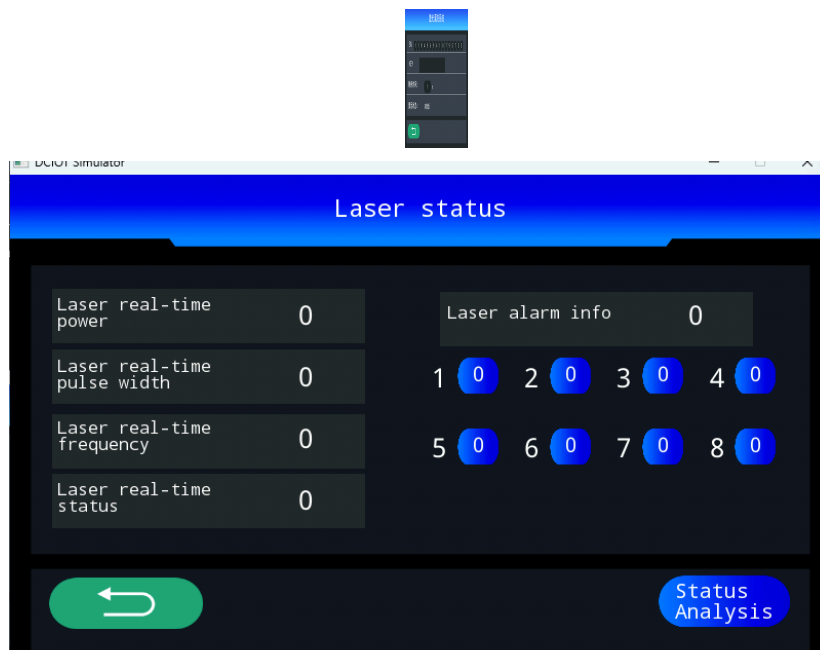

- This interface also allows you to monitor the laser's operating status during light output, displaying the laser power, pulse width and frequency, as well as the laser signal status in real time.

表【1.5】监控信息		
Byte	描述	单位
1	传感器 2 (L_Byte)	0.1℃
2	传感器 2 (H_Byte)	
3	传感器 1 (L_Byte)	0.1℃
4	传感器 1 (H_Byte)	
5	种子源 TEC 温度(L_Byte)	0.1℃
6	种子源 TEC 温度(H_Byte)	
7	二级电流 (L_Byte)	0.1A
8	二级电流 (H_Byte)	
举例：读取激光器的传感器 1		

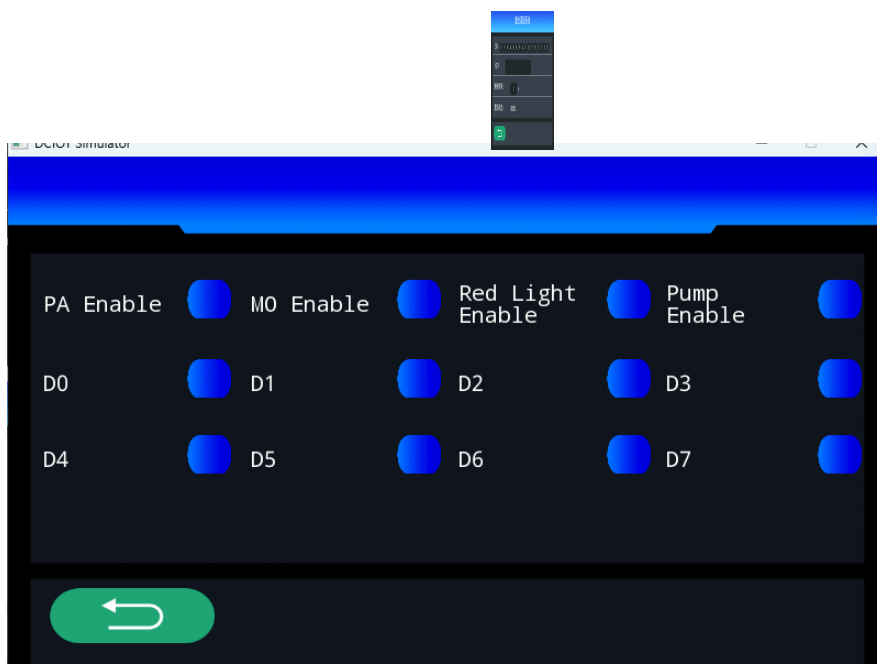


- The operational status of each laser signal can be viewed directly on this interface without requiring a physical connection to the laser device.

3.3.5 Small Screen Functionality


- Power-On Status Display



- Go to Home Page

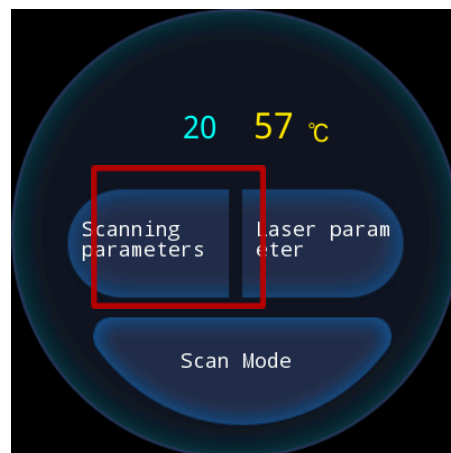


- Tap "Scan" on the main page to access the Scan Parameter Adjustment Page.

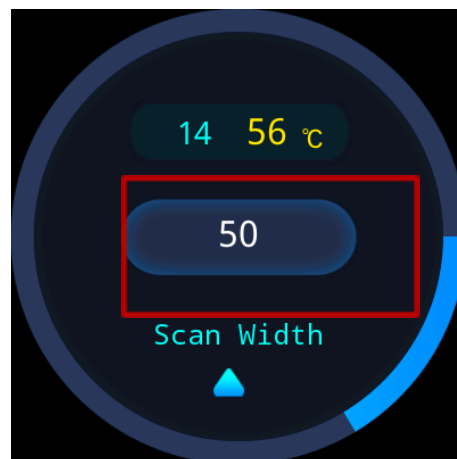

- Tap "Laser" on the main interface to access the Laser Parameter Adjustment Interface.




- On the main interface, tap "Scan Method" to access the Cleaning Graphic Selection Interface.

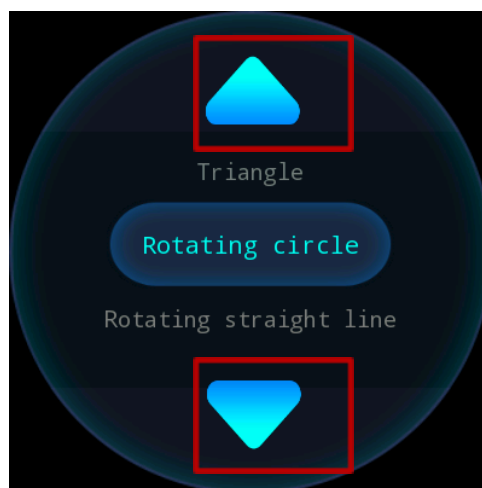

- Tap the screen area in any interface to open the Laser Enablement Interface; tap the screen area in any interface upward to return to the main screen interface.



- Alarm Indication Function Introduction

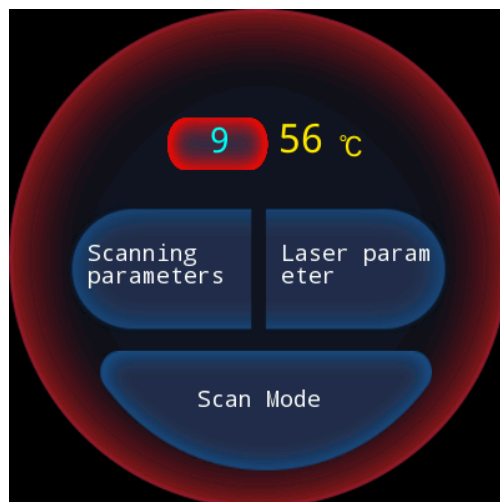


After setting the ranging range on the main screen, if the cleaning head's ranging sensor exceeds the valid range (as shown in the figure), the digit "8" indicates that the monitored distance has exceeded the set range, and an alarm notification will appear within the small square box. When the device triggers another alarm – such as a chiller or mirror alarm – the screen background will display a red alarm indicator; in this case, you should check the main screen to determine the specific cause of the alarm.

4. Wiring and Installation

Instructions

4.1 Cleaning Card Interface Definition

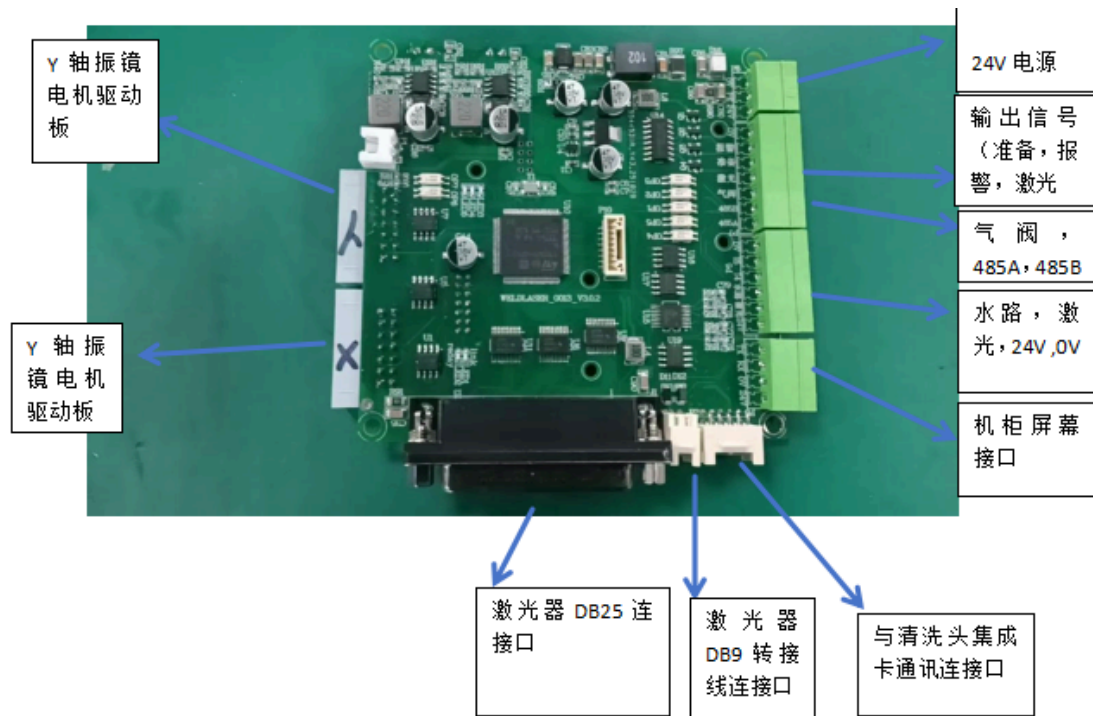

P6: Power Interface

order number	Input/Output	voltage	remarks
1	import	24V	+24V power input
2			empty
3	import	0V	GND

P8: Touchscreen Interface

order number	Input/Output	voltage	remarks
1	output	24V	+24V power output
2	output	0V	GND
3			RX
4			TX
4			TX

J1: Mirrors Interface

order number	Input/Output	voltage	remarks
2	output		Y-axis: ± 5 V
3	output		GND
15	output		X-axis: ± 5 V
16	output		GND
9.10.22	output		+15V
11.23.24	output		GND
12.13.25	output		-15V

J2: Pulse Laser Interface (25-pin DB connector with laser plug-in)

pin	Input/Output	electrical level	function
1-8			Power control pin; Pins 2 and 3 receive pulse-width serial signals.
9			Latch signal
10.14			0V
17			+5V
18			MO switching signal
19			Laser activation signal AP
20			Frequency-modulated signal
22			Red Light Enable – Pulse Width Adjustment ENABLE
23			ESTOP

P5: External Control Interface

pin	Input/Output	electrical level	function
1	output		24V
2			Laser switch: short-circuit pin 1 (24V) to activate laser output; disconnect pin 1 (24V) to stop laser output.
3	import	24V	Position switch alarm input (distance sensor)
4	import	24V	Chiller alarm signal input (if not connected, short-circuit P5-1 and P5-4)
5			Keep
6			Keep
7		0V	

P7: Signal Output Interface

pin	Input/Output	electrical	function
-----	--------------	------------	----------

		level	
1	output	0V	GND
2	output	24V	Air valve output – 24 V
3	output	24V	laser output
4	output	24V	Prepare for output
5	output	24V	Alarm Output
6	output	24V	24V output (used for chillers or laser alarm signal sources)

4.2 System Wiring Instructions



- Intake pipe: Delivers compressed air for gun tip cooling and front-side blowing.
- Five-core aviation connector: Provides integrated communication connection with the cleaning card.
- X-and Y-axis galvanometer mirrors: Connection

5 Pre-sales and After-sales Service

5.1 Service Commitment

Our company adheres to a customer-centric approach, thoroughly understands our clients' cleaning requirements, and provides comprehensive, personalized pre-sales and after-sales services—including installation, commissioning, training, and maintenance.

(1) Pre-sales Service

Prior to signing the contract, the company provides clients with various production process solutions, as well as technical consulting services for laser cleaning equipment, sample preparation, and equipment selection services.

(2) Installation and Commissioning

In accordance with the contract, our company will safely transport the equipment to the customer's designated installation site free of charge within the specified timeframe and will dispatch a Technical Service Engineer to perform on-site installation. Once the customer has prepared the necessary spare parts for installation and commissioning, the Technical Service Engineer will complete the machine installation and commissioning within two working days so that the customer may commence operation; we guarantee that the installation and commissioning site will remain tidy, clean, and well-organized.

(3) After-sales Training

The Company provides free technical training; upon completion of installation and commissioning, technical training shall be conducted for the Buyer's operators either at the Buyer's site or at the Seller's domestic training and maintenance center, until the operators are able to operate the equipment normally under basic conditions.

(4) After-Sales Commitment

- One-year free warranty on the device (excluding human-induced damage or lens damage);
- Free technical consultation, process and software upgrades, and other services;
- Customer service response time is within 8 hours;
- Lifetime maintenance service is provided; a cost fee is charged only for replacement parts.
- Providing comprehensive software and hardware support throughout your entire lifecycle.

5.2 Limitations of Warranty

Damage to products or their components resulting from tampering, opening, disassembly, incorrect installation, or modification by personnel other than our company; damage caused by misuse, negligence, or accidents; or damage arising from use outside specified parameters, improper installation or maintenance, misuse, or operation in violation of the information and warnings provided in the User Manual are not covered under this warranty. The Customer is responsible for ensuring that they understand and follow the operating instructions set forth in the User Manual and within the approved scope of use; damage resulting from incorrect operation shall not be covered under this warranty. Accessories and other components are not covered under this warranty.

Within the scope of this warranty, should the Buyer identify any issue, they must submit a written request within 30 days from the date such issue is discovered; this warranty does not apply to third parties (including the specified Buyer, end-user or customer), nor does it cover parts, equipment or other products not manufactured by our Company.

5.3 Technical Support and Product Maintenance

This product does not come with any additional accessories that users can maintain; therefore, all repairs performed outside of this scope must be carried out by our company's technical personnel.

Should any malfunction occur during the use of the product, please promptly notify our company's technical personnel, and we will promptly troubleshoot the issue.

All repair or replacement products must be placed in the original packaging box provided by our company; otherwise, in the event of any product damage resulting from this failure to comply, we reserve the right to refuse free repair services.

Upon receipt of our products, please promptly check whether the shipment is intact and complete, and whether all accessories are present. Should you encounter any abnormalities, please contact both the carrier and our company immediately.

Our company will continuously develop new products. The product information listed in this manual may change without prior notice. All technical specifications are subject to the terms of the contract.

The above warranty and service terms provided by our company are for users' reference only; the official terms and conditions of service and warranty shall be governed by the provisions set forth in the contract.