





AlaMode User Guide

Revision 1.1

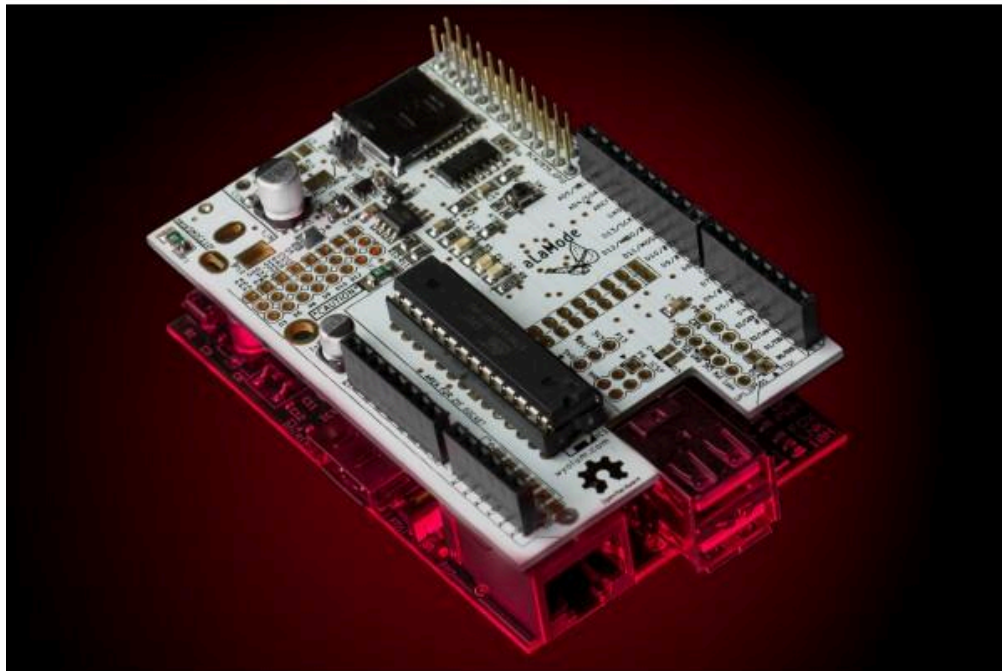

www.wyolum.com
info@wyolum.com



[Introduction](#)

[Main Features of AlaMode](#)

[! WARNING !](#)

[Instructions for safe use](#)

[Use of Fonts](#)

[Hardware Assembly](#)

[Install Arduino IDE for Raspberry Pi](#)

[Interfacing with Raspberry Pi & Powering Up](#)

[Adding AlaMode RTC as real time clock for Raspberry Pi via I2C](#)

[More help](#)

[Examples](#)


[Example 1: AlaMode Test](#)

[Example 2: Firmata Blink](#)

[Example 3: DS3231 Temperature Compensated Real Time Clock](#)

[Servo Control](#)

[Schematics:](#)



Introduction

The AlaMode is an integrated Arduino compatible board. It is designed as versatile, general purpose data acquisition and control module that stacks on the Raspberry Pi computer and provides a direct connection to Raspberry Pi GPIO connector (26 pins).

The AlaMode includes AVR ATMEGA328P microcontrollers, precision real time clock (RTC), micro SD card reader, reset button & standard shield headers. ATMEGA328P microcontroller includes the Arduino bootloader and works as a bridge between Raspberry PI and Arduino. You can use the standard ARDUINO environment and graphical interface for Windows or Linux for the software development and programming this chip through ISP connector or Serial interface (USB to Serial TTL converter).


ATMEGA328P is connected to Raspberry Pi with I2C, SPI & Serial UART. In AlaMode ATMEGA328P is slave device on I2C bus and Raspberry PI is a master. AlaMode board includes 3V-5V buffers to connect Raspberry Pi with ATMEGA328P. In AlaMode ATMEGA328P uses 5V signal level.

It provides an easy way to add analog sensors, servos (see user contributed notes [here](#)), GPS modules, etc. Since the board has standard ARDUINO connectors, it allows direct connections to the shields specially made for Arduino. Its footprint is similar to that of Raspberry Pi.




Main Features of AlaMode

1. Programmable directly from the Raspberry Pi GPIO, no cables required
2. Temperature-controlled precision Real Time Clock (RTC) DS3231 with battery backup
3. Micro SD Card reader
4. Two-way voltage level shifting for safe and accurate communication between Raspberry Pi and AlaMode
5. GPS interface for Fastrax UP501 module
6. Arduino Uno compatible with standard shield header ([* See Warning below *](#)).
7. AVR ATMEGA328P microcontroller which includes the Arduino bootloader
8. Interfaces with Raspberry Pi computer via I2C, SPI or Serial UART
9. Analog reference can be set to either 5V0 or 3V3 and GND headers to allow interfacing three wires directly
10. Servo headers with 5V0 and GND connections to allow interfacing of 3 wire servos directly.
11. Servos can be powered via onboard 5V0 or from external 5V0
12. FTDI (5V0) or ISP headers for programming & loading sketches
13. Power via external 5V0 to micro-USB socket or directly from Raspberry Pi header.
14. 5V0 and 3V3 indicator light
15. Reset button.
16. General purpose “Blink” LED on digital pin 13

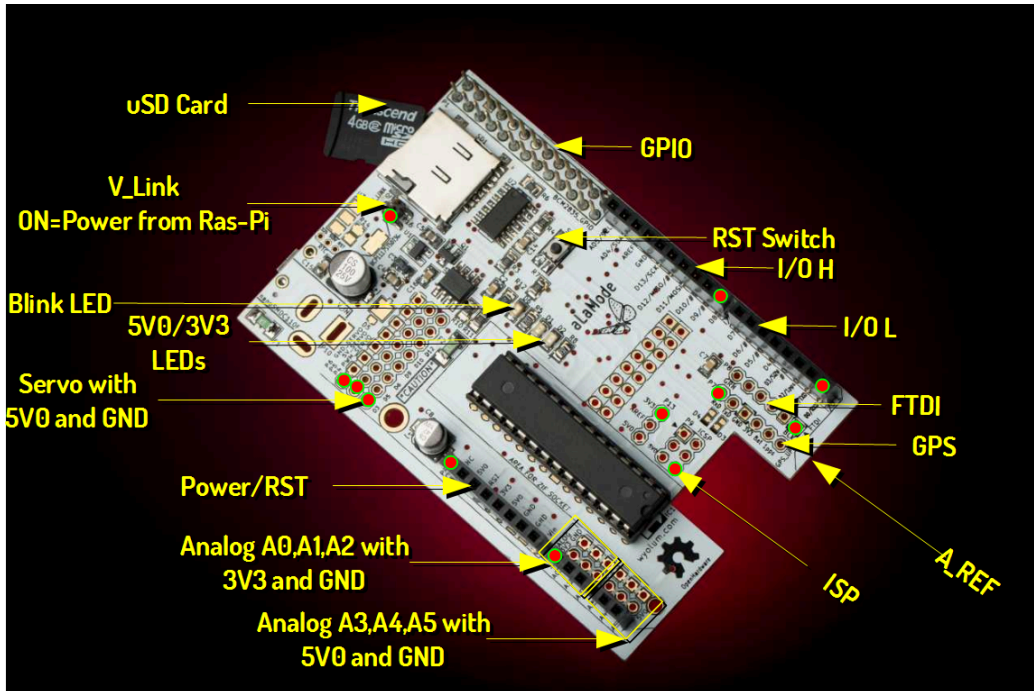

Front view of the board

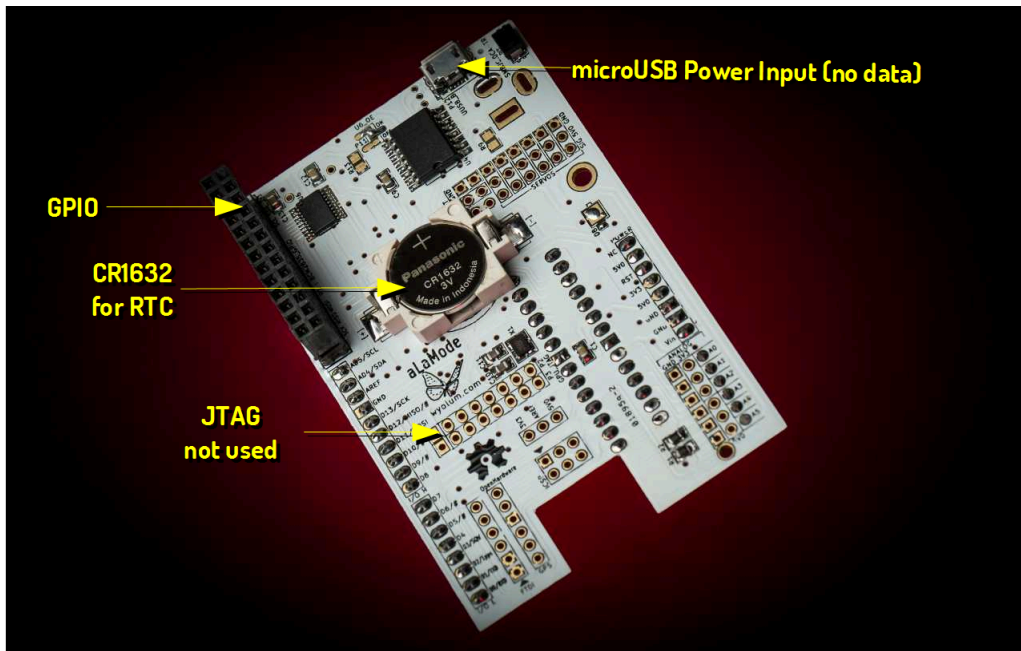

Rear view of the board



! WARNING !

To avoid burning out your Raspberry PI and your AlaMode, please read these safety instructions first


The AlaMode is an Arduino compatible board , BUT it does not have identical functionality as standard Arduino Boards, unless a few changes are made.

The device "as supplied" is only rated to work from an input voltage of 5V DC. This restriction includes input applied to the VIN terminal in the POWER header. A regular Arduino will accept between 7V to 12V at the VIN terminal.

By adding a couple of components, the AlaMode can be upgraded to work off 7V to 12V supply voltage.

HARDWARE CHANGES (refer to the schematic diagram [HERE](#)) :

1. REMOVE resistor R14 (0 ohms)
2. Install voltage regulator U3 (NCP1117S50T)
3. Install Barrel Socket P10
4. Install Diode D5 (MBRM110LT1G) - this provides reverse polarity protection at the Barrel socket. OR
5. Use the 0 ohm resistor removed from R14 and install it at the D5 location - doing this does not provide reverse voltage protection , so use with appropriate caution.

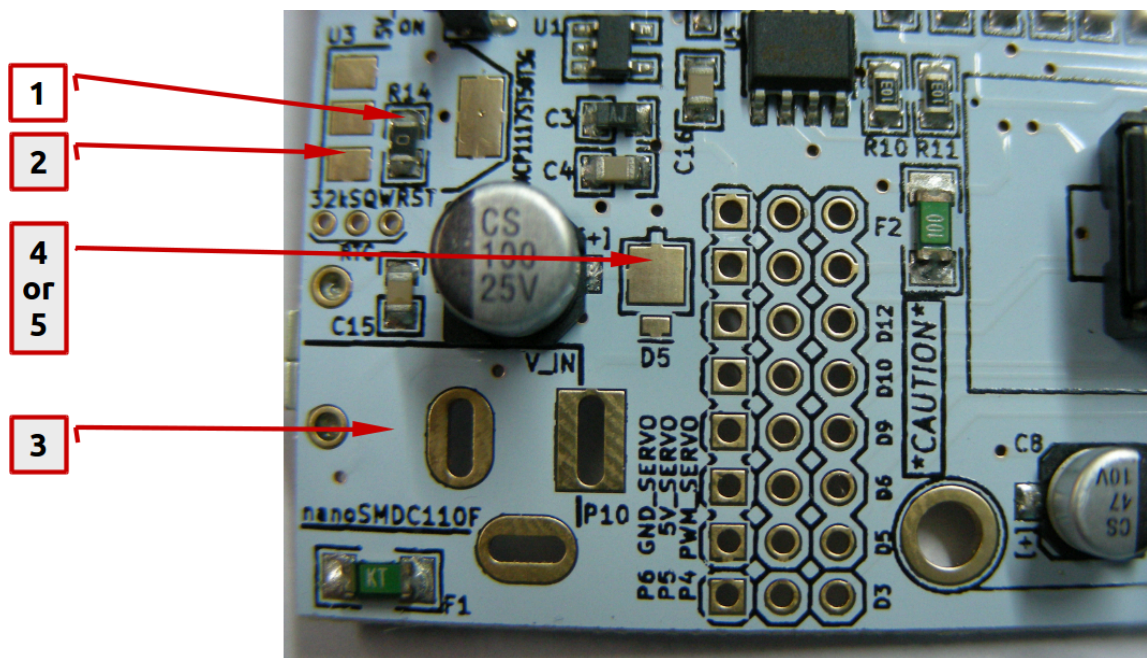



Instructions for safe use

- Please supervise children using the AlaMode
- This product should be operated in a well-ventilated environment.
- This product should be placed on a stable, flat, non-conductive surface in use and should not be contacted by conductive items.
- During operation do not expose it to water, moisture or place on a conductive surface.
- Take care while handling to avoid mechanical or electrical damage to printed circuit board.
- Do not connect or disconnect AlaMode from Raspberry Pi while connected to power supply.
- Please observe electrostatic discharge (ESD) best practice when handling.

Use of Fonts

Normal text appears like this.

```
Terminal Interaction appears like this ~ Courier New with grey background.
```

```
Each line is prefixed with the command prompt "pi@raspberrypi ~ $" which you do not type.
```

Hardware Assembly

You will receive AlaMode hardware without headers installed. The headers are similar to the ones used in Arduino Uno R3. The headers are supplied as a kit and can be soldered if you would like to be able to use standard Arduino shields. If you do not plan to use a shield, a low profile can be maintained by installing right angle headers instead.

For experienced solderers, it should take 5 - 10 minutes to solder the headers. For beginners, do not worry...It will only take you a little longer, about 15 minutes, to solder the headers to the AlaMode.

PRO TIP: push the headers onto the pins of an Arduino Shield before soldering. This holds them perfectly aligned while you solder them in.

Turn the AlaMode upside down where you will find round slot ,i.e., coin type battery holder. If your application requires, you can maintain time information between reboots by populating the RTC backup battery CR1632:

<http://www.digikey.com/product-detail/en/CR1632/P036-ND/269743>.


This will also supply 3.3V backup to both RTC as well as GPS. Now your Alamode is ready to for experimenting.

Note: Pay attention to the polarity markings on the holder & battery



Install Arduino IDE for Raspberry Pi

We recommend you download either the latest version of Raspbian Wheezy from the download site of www.raspberrypi.org or Occidentalis, which is distributed by Adafruit and is based on Raspbian Wheezy. The instructions given below should work for either version. These instructions assume you have your Raspberry Pi connected to the internet. You will find the

icon for LX Terminal on your desktop  .

LX Terminal in Raspbian

Open LXTerminal and type following commands:

```
pi@raspberrypi ~ $ sudo apt-get update
pi@raspberrypi ~ $ sudo apt-get install arduino
```

To make the necessary changes for the Arduino IDE to recognize AlaMode, download AlaMode set up from the link given below.

<https://github.com/wyolum/alamode/raw/master/bundles/alamode-setup.tar.gz>

From the command line, unpack and install it:

```
pi@raspberrypi ~ $ tar -xvzf alamode-setup.tar.gz
pi@raspberrypi ~ $ cd alamode-setup
pi@raspberrypi ~ $ sudo ./setup
```

if you are using the Jessie distro of raspbian, use:

```
pi@raspberrypi ~ $ sudo ./jessie-setup
```

instead of the ./setup above.

The above lines will install Arduino IDE and get it ready to work with the AlaMode. The standard install will work out of the box with any Arduino-compatible board that has an FTDI interface, but Uno's `/dev/ttyACM0` and the Raspberry Pi `/dev/ttyAMA0` are not recognized by Arduino IDE. To do that we have created some "udev rules" that create symbolic links to those devices that are named `/dev/tty/S1(Uno)` and `/dev/ttyS0 (AlaMode)` respectively.




Interfacing with Raspberry Pi & Powering Up

AlaMode comes with built-in matching 26 pins female header and for direct interfacing with Raspberry Pi through GPIO pins. A bit of care is required when putting the two devices together. It is easy to insert just one row of pins into the socket, but all of the pins need to be connected.


The following GPIO pins available to AlaMode are I2C, SPI, UART, GND, 3V3, 5 V 0, GPIO pin # 1 for reset. It is advised to interface both the devices without connecting to power.

The AlaMode can be powered in three ways:

(1) Directly from Raspberry Pi, you can put jumper on the pins labeled “5V_Link” to the ON position. With this jumper in this position, the AlaMode gets its power through the GPIO interface, so you will need a power supply for the Raspberry Pi (RPi) that is capable of supplying a current of at least 1A.

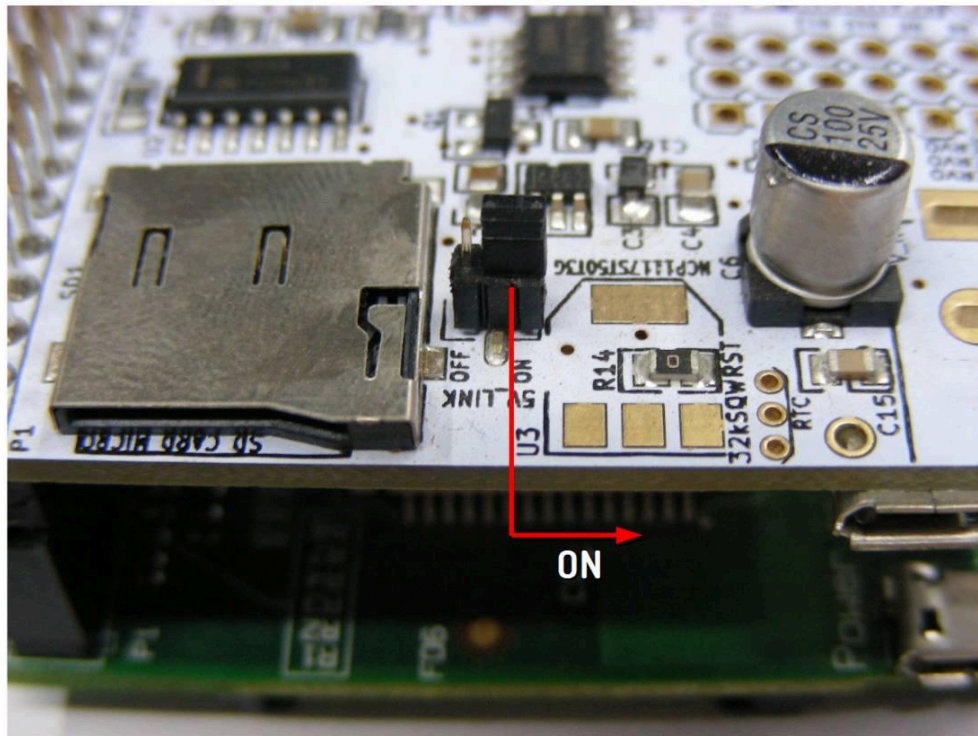

5V_Link in ON position.

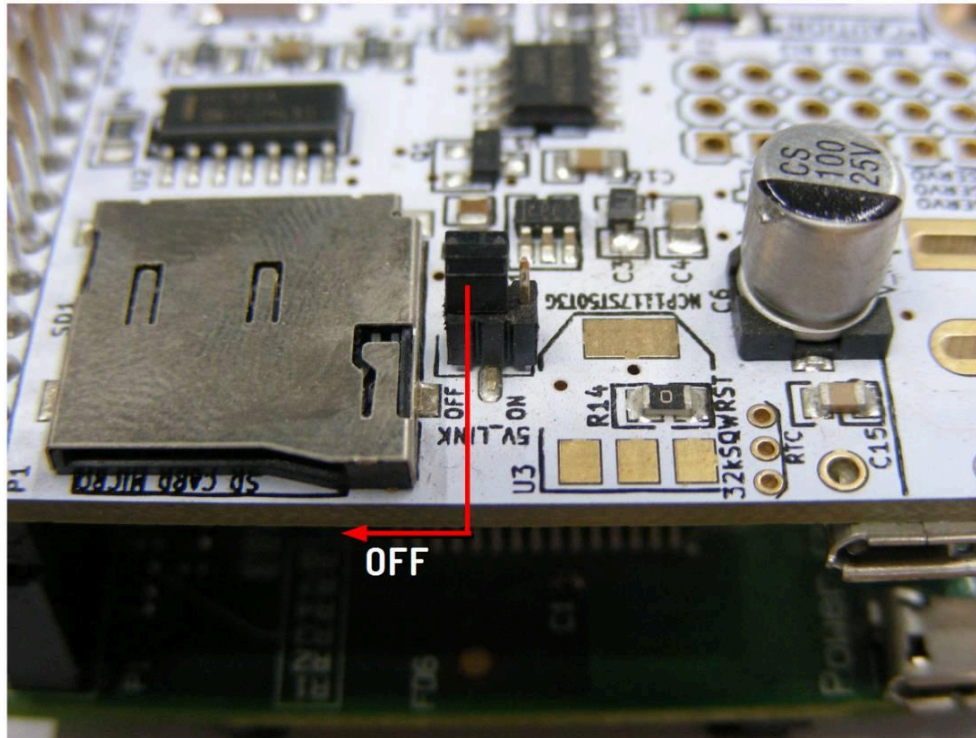

5V_Link in OFF position.

(2) From external source by connecting it to 5V0 using micro USB port available on the other side of the board. In this case the “5V_Link” jumper has to be put in OFF position.

(3) Using a 5V FTDI cable. In this case the “5V_Link” jumper has to be put in OFF position. **WARNING:** If you leave this jumper in the ON position you will ruin your Alamode board. (To use the FTDI from Windows, select Arduino UNO in the Board selection of the IDE.)


Note: Do not connect the power supply to the power connectors if you use the FTDI for the communications with AVR ATMEGA328P microcontroller. FTDI cable or USB to Serial converter will provide USB 5V power to board.

Once you interface and power up, you will note that LED light D1 and D2 are glowing. which indicates AlaMode is powered.


Let's test AlaMode using Simple Blink Test to get you going.

Open Arduino IDE.


If AlaMode is directly connected to Raspberry Pi through GPIO connector, then




- **Select in Arduino menu: Tools ->Board -> AlaMode**

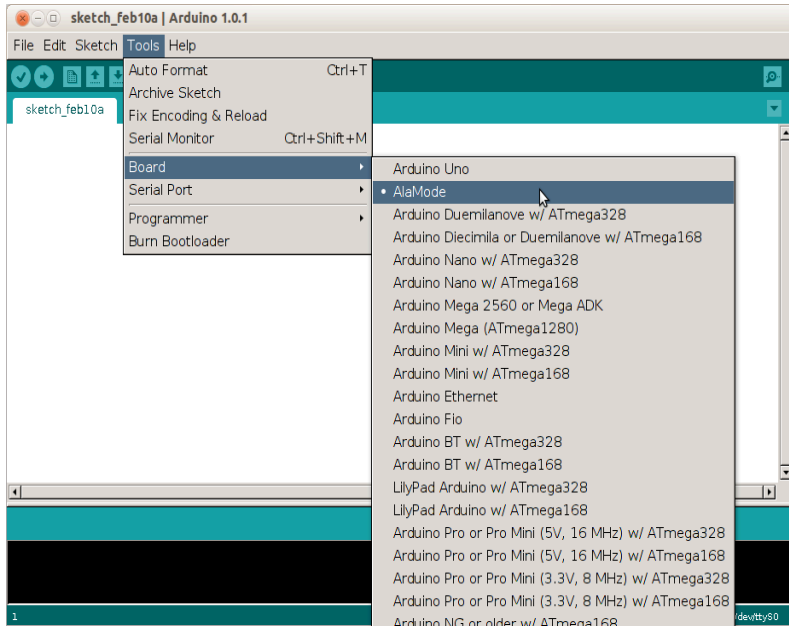

- **Tools -> Serial Port -> /dev/ttyS0**

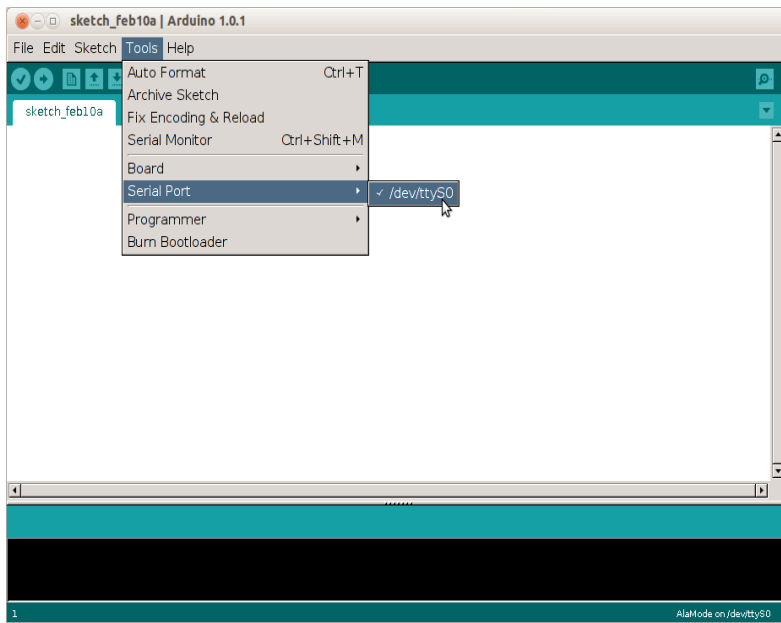


- **File -> Examples -> Basics -> Blink.**

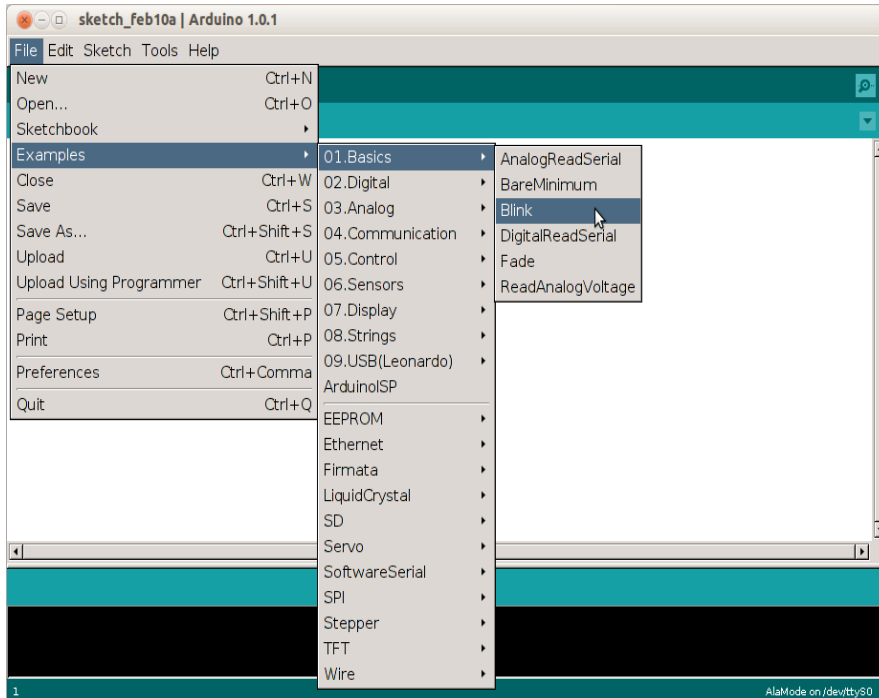


The Blink sketch is loaded into the IDE. Now press the *upload icon or press ctrl + u* to upload the sketch to AlaMode. You will see the green LED D6 is blinking, which means AlaMode is working.

(2) If you are using a 5V FTDI cable (check the connection), then

- **Select in Arduino menu: Tools ->Board -> UNO**
- **Tools -> Serial Port -> /dev/ttyUSB0**
- **File -> Examples -> Basics -> Blink.**

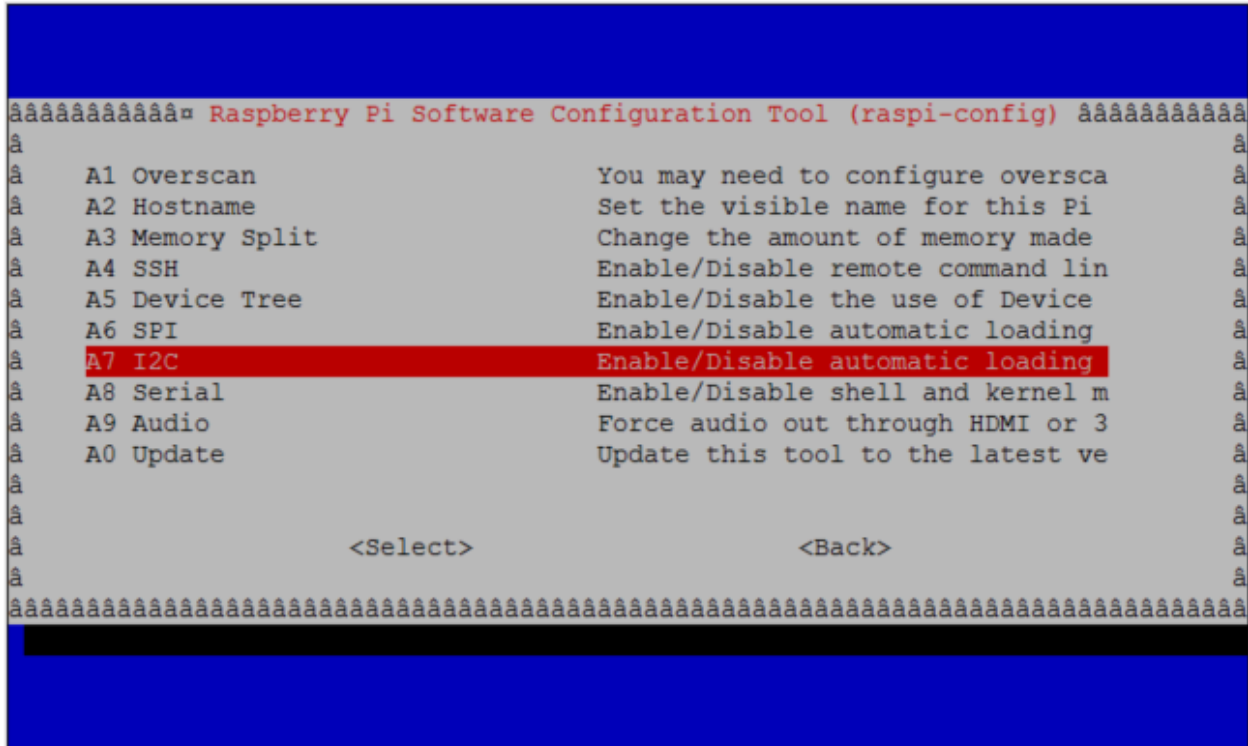

Enable

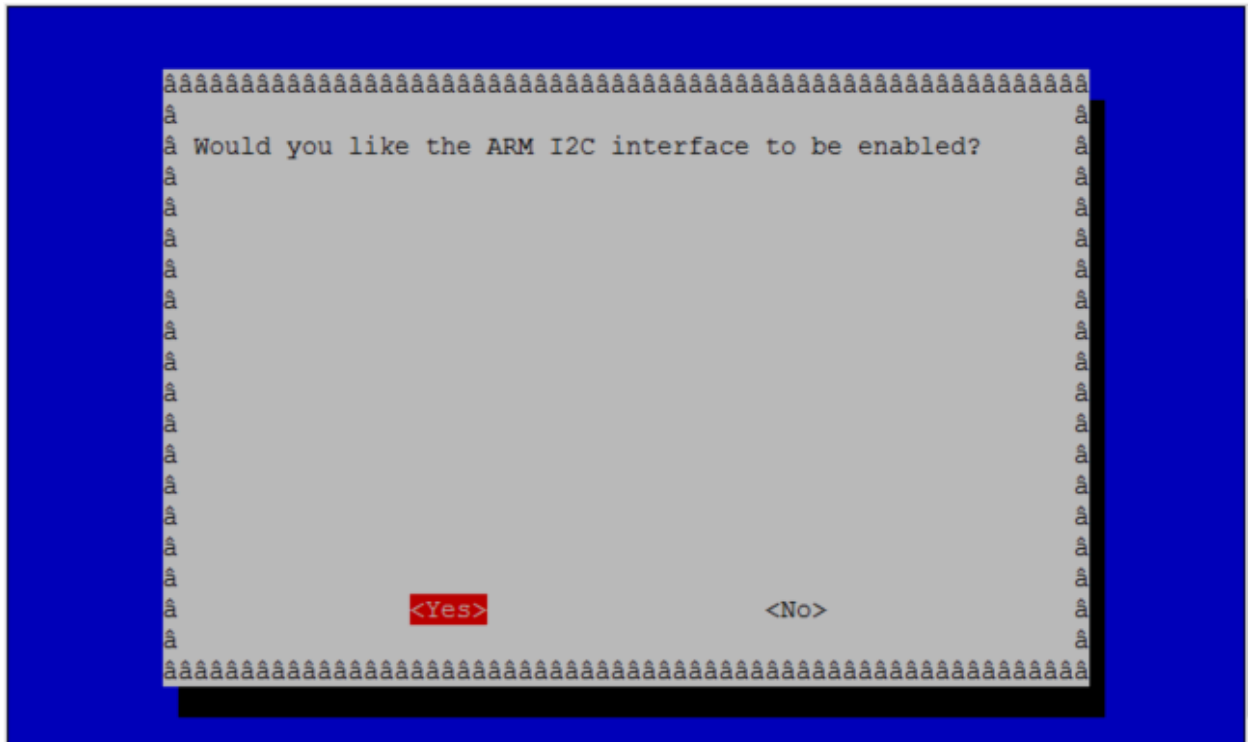

After exiting, you will be asked to reboot. You also need to edit the /etc/modules file described at the end of the next section




Manual Installation

Follow the steps on LXTerminal as shown below

```
pi@raspberrypi ~ $ sudo nano /etc/modprobe.d/raspi-blacklist.conf
```

Like this:

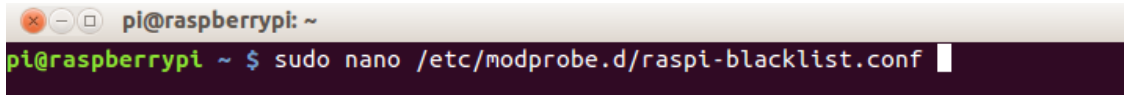


```
pi@raspberrypi: ~  
pi@raspberrypi ~ $ sudo nano /etc/modprobe.d/raspi-blacklist.conf
```

Add # in front of two lines as shown below...

```
#blacklist spi-bcm2708
```

```
#blacklist i2c-bcm2708
```

Like this:

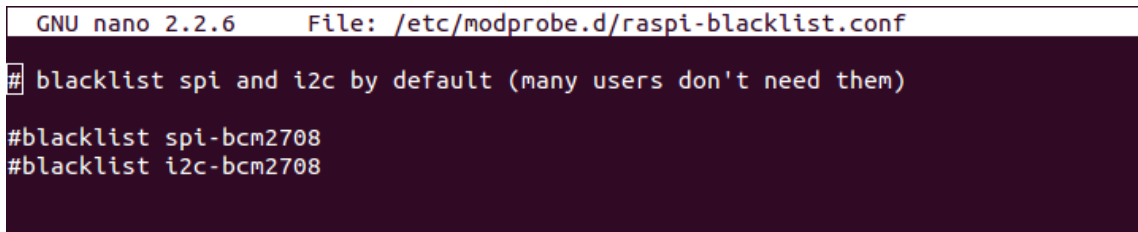

```
GNU nano 2.2.6 File: /etc/modprobe.d/raspi-blacklist.conf  
# blacklist spi and i2c by default (many users don't need them)  
#blacklist spi-bcm2708  
#blacklist i2c-bcm2708
```

Press **ctrl + x** and press **y** to save it.

The following step also needs to be done even if you used raspi-config

```
pi@raspberrypi ~ $ sudo nano /etc/modules
```

and add **i2c-dev** and **i2c-bcm2708** at the end of the file and save it.

A reboot is probably called for here.



Like this:

```

GNU nano 2.2.6      File: /etc/modules

# /etc/modules: kernel modules to load at boot time.
#
# This file contains the names of kernel modules that should be loaded
# at boot time, one per line. Lines beginning with "#" are ignored.
# Parameters can be specified after the module name.

snd-bcm2835
i2c-dev
i2c-bcm2708

```

[Read 9 lines]

```

^G Get Help  ^O WriteOut  ^R Read File ^Y Prev Page ^K Cut Text  ^C Cur Pos
^X Exit      ^J Justify   ^W Where Is ^V Next Page ^U UnCut Text ^T To Spell

```

Install the I2C tools:

```

pi@raspberrypi ~ $ sudo apt-get update
pi@raspberrypi ~ $ sudo apt-get install i2c-tools

```

Then type following lines:

```

pi@raspberrypi ~ $ sudo i2cdetect -y 0 // RPi Model B revision 1 brd
pi@raspberrypi ~ $ sudo i2cdetect -y 1 // RPi Model B revision 2 brd

```

You will see from the figure below that there is a device occupying address 0x68 which is the address for RTC.

```

 0 1 2 3 4 5 6 7 8 9 a b c d e f
00:  ---
10:  ---
20:  ---
30:  ---
40:  ---
50:  ---
60:  --- 68 ---
70:  ---

```

Continuing the [tutorial](#), let's load up the RTC module by running the following command:



```
pi@raspberrypi ~ $ sudo modprobe rtc-ds1307
```

The following commands need to be run as root. The command “sudo bash” changes to the root user. And “exit” returns you to normal user mode.

```
pi@raspberrypi ~ $ sudo bash
```

(for revision 1 board)

```
root@raspberrypi:/home/pi# echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-0/new_device
```

(for revision 2 board)

```
root@raspberrypi:/home/pi# echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-1/new_device
```

(leave super user)

```
root@raspberrypi:/home/pi# exit
```

If everything goes well, then you can check the hwclock time. If the time is not correct or if you are not connected to internet, you can set the time by running following script:

It will set this time to hwclock and once the time is correct, check it with *date* command.

```
pi@raspberrypi ~ $ sudo hwclock --set --date="2013-01-31 20:00:00"
```

If you are connected to the internet, you can *instead* update the RTC from the system time:

```
pi@raspberrypi ~ $ sudo hwclock -w
```

and verify it with

```
pi@raspberrypi ~ $ sudo hwclock -r.
```

Next time you will like to add the RTC kernel module to the */etc/modules* list, so it is loaded automatically when the machine boots. For this, run :

```
pi@raspberrypi ~ $ sudo nano /etc/modules
```

and add *rtc-ds1307* at the last line i.e. after *i2c-dev* and save it.



```
pi@raspberrypi: ~
File Edit Tabs Help
GNU nano 2.2.6 File: /etc/modules
# /etc/modules: kernel modules to load at boot time.
#
# This file contains the names of kernel modules that should be loaded
# at boot time, one per line. Lines beginning with "#" are ignored.
# Parameters can be specified after the module name.
snd-bcm2835
i2c-bcm2708
i2c-dev
rtc-ds1307
[ Read 10 lines ]
^G Get Help      ^O WriteOut     ^R Read File    ^Y Prev Page    ^K Cut Text     ^C Cur Pos
^X Exit          ^J Justify      ^W Where Is     ^V Next Page    ^U UnCut Text   ^T To Spell
```

It is also required to create the DS1307 device creation at boot, edit `/etc/rc.local` by running

```
pi@raspberrypi ~ $ sudo nano /etc/rc.local
```

And add after line containing `fi` (note “\” is a continuation line that means the command continues on the next line)

```
pi@raspberrypi ~ $ sudo modprobe rtc-ds1307
pi@raspberrypi ~ $ echo ds1307 0x68 > \
    /sys/class/i2c-adapter/i2c-0/new_device // for revision 1 board.
pi@raspberrypi ~ $ echo ds1307 0x68 > \
    /sys/class/i2c-adapter/i2c-1/new_device // for revision 2 board.
pi@raspberrypi ~ $ sudo hwclock -r
```

before “`exit 0`” and save it.

see the screenshot in the next page.



```
pi@raspberrypi: ~
File Edit Tabs Help
GNU nano 2.2.6 File: /etc/rc.local
#!/bin/sh -e
#
# rc.local
#
# This script is executed at the end of each multiuser runlevel.
# Make sure that the script will "exit 0" on success or any other
# value on error.
#
# In order to enable or disable this script just change the execution
# bits.
#
# By default this script does nothing.
#
# Print the IP address
_IP=$(hostname -I) || true
if [ "$_IP" ]; then
  printf "My IP address is %s\n" "$_IP"
fi
sudo modprobe rtc-ds1307
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-0/new_device
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-1/new_device
sudo hwclock -r
[ Read 25 lines ]
^G Get Help      ^O WriteOut      ^R Read File     ^Y Prev Page     ^K Cut Text      ^C Cur Pos
^X Exit          ^J Justify       ^W Where Is     ^V Next Page     ^U UnCut Text   ^T To Spell
```

To make this effective, you need to reboot the system by running *sudo reboot*.

Now, the RTC of AlaMode is added as real time clock for Raspberry Pi.

More help

Join us at the Wyolum user forums on Google+

<https://plus.google.com/u/0/communities/101981201962256466651>



Examples


Example 1: AlaMode Test

This is the factory test we use for AlaMode. It tests the Serial port, I2C, real time clock, and SD card. A side benefit is you can see both sides (the Pi side and the AlaMode side) of each of the ports. I am using the AdaFruit “WebIDE” to run this example. This is a great way to develop on the Raspberry Pi without setting up a display. [Give it a try](#), or use your favorite method.

1. Download or Copy/Paste the sketch [AlaModeTest.ino](#) (or get the [raw](#) file) from bitbucket into the Arduino IDE.



2. Upload the sketch to AlaMode by clicking the button with the right arrow on it.
3. [Download pyserial 2.5](#) and [install pyserial](#). This is a super easy library that allows connections through any serial port.
4. [Download](#) or Copy/Paste the python AlaModeTester.py file into a new file in the WebIDE.
5. Run AlaModeTester.py by clicking “Run” in WebIDE. Success! (Mostly.) I did not have an SD card installed in AlaMode at the time of the test. The SD test is run on the AlaMode once at boot up. To retest, insert an uSD card in the AlaMode, then hit reset on the AlaMode, then rerun the test by clicking “Run” in WebIDE.

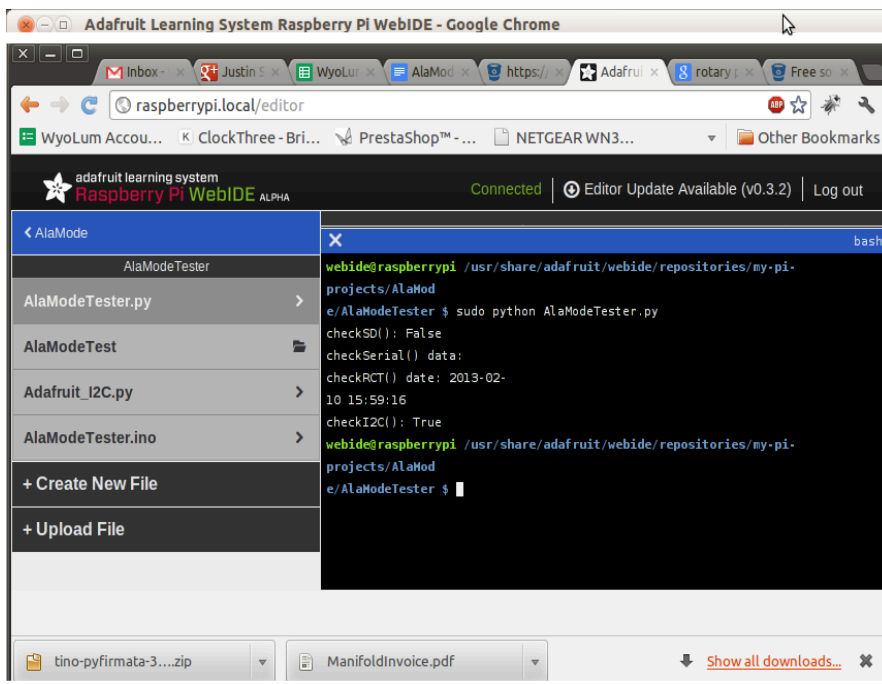

Example 2: Firmata Blink

This is only useful if the Raspberry Pi and the AlaMode can interact. The [Firmata](#) library is a messaging handling protocol that takes a lot of the difficulty out of two-platform development while only having to develop code on one the Pi side of the interface. Firmata can also be extended on the AlaMode side of the interface to set up special message handling.

1. First start the Arduino IDE.




```
pi@raspberrypi ~ $ /usr/bin/arduino &
```


(The “&” in the above line “backgrounds” the arduino process, so that you can still use the command line.)

2. When Arduino comes up, this can take 15 - 20 seconds.

Open File--> Examples--> Firmata → StandardFirmata.


Make sure your selected board is “AlaMode” with serial port “/dev/ttyS0”.

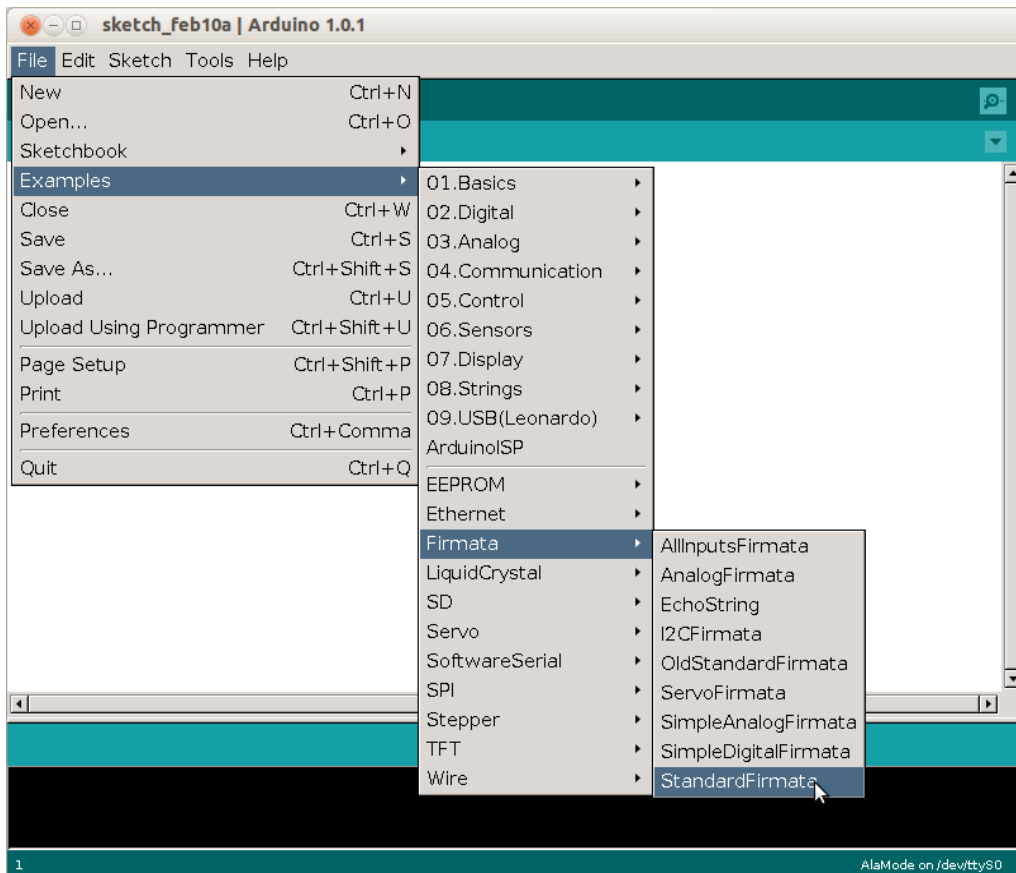

3. Upload the sketch by clicking the button with the right arrow on it: . The compiler does not run very quickly on the Raspberry Pi, so this takes about a minute.


4. Now we need to install pyFirmata on the Raspberry Pi. Extract the [source code](#) to “/home/pi/tmp”.

```
pi@raspberrypi ~ $ mkdir tmp # no harm if already exists
pi@raspberrypi ~ $ cd tmp
```



```
pi@raspberrypi ~/tmp $ wget \
  https://bitbucket.org/tino/pyfirmata/get/3f54748b2154.zip
pi@raspberrypi ~/tmp $ unzip 3f54748b2154.zip
...
pi@raspberrypi ~/tmp/... $ sudo /usr/bin/python2.7 setup.py install
```

5. Run [pyFirmataTest](#) through the WebIDE. (Create New File, copy/paste [code](#)), then click run.

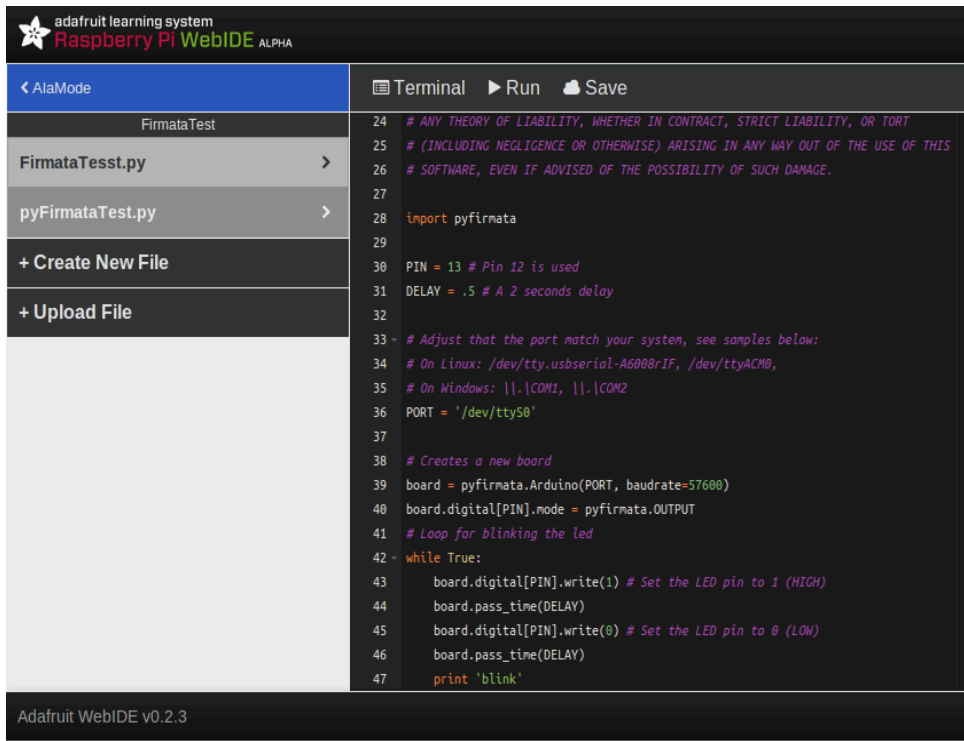

The screenshot shows the Adafruit WebIDE interface. On the left, there is a file explorer with a folder named 'AlaMode' containing files 'FirmataTest', 'FirmataTesst.py', and 'pyFirmataTest.py'. Below the file explorer are buttons for '+ Create New File' and '+ Upload File'. The main area is a terminal window with the following code:

```
24 # ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT
25 # (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS
26 # SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
27
28 import pyfirmata
29
30 PIN = 13 # Pin 12 is used
31 DELAY = .5 # A 2 seconds delay
32
33 # Adjust that the port match your system, see samples below:
34 # On Linux: /dev/tty.usbserial-A6008rIF, /dev/ttyACM0,
35 # On Windows: ||.|COM1, ||.|COM2
36 PORT = '/dev/ttyS0'
37
38 # Creates a new board
39 board = pyfirmata.Arduino(PORT, baudrate=57600)
40 board.digital[PIN].mode = pyfirmata.OUTPUT
41 # Loop for blinking the led
42 while True:
43     board.digital[PIN].write(1) # Set the LED pin to 1 (HIGH)
44     board.pass_time(DELAY)
45     board.digital[PIN].write(0) # Set the LED pin to 0 (LOW)
46     board.pass_time(DELAY)
47     print 'blink'
```

At the bottom of the terminal window, it says 'Adafruit WebIDE v0.2.3'.

If all went correctly, an LED on your AlaMode should be blinking! Hooray! Today a blinky LED, tomorrow the World!

Example 3: DS3231 Temperature Compensated Real Time Clock

In this example we access the time from the DS3231 real time clock. Since it is connected directly to the I2C bus, we need play only with the Pi side of the house.

1. Make a new directory called DS3231 by clicking “Make New Folder” in WebIDE.
2. Download AdaFruit’s easy-to-use [I2C library](#) into DS3231 (created in step #1)
3. Download WyoLum’s [DS3231.py](#) into the same directory.
4. Run DS3231.py by clicking “Run” in WebIDE.



Adafruit Learning System Raspberry Pi WebIDE ALPHA

Connected | Log out

AlaMode

Terminal Run Debug Visualize Save Schedule

```
36     date = [int(x) for x in date.split(':')]
37     self.ds3231.writeList(0, data[:7])
38
39 if __name__ == '__main__':
40     ds3231 = DS3231()
41     print ds3231.getTime()
42     ds3231.setTime(datetime.datetime.now())
43     print ds3231.getTime()
44
```

webide@raspberrypi /usr/share/adafruit/webide/repositories/my-pi-projects/AlaMode/Lib \$ sudo python DS3231.py

```
2013-02-10 16:51:14
2013-02-10 16:51:15
webide@raspberrypi /usr/share/adafruit/webide/repositories/my-pi-projects/AlaMode/Lib $
```

Adafruit WebIDE v0.3.2 Scheduler Active | Schedule Manager

tino-pyfirmata-3....zip ManifoldInvoice.pdf CordexBPCMDT....pdf Show all downloads...



Servo Control

The AlaMode board provides a convenient way to connect to servo motors. The photo of the top of the board shows an area labeled Servo 5V0 and GND. This area of the board has 8 sets of three pins. The first six sets are used to control servo motors; the remaining 2 sets select your power option. Each set of three pins has Ground, 5Vdc, and a PWM pin from the Arduino. The pin closest to the Arduino chip is the PWM pin; the pin furthest from the Arduino chip is the Ground. Counting from the edge of the AlaMode the PWM pins are D3, D5, D6, D9, D10 and D11. To connect a servo you push its three wire connector onto a set of pins. Be sure the orientation is correct.

You have two choices for 5V power to your servos. This choice is made using the last two sets of three pins: set 7 and 8. Rows 7 and 8 have identical function. You can select servo power by using only one of the two rows and leaving the other row empty. Or you can place an identical jumper in both rows to give you more current. (This document has an excellent photo of how this works : http://wyolum.com/docs/AlaMode/AlaMode_V1datasheet.pdf)

Using Board Power - By putting a jumper between the middle pin and the one closest to the Arduino chip you select to use the same 5V power as the AlaMode board is using. If your AlaMode board is using power from the Raspberry Pi GPIO connector, then you will not have much power left for your servos. If you are powering your AlaMode from its own mini USB connector then you can supply enough power to run several small servos.


Using Off Board Power - Your second choice for powering the servos is to remove the jumpers from rows 7 and 8. Instead you can connect an external 5Vdc power supply to the pins in rows 7 and 8. Ground connects to pin furthest from the Arduino chip and +5vdc connects to the center pin. The pin closest to the Arduino will not be used.

The Arduino IDE has a sample program for controlling servo motors.


AlaMode continues to reset - If you find that your AlaMode board resets when your servos are running with on board power, then you are overloading your power supply. Moving the servos is pulling your power supply voltage low enough that the Arduino resets. You should either use smaller servos, use fewer servos, or get a more powerful power supply. You should be able to run six micro servos with a 2.1A power supply.

Schematics:



We have included the schematics for the AlaMode in the following pages for further reference.

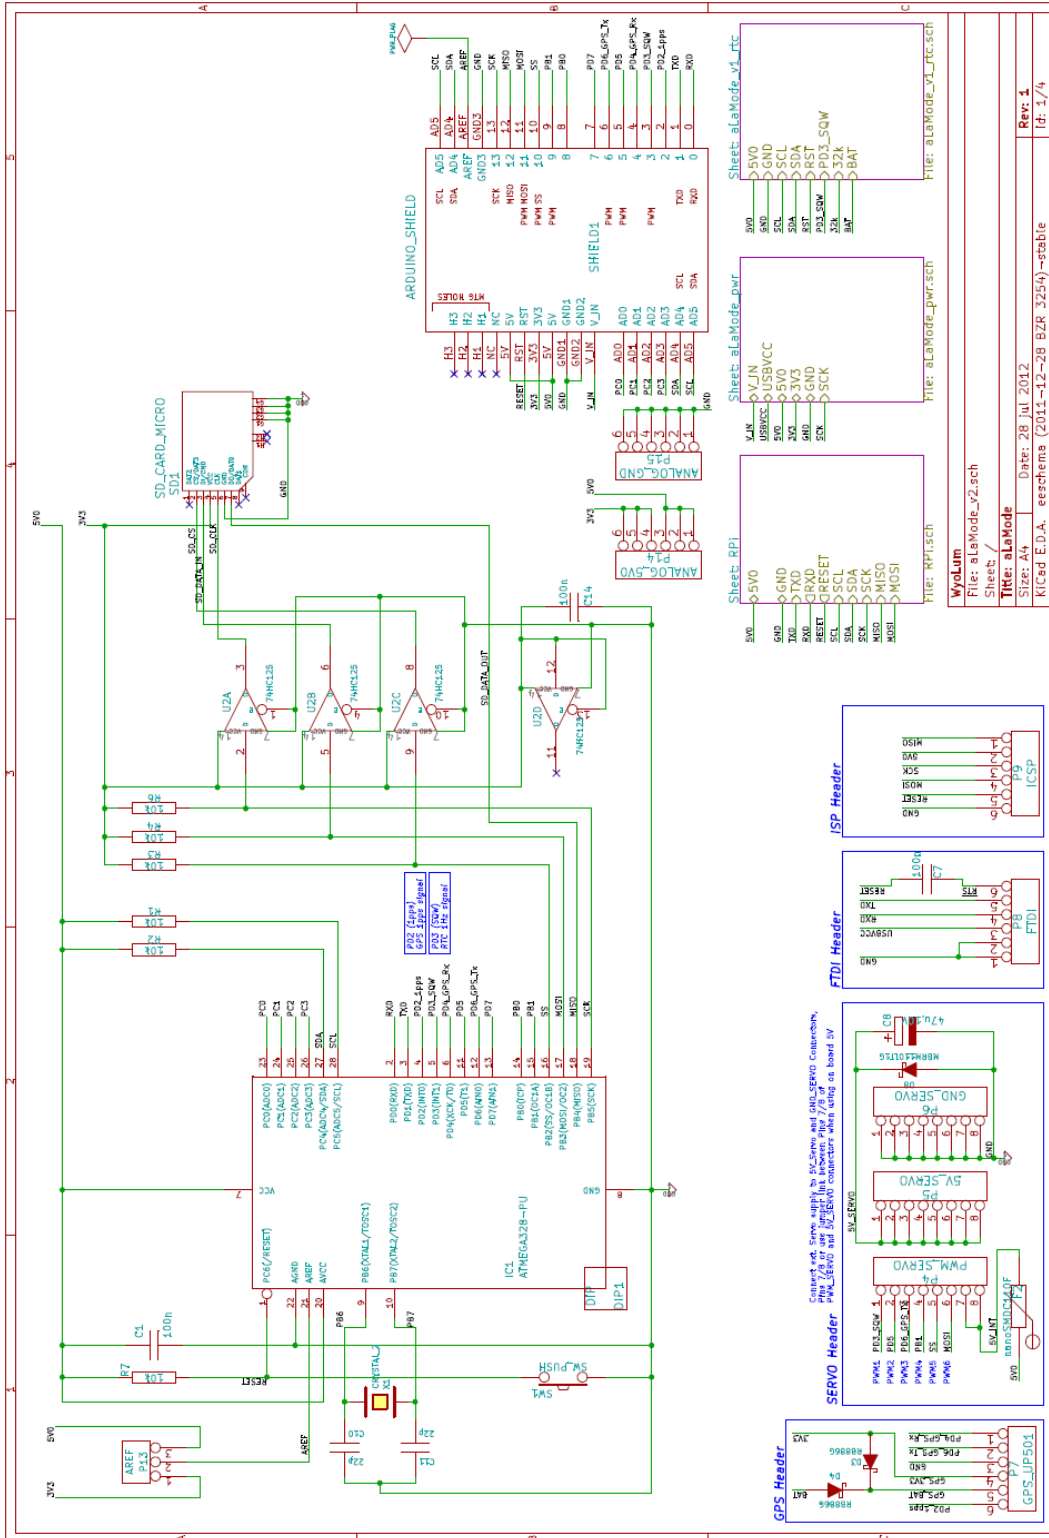

AlaMode Schematic - 1

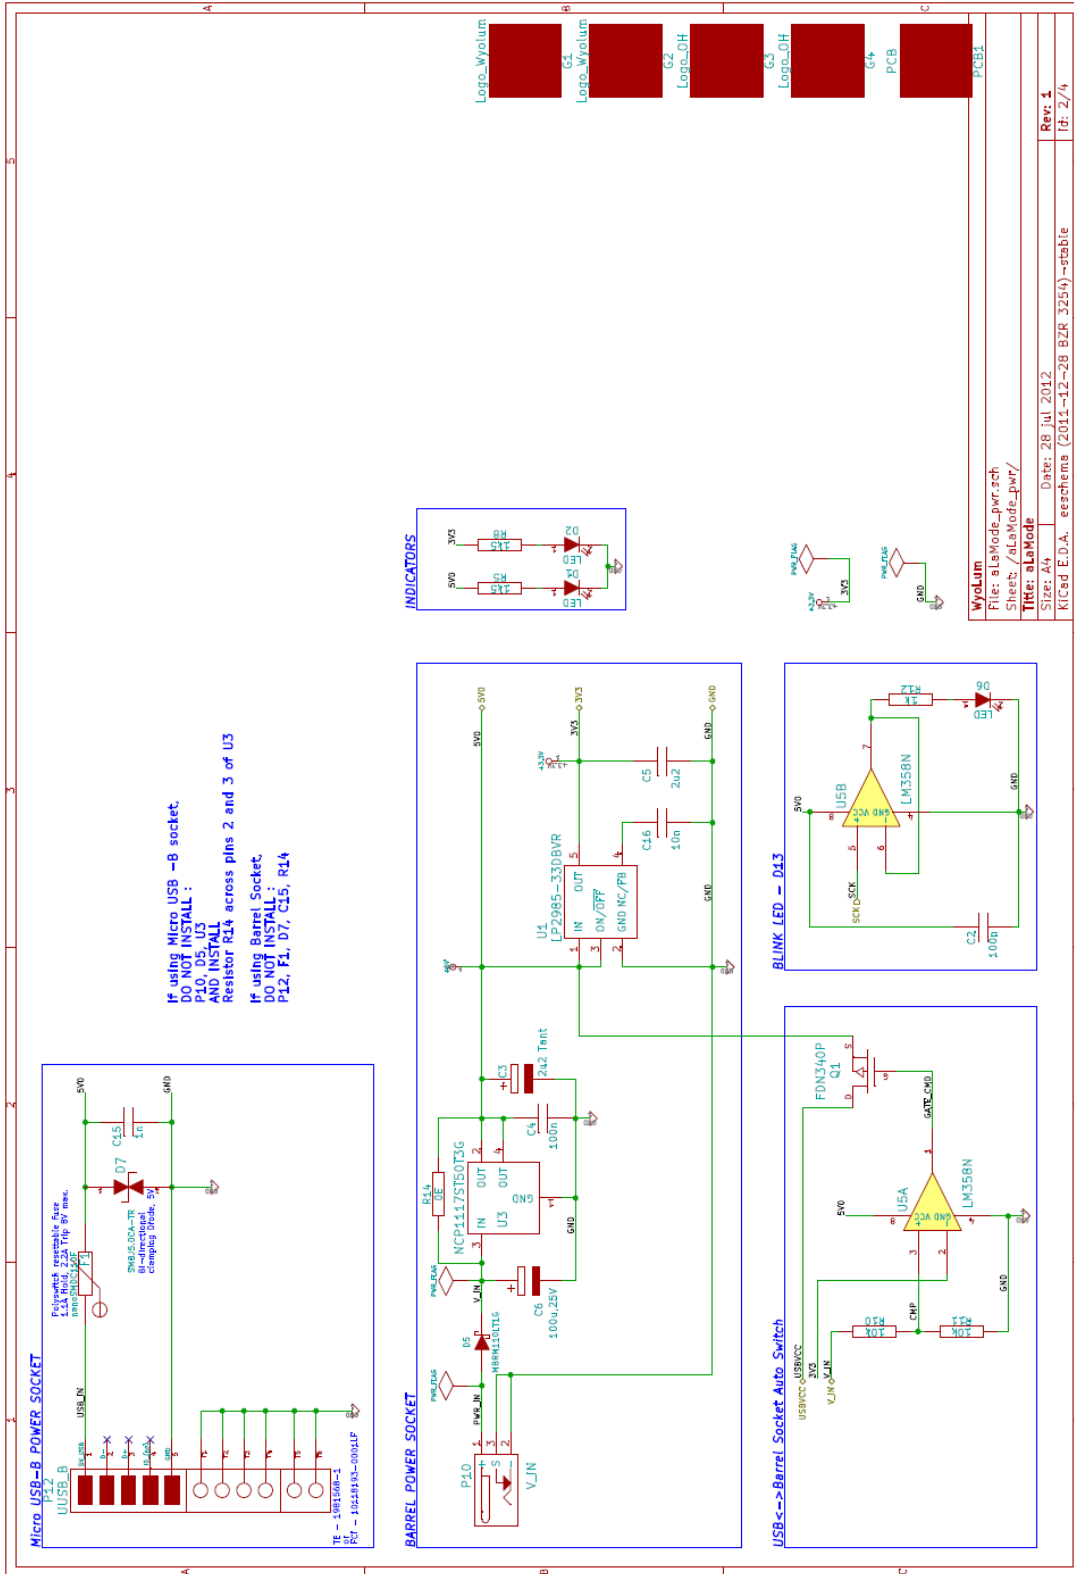

AlaMode Schematic - 2

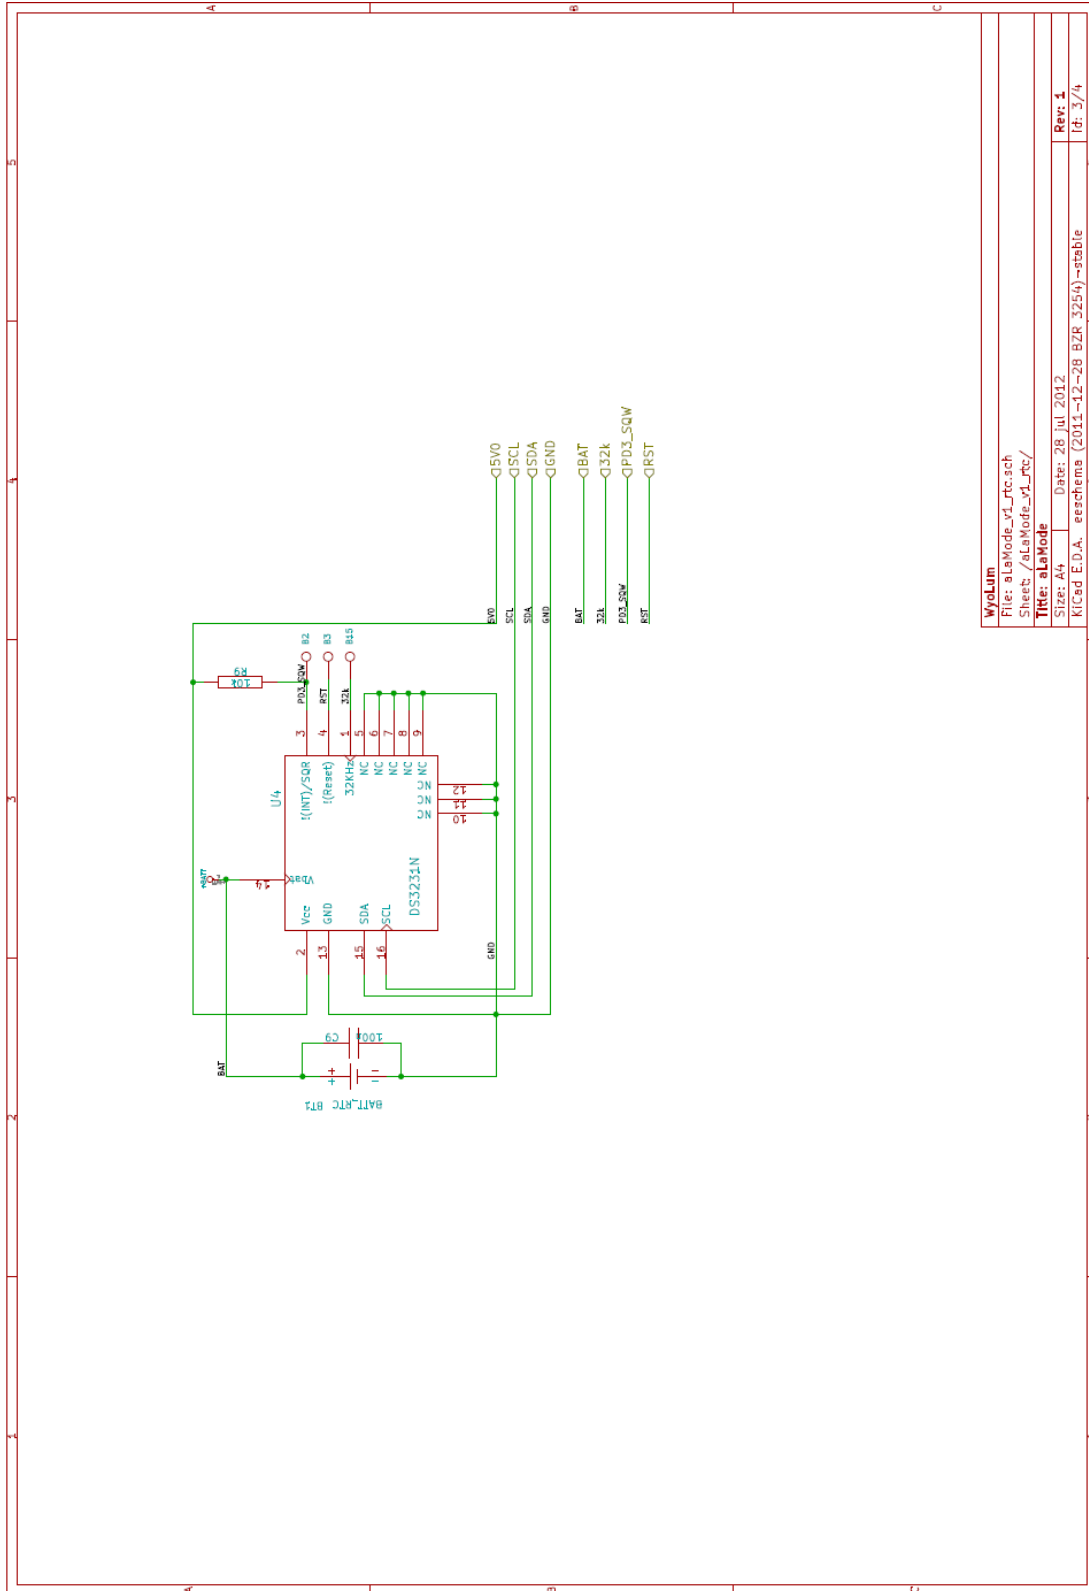

Wyolum	
File: alaMode_v1_rtc.sch	
Sheet: alaMode_v1_rtc/	
Title: alaMode	
Size: A4	Date: 28 Jul 2012
KiCad E.D.A. eeschema (2011-12-28 BZR 3254) -stable	Rev. 1
	Id: 3/4

AlaMode Schematic - 3

