

Unboxing Tips

NOTES


To help you get started smoothly, here's a detailed tutorial that explains every step from unboxing to trying on and adjusting. The specific steps are as follows:

1. Module installation steps

Video: https://youtu.be/T_TsX2dOR_Y



***Press the button for quick installation.**

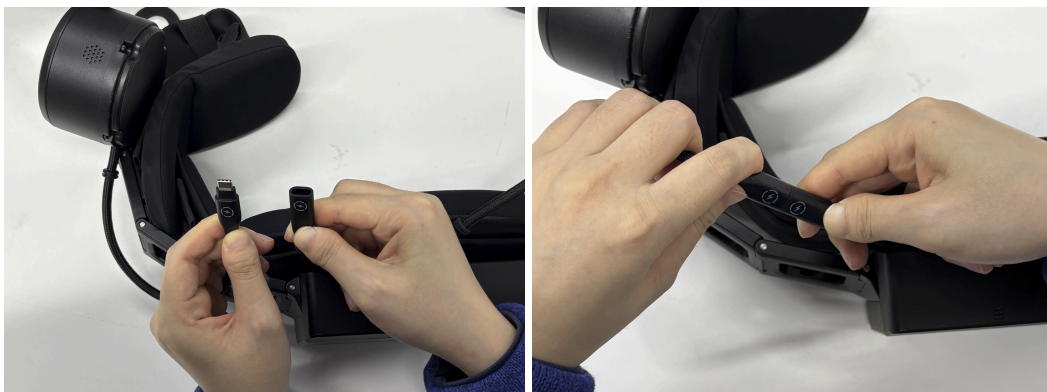




***Connect to the Type-C port on the leg, and connect to the Type-C port on the control box.**

2. Adjusting the length of the Exo-belt

Video: <https://youtu.be/qBb-Pc6bvjU>

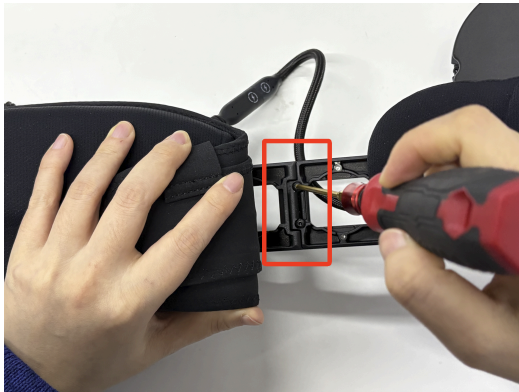


***Disassembly and assembly the belt hinge: remove the two screws, then take out the pin.**

3. Replace the leg straps

Video: <https://youtu.be/ORQNbeAQoao>



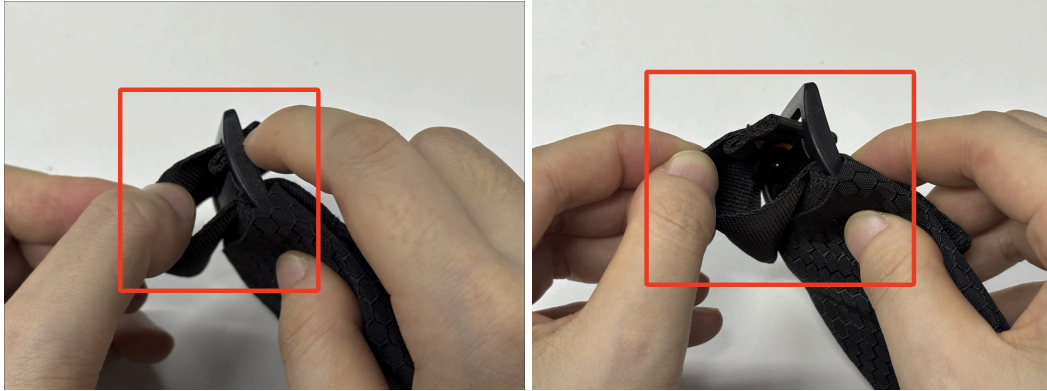

*** The medium size is pre-installed on the device. Three sizes are available: large, medium, and small. Choose the strap size that fits your thigh circumference.**

4. Install/Remove battery

Video: <https://youtu.be/s4E3H5d9x1s>



*** Remove: press the battery release button, then pull out the battery.**



***Install: insert the battery into the battery slot at a 15-degree angle, then push it in.**


5. Check battery status



*** Touch the button, and the indicator lights will show the remaining battery level.**

***Press and hold the button for two seconds. The indicator light will flash twice, and the battery will switch to power bank mode.**

6. Download APP

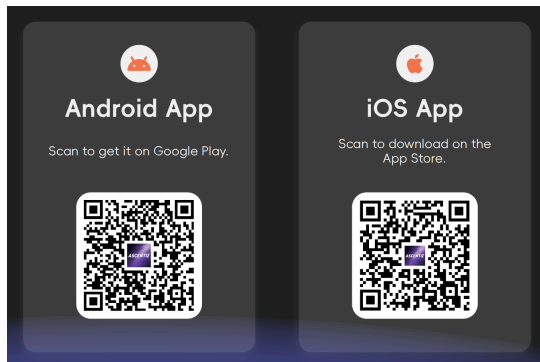

7. How to wear

Video: <https://youtu.be/M66XGxHcQ34>



8. Power on

Video: <https://youtu.be/mVisMi944OE>



*** Press and hold the power button until the white indicator lights up fully, then release.**



*** The device automatically detects whether it is properly worn. If not worn, the indicator light will flash yellow after power-on, and the device will not function properly.**

9. Mode Switch & Pause



Ease Mode



ACC Mode



Train Mode



Pause

*** Press the "Mode Switch" button to cycle through the different exercise modes. Green indicates Ease Mode, blue indicates ACC Mode, and orange indicates Train Mode. Briefly press the power button to pause the device.**

10. Release the leg strap



*** Pull outward on the quick-release button to release the buckle.**