


Auxiliary Fusebox for Vstrom


Fitting the unit is simple and straightforward, just connect the ring connectors to the battery terminals, red wire to + and black wire to -.

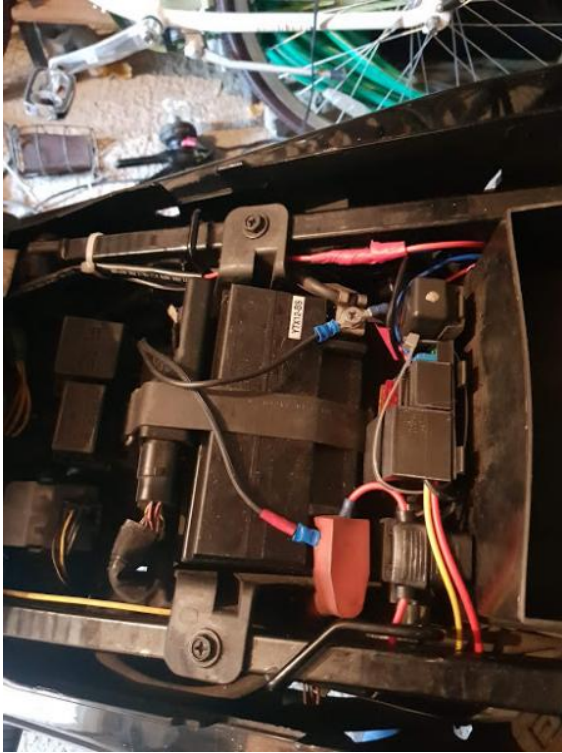


Insert a fuse in the main fuse holder, you can add up the fuses for your accessories and put the next highest fuse in, or just stick a 20 / 25 amp fuse in there.




Next you'll need to find the connector for the rear brake, this is where the unit gets 12v ignition to trigger the relay and turn on the accessories. On older 650s and 1000s it can be found just under the coolant reservoir bottle. Part the original white connector (orange and white with black trace wires) and connect the fusebox loom between them as shown below.

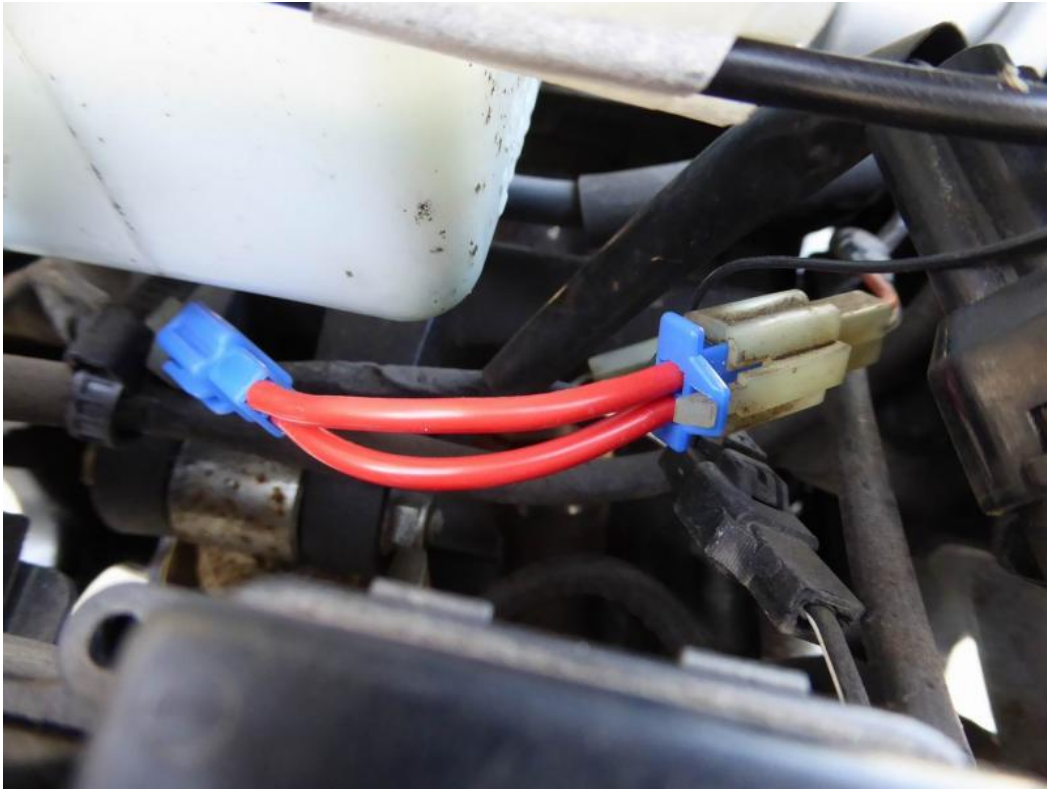

On the stacked headlight 650s it is in the side panel

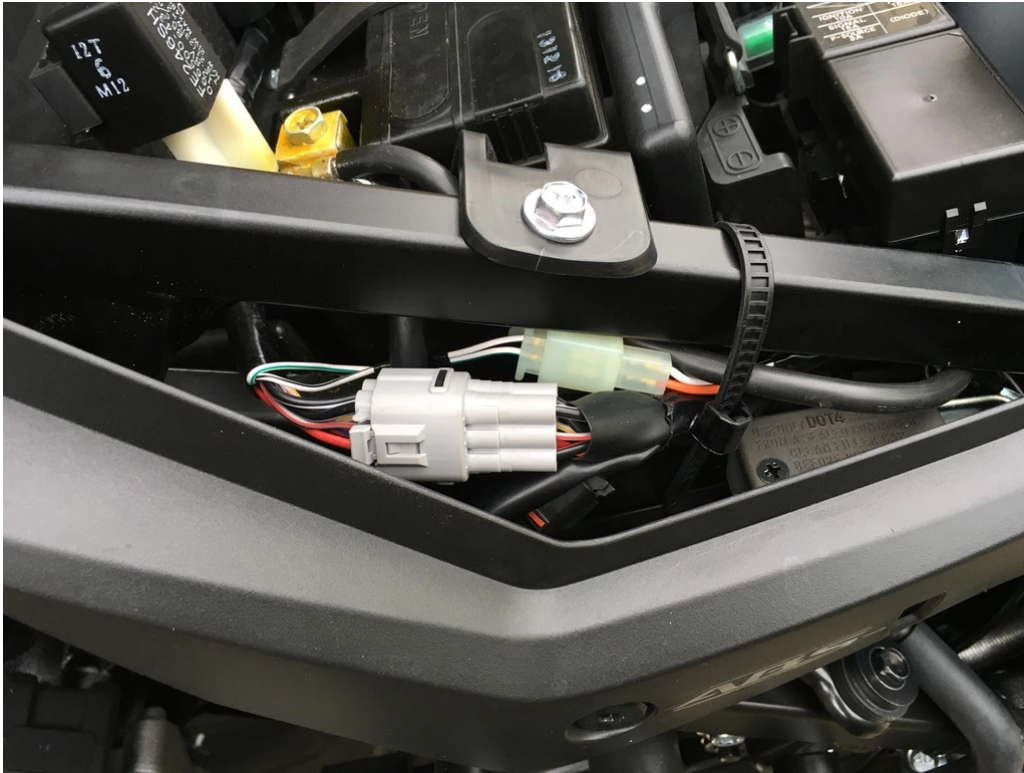

On the newest stacked headlight 1000s, it is right in front of the battery

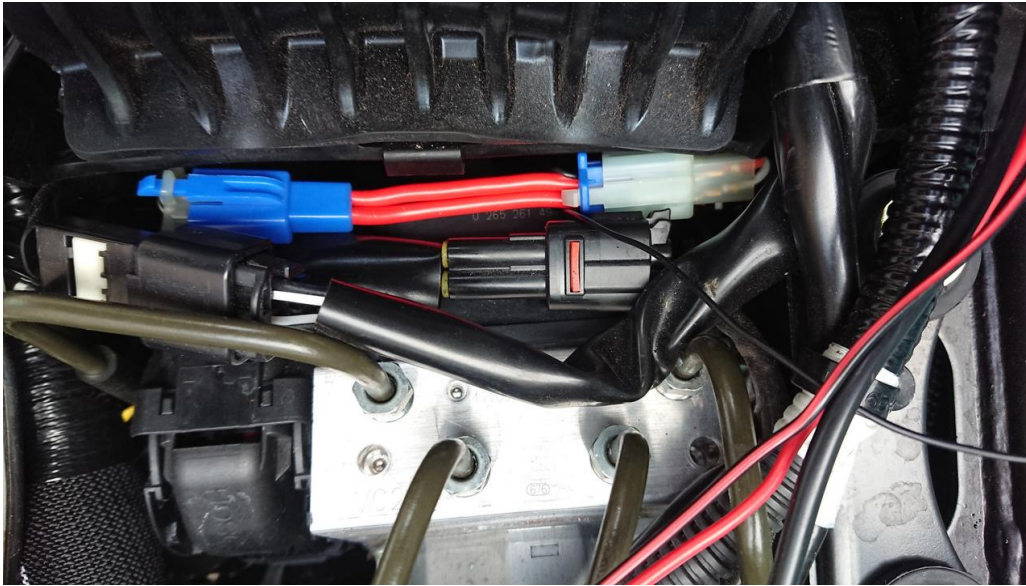

Adding accessories requires a small screwdriver, insert the correct fuse for the accessory in the corresponding slot and the accessory + and - into the screw terminal block.

