
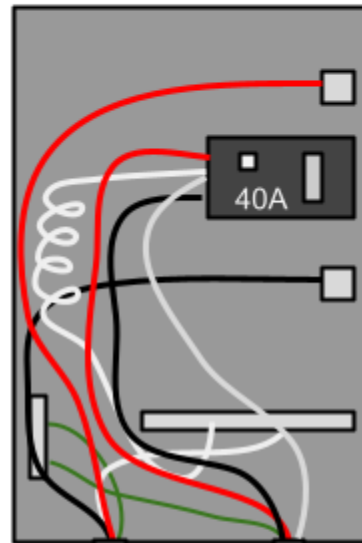


Sundance 240v requirements for full installation
Convertible Spa

GFCI Disconnect
Must be 5' away from spa

Main Panel

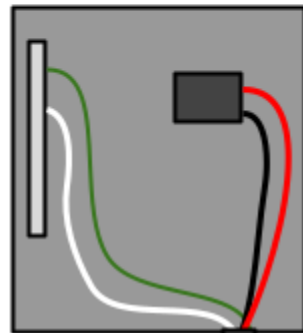


1" Conduit

3/4" Conduit

"Whip"

3/4" Liquidtight Flexible Conduit.

3x #8 Copper wires
1x #12 Copper wire

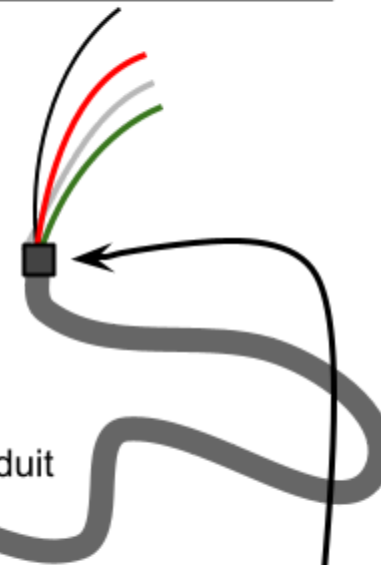

Examples of common locally available conduit.

Enter the spa with 3/4" size.

Leave enough "whip" to reach the spa controls, *extra is easy to cut, too little is just wrong.*

