

Golf cart bag bottom holder installation instructions


1. Unpack the collapsed assembly and lay out on a flat surface.



2. Rotate the left and right bag stops around the back bag stop to form 90° corners.



Note: the left and right bag stops will overlap the back bag stop as shown:

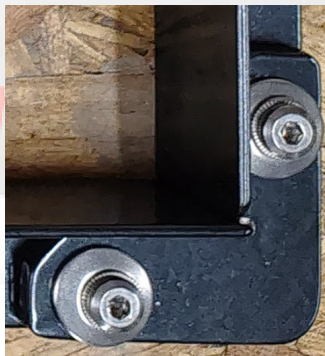

3. Tighten the (4) flat head hex socket cap screws to secure corners.
4. Align the center bag stop and secure with (1) flat head hex socket cap screw, (1) belleville spring disc washer and (1) fiber flat washer.



5. Center the assembled golf cart bag bottom holder on the cart's footrest.



6. Remove the backing from the neoprene rubber self adhesive strip and stick the strip under the front of the center bag stop.



Note: the rubber strip prevents bounce rattles.

7. Locate and mark the left and right stop mounting holes onto the footrest. Note: the assembly should be positioned so that the mounting holes are positioned over just the footrest treadplate, i.e.; there should be no other support or structure under the mounting holes.



8. Drill $\frac{3}{8}$ " thru holes at the mounting hole marks.



9. Secure the assembly by inserting (1) flat head hex socket cap screw, (1) belleville spring disc washer, and (1) fiber flat washer through the left and right stop mounting holes and the footrest.



10. On the under side of the footrest, install (1) nylon insert hex lock nut onto each inserted fastener.



11. Tighten both nylon insert hex lock nuts onto the flat head hex socket cap screws to finish the installation.



<https://cmbhggolf.com/>