



Thank you for your purchase and for Supporting our NonProfit Organization

In your box, you will have

- 4 3" Bolts**
- 1 4" Bolt**
- 5 Locking Nuts**
- 4 1.5" Spacers**
- 1 Double Stacked Spacer Block (Use Both Together)**

DO NOT THROW AWAY THE SHIPPING BOX. You will use it during installation on the clutch side of your bike when you unbolt your parking brake assembly. Please use the new bolts provided in the package; **do not** use the factory bolts.

Brake Side

Unbolt the 2 bolts holding your floorboard bracket to the frame. There are other bolts under, so please unbolt the correct two. (Picture on the Back) Place one spacer in the front with the one long Bolt and both spacer blocks together behind the bracket closest to the frame, and thread the bolts through. You will see a nipple on the spacer block; ensure it is lined up with the hole. Tighten everything down.

Clutch Side

On this side, you will have 3 bolts (Picture on the back), two of them are easy to see, the 3rd is hidden inside the bracket housing (picture on the back). Unbolt all 3 bolts and make sure to place the Parking Brake Bracket Assembly onto the shipping box; do not set it on the ground. Take 3 Spacers and place them behind the Bracket one at a time, and thread the bolts provided back in. Tighten everything down once all 3 bolts are threaded in.

Thank you again for your purchase and for helping our NonProfit.
With our Mission "Helping to Feed Our Community, One Ride at a Time"
Like us on Facebook @NinetySixersMC

Ninety Sixers Motorcycle Club Inc. NFP 501(c)3
NinetySixersNonProfit@gmail.com (708) 317-8296 @NinetySixersMC www.NinetySixersMC.org

Clutch Side Parking Brake Assembly




Leave this bolt in

Brake Side of Bike

Rear Floorboard Mount



Front Floorboard Mount

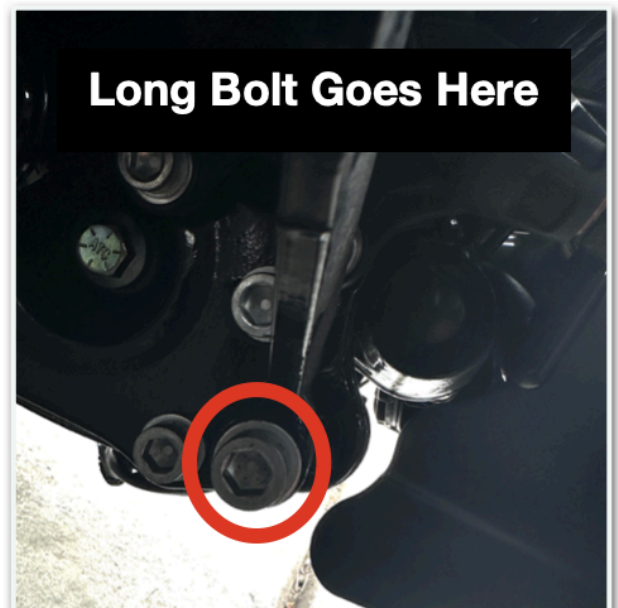

Long Bolt Goes Here