


Watkins 240v requirements for full installation.
(Sovereign, Prodigy, Jetsetter LX, Beam 240)

GFCI Disconnect

Must be 5' away from spa

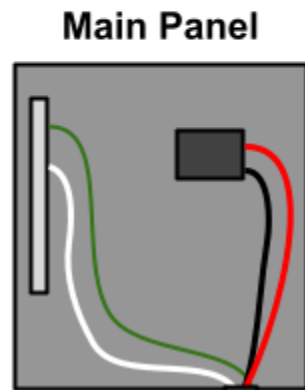


1" Conduit

"Whip"

3/4" Liquidtight Flexible Conduit.

3x #12 Copper Wires
2x #10 Copper Wires
1x #10 Copper Ground

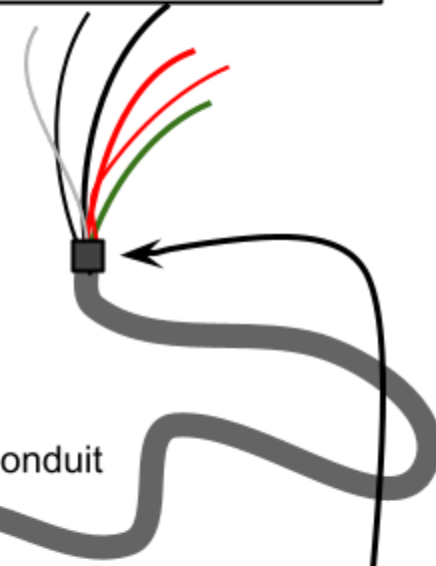

3/4" Conduit

Examples of common locally available conduit.

Enter the spa with 3/4" size.

Leave enough "whip" to reach the spa controls, *extra is easy to cut, too little is just wrong.*



Always use proper fittings, and leave one 3/4" fitting at the end of the whip.