




Thank you for purchasing SubieBros Mirror Turn Signals Plug and Play Harness! These instructions are a general guide of how to install the harness which will allow you to get turn signal power to either mirror cap turn signals or integrated mirror signals.

You will need to first remove the front door panels. Once they are removed, you will need to remove the mirror by loosening the three 10MM bolts holding them on. You will need to find the main harness that connects the mirror wiring harness to the chassis harness (pictured below) and disconnect it to remove the mirror assembly.

Once the assembly is removed and off of the car you will need to remove the mirror in order to feed the harness wire down the mirror assembly opening (follow the main wiring harness wire routing). Once the PnP harness wire is run and rescued you will need to use the below picture to plug the PnP harness into the back of the main harness connector (where the other mirror wires are inserted). The below guide is looking at the back of the connector where the other wires are inserted. You must insert them in the correct orientation or they will not “click” into place. Give the wires a light tug to make sure they are inserted correctly.

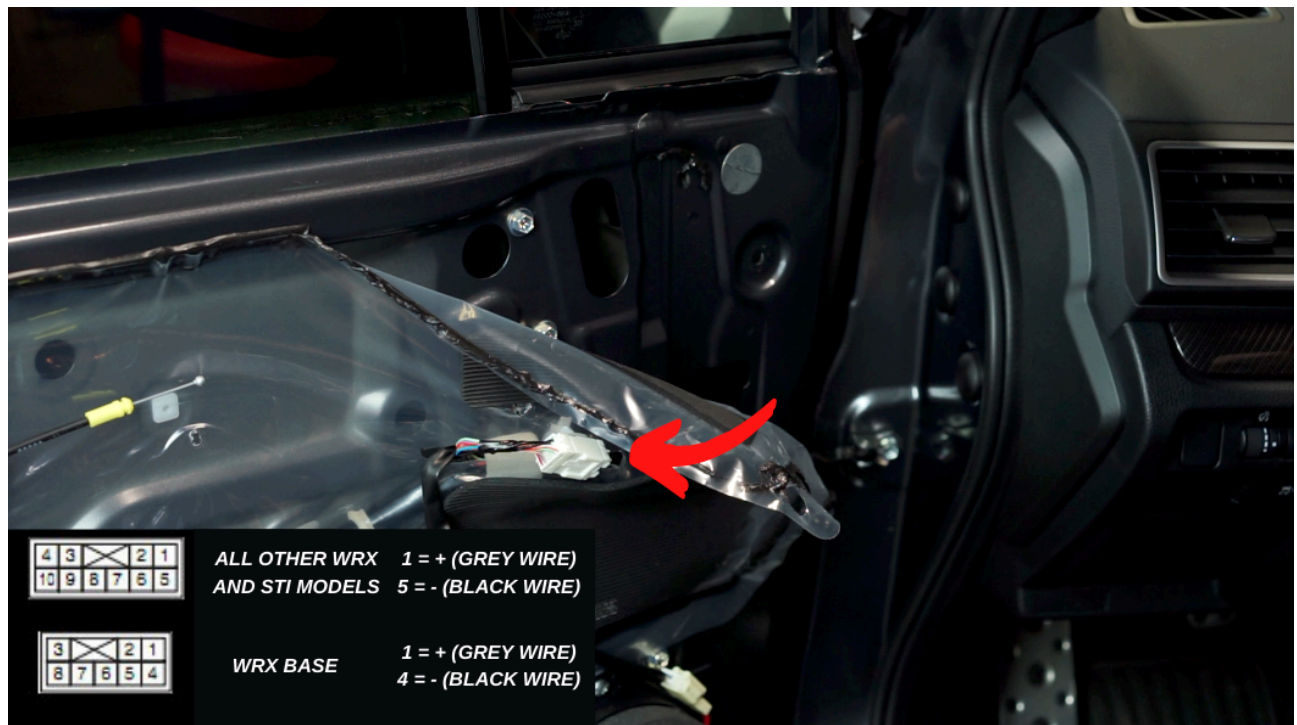

Note that the harness is marked “L” and “R” to designate the left (drivers side) and right (passenger side) harnesses.

Before you completely reassemble the vehicle make sure your signals work correctly.

Facebook: **[facebook.com/subiebro](https://www.facebook.com/subiebro)**

Instagram: **[@thesubiebro](https://www.instagram.com/subiebro)**

Our online store: **www.subiebro.com**