


MINI BIS

All-in-one installation instructions

For 18-19 year 6.5 inch screen(without touch) : MINI




PCB, Cables & Accessories :


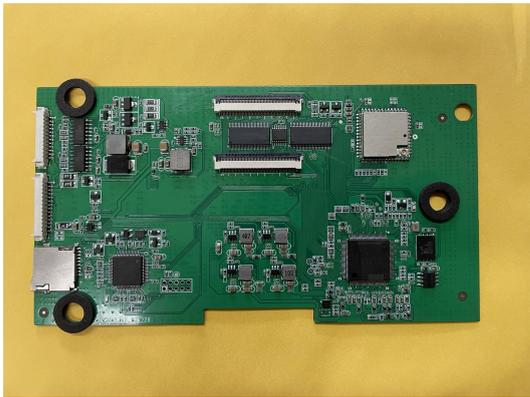
Name	accessories
	
PCBA	

Original Main Unit Parts


1, Remove the original shell, remove the original host screws (5+4)。

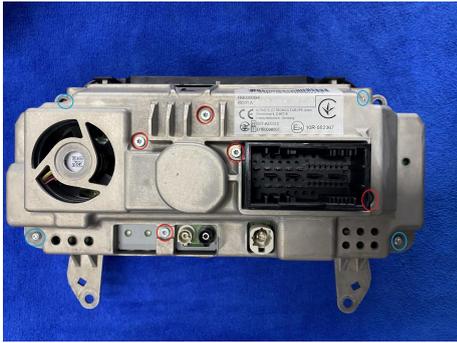

2. Remove the heatsink, power supply board, fan unit, and original PCB in order.

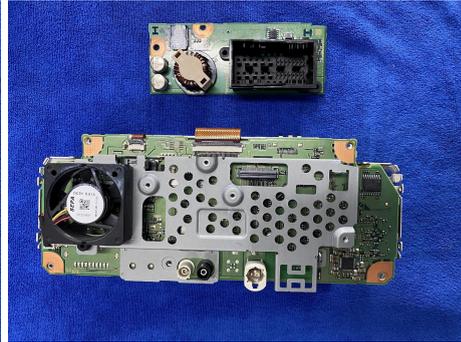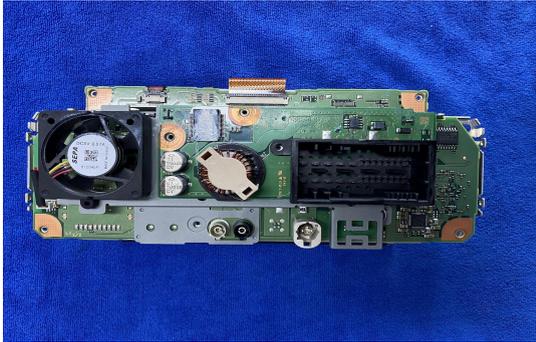


3. Remove metal casing.

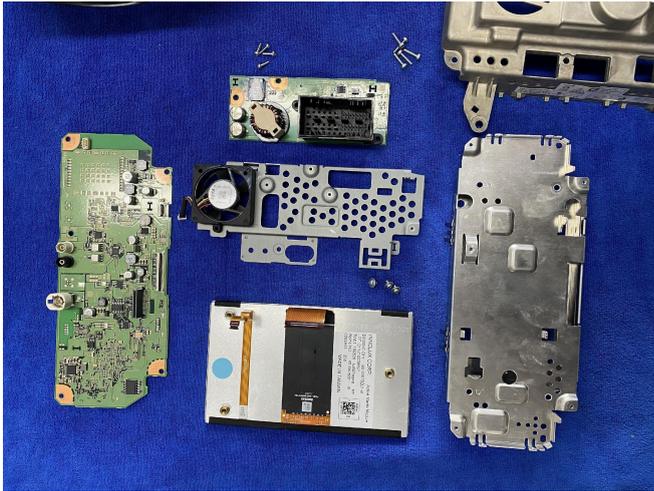


4, Install the PCBA and plug in the FPC cable and the original car wiring, fixed with adhesive tape。



5, Install the WIFI antenna and secure it with adhesive tape。

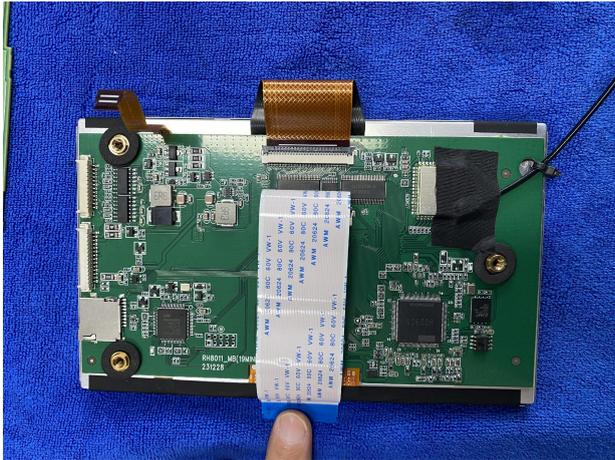



5, Put back the original metal case, pay attention to the FPC installation。

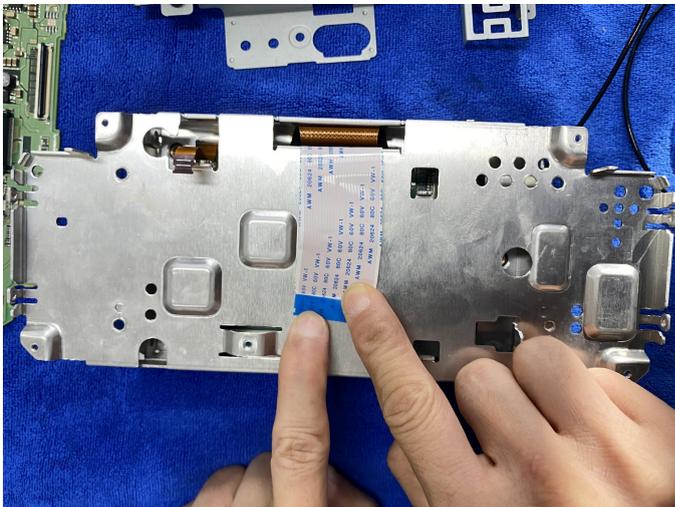


Put back the original PCB and plug in the FPC cable。





Install the fan, power supply board, and heatsink in turn. After installing, put back the original screws. Pay attention to the FPC cable when installing。

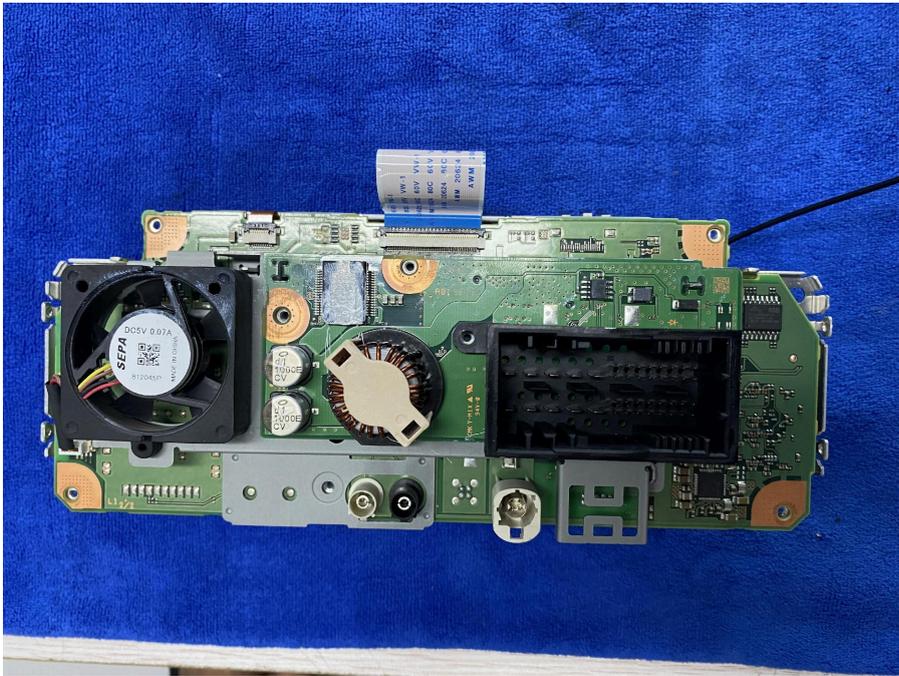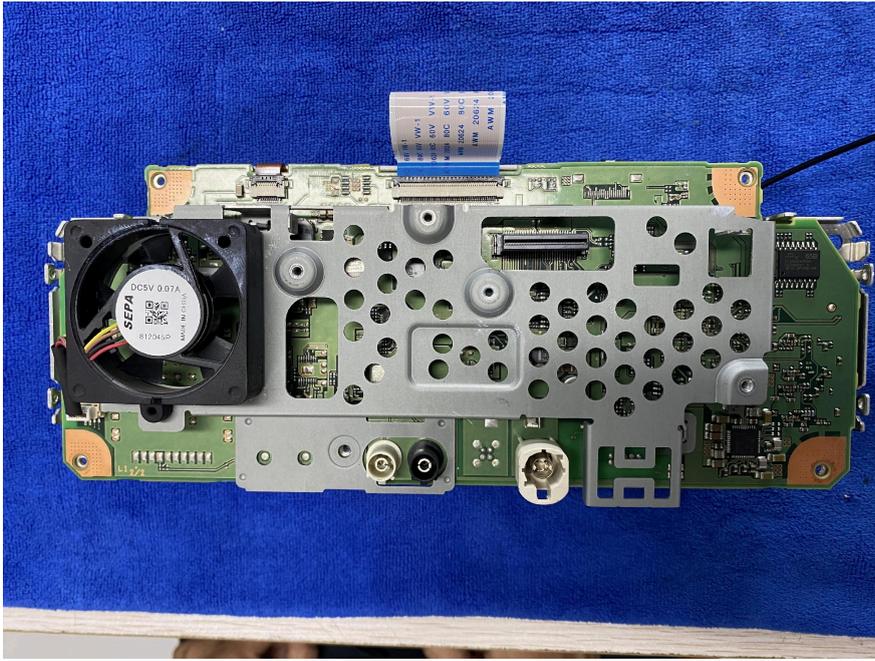

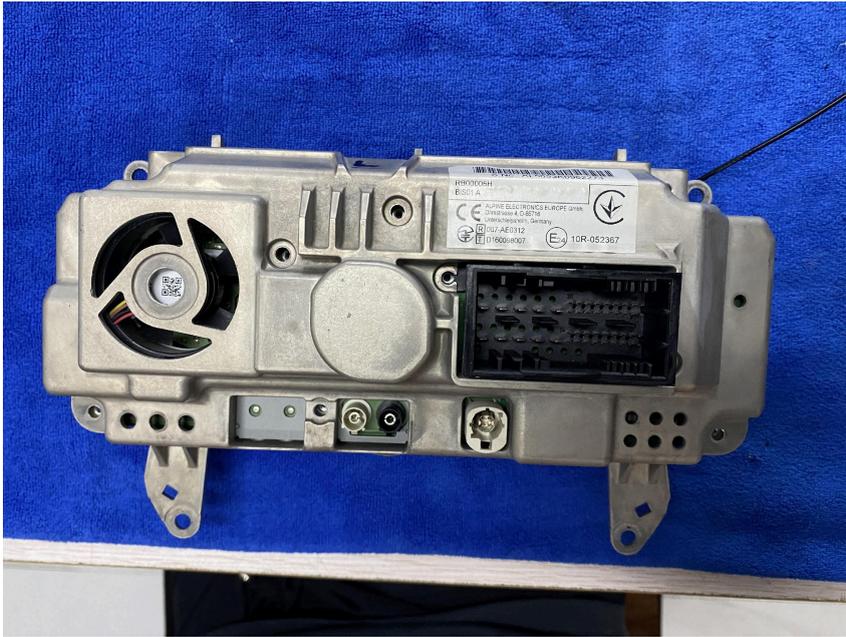

Plug in the power adapter cable, power cord, and USB cable. Snap back the original car shell.

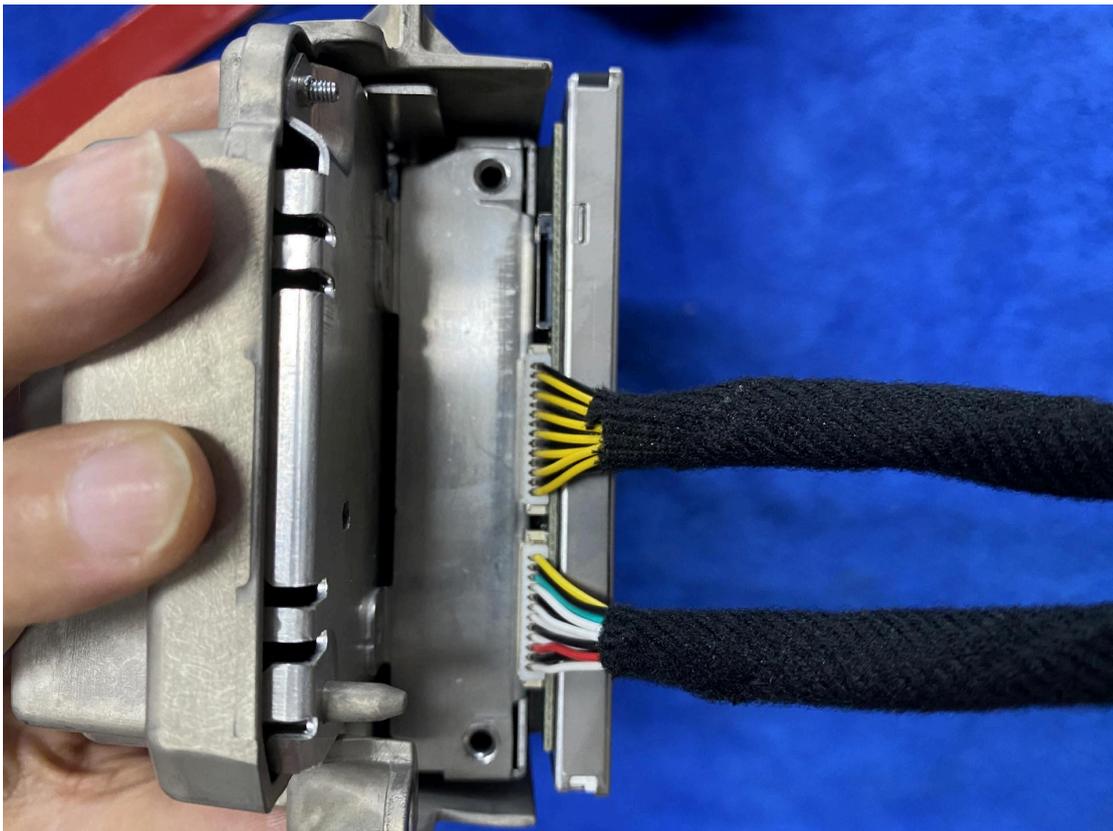

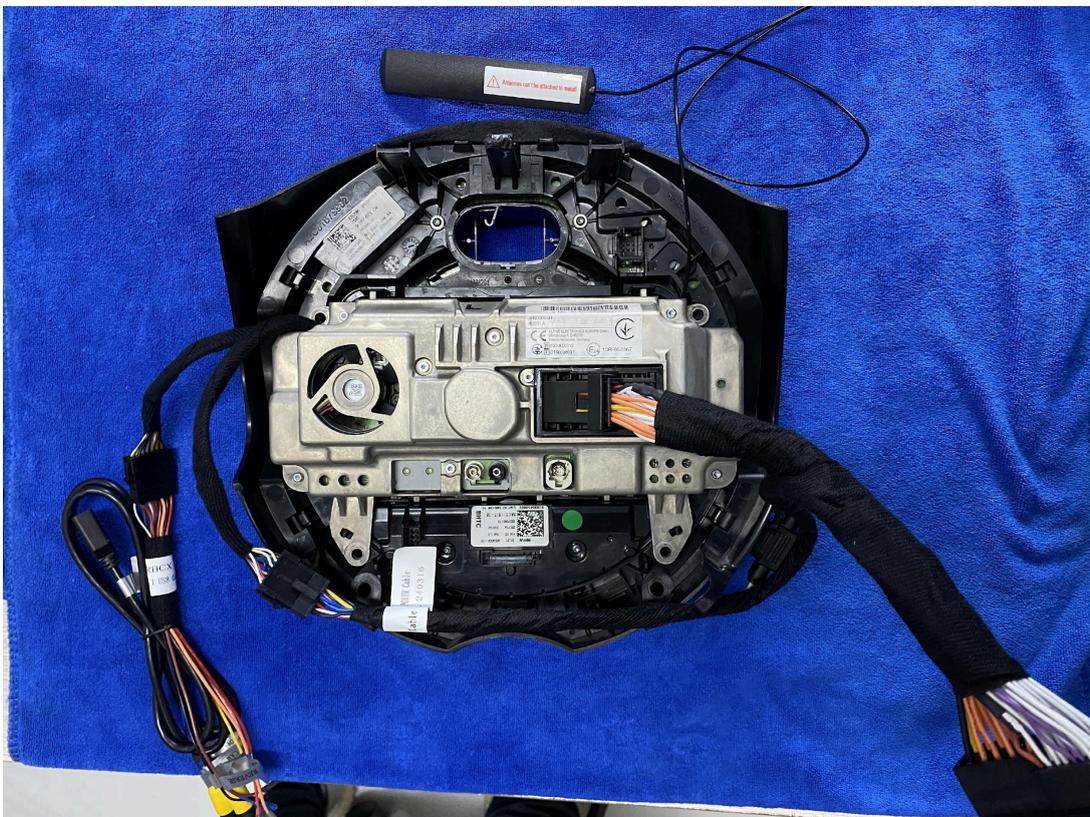

Note: 1, USB cable reserved to the passenger front storage. 2, WIFI antenna extension paste to the plastic, do not paste to the metals. 3. Use the original car Bluetooth call and Bluetooth audio. 4, long press the knob "BACK" to CP SYSTEM.

